


Installation, Operating and Maintenance

INSTRUCTIONS

for your new **PRECISION HONING MACHINE**



Automatic Size Control
Automatic / Zero Cycle Shutoff

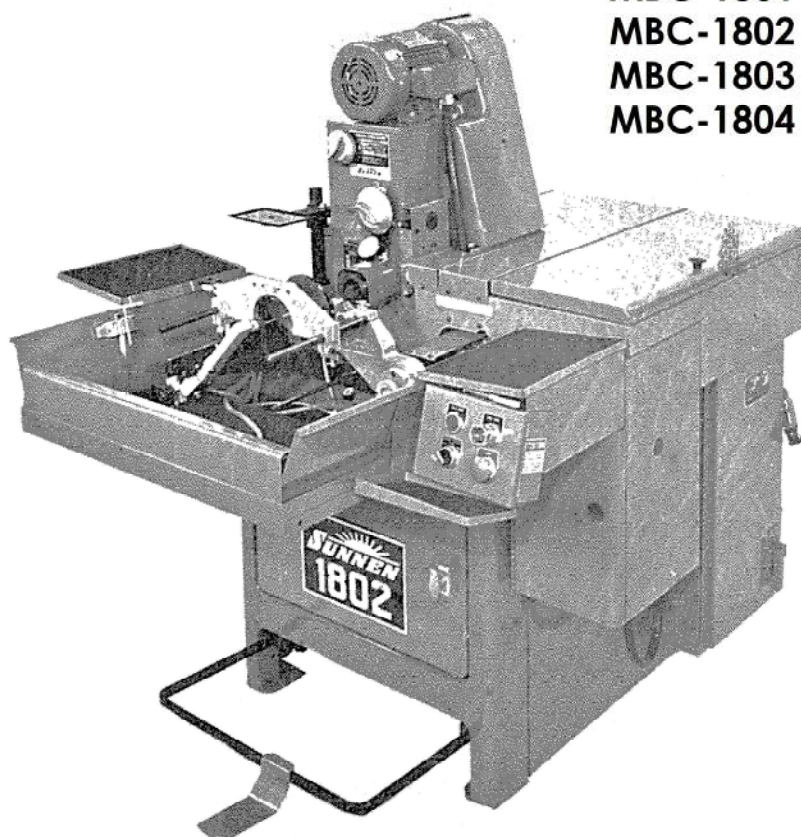

MBC-1801
MBC-1802
MBC-1803
MBC-1804

MBC-1801, MBC-1802

TABLE OF CONTENTS

	Page
I. Introduction	1
A. What is honing?	1
B. The MBC-1802	1
C. The MBC-1801	1
II. Installation Instructions	3
A. Install Machine	3
B. Connect Power Supply	3
C. Fill Honing Oil System	3
D. Install Left Hand Tray	4
E. Install Switch Station Drip Tray	4
F. Install Size Control Probe Body	5
III. Setup of the MBC-1801 and MBC-1802	6
A. Location and Function of Controls and Accessories	9
B. Setup	11
IV. Honing with the MBC-1801 and MBC-1802	31
A. How to Hone with the MBC-1801 and MBC-1802	31
B. Troubleshooting	40
V. Maintenance Instructions	43
A. Lubrication	43
B. Honing Oil System	45
C. Check Points for Proper Operation	50
D. Repair	66
VI. General Information	76
A. Good Honing Practices	76
B. Technical Data	77
C. Alteration of Honing Units	78
D. Glossary of Terms	81

MBC-1803, MBC-1804

TABLE OF CONTENTS

	Page
I. Introduction	1
A. What is honing?	1
B. The MBC-1804	1
C. The MBC-1803	1
II. Installation Instructions	3
A. Install Machine	3
B. Connect Power and Air Supply	3
C. Fill Honing Oil System	4
D. Install Left Hand Tray	5
E. Install Switch Station Drip Tray	5
F. Install Size Control Probe Body	5
III. Setup of the MBC-1803 and MBC-1804	7
A. Location and Function of Controls and Accessories	10
B. Setup	12
1. Setup Checklist	13
2. Setup Checklist (Pullout)	15
3. Detailed Setup Instructions	19
IV. Operating the MBC-1803 and MBC-1804	41
A. How to Hone with the MBC-1803 and MBC-1804	41
1. Manual Stroked Honing	42
2. Power Stroked Honing with Manual Cycle Start and Manual Cycle Stop	43
3. Power Stroked Honing with Manual Cycle Start and Zero Shutoff	45
4. Power Stroked Honing with Automatic Cycle Start and Zero Shutoff	46
5. Power Stroked Honing with Manual Cycle Start and Automatic Size Control	47
6. Power Stroked Honing with Automatic Cycle Start and Automatic Size Control	49
7. The Stone Saver	51
B. Troubleshooting	54
1. Operation Troubleshooting Guide	54
2. Troubleshooting the Automatic Size Control	55
3. Troubleshooting the Automatic Cycle Start (Air Actuated Pedal Depressor)	57

(Continued Next Page)

MBC-1803, MBC-1804
TABLE OF CONTENTS (cont'd.)


	Page
V. Maintenance Instructions	60
A. Lubrication	60
B. Honing Oil System	62
C. Check Points for Proper Operation	66
1. Feed Dial End Play	66
2. Honing Dial	66
3. Cutting Pressure Control	67
4. Oil System	70
5. Pedal Adjustment	71
6. Brake Operation	71
7. Motor Rotation	73
8. Timing of Stroking and Spindle Rotation	74
9. Safety Switch Adjustment	74
10. Adjustment of the Air Actuated Pedal Depressor	75
11. Zero Shutoff Adjustment	78
12. Automatic Cycle Stop Adjustment	79
13. Electrical Check Out of the Automatic Size Control	80
14. Calibrating the Rate Adjust Knob on the Automatic Size Control	84
15. Stroker Alignment	85
16. Faceplate/Spindle Axis Squaring	87
17. Brake Adjustment on Power Stroking Unit	88
D. Repair	88
1. To Replace Adjusting Nut Assembly	88
2. To Replace Spindle Bearings	89
3. To Replace Thrust Assembly	95
4. To Replace Spindle "V" Belt	96
5. To Replace Parts on the Air Actuated Pedal Depressor	96
VI. General Information	99
A. Good Honing Practices	99
B. Technical Data	100
C. Alteration of Honing Units	100
D. Glossary of Terms	104

REPAIR PARTS CATALOG FOR POWER-STROKED PRECISION HONING MACHINES

This Catalog Covers Models

MBC-1803

MBC-1804

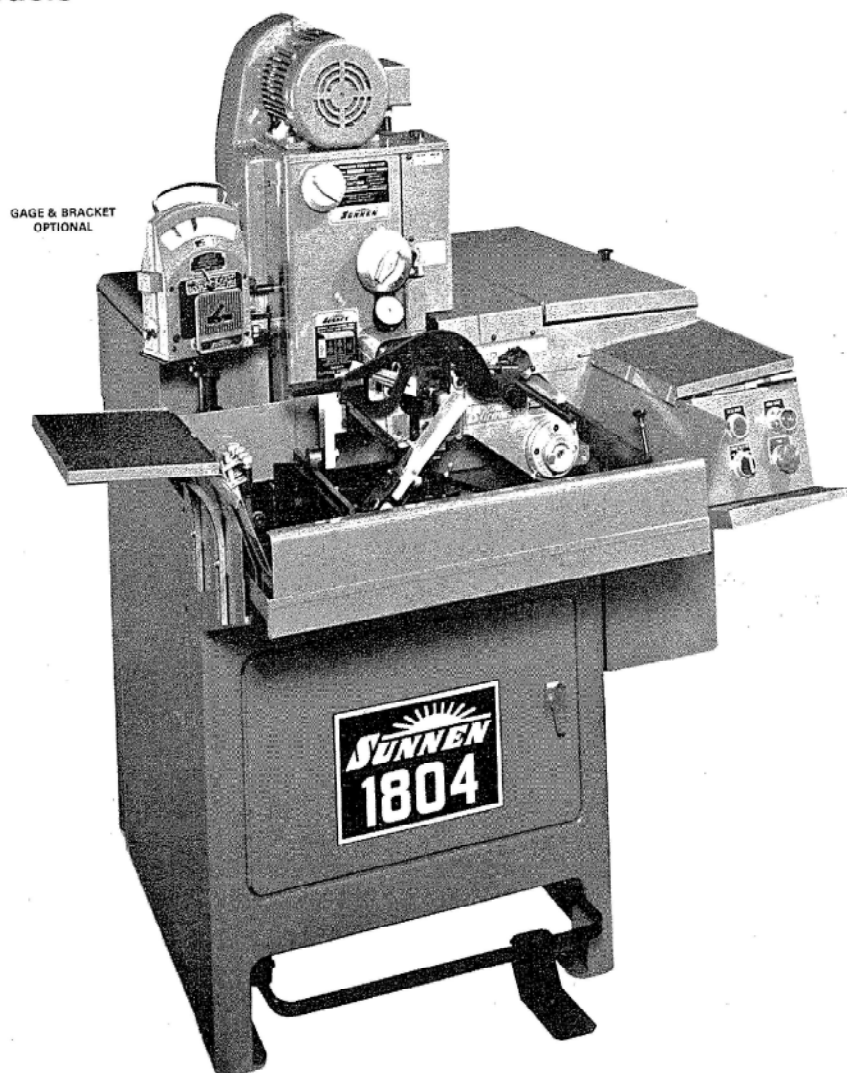

INTRODUCTION

Illustrations show all major components in exploded detail. Item numbers on each illustration are keyed to the corresponding parts list, providing a descriptive identification of each part.

The parts lists include assemblies as well as detail parts. Items listed without a part number can be obtained as a component of the complete assembly of which it is a part.

Standard hardware items are listed with complete descriptions. It is important to replace such an item with one having the same dimensions as the original. In some places brand names and part numbers are shown. These may change depending upon availability.

CONTENTS

NOTE: UNLESS OTHERWISE NOTED ALL PARTS ARE THE SAME FOR MBC-1803 & MBC-1804.

Section I Honing Machine Head

Honing Machine Head Assembly	Page 4
Honing Machine Head Assembly	Page 8
Automatic Shutoff	Page 12
Stone Saver Assembly	Page 14

Section II Honing Machine Base

Base, Filter, Pump & Oil Control Assembly	Page 18
Hypro Pump Parts, 1-1/2 GPM (After Serial #85300)	Page 22
Air Actuated Pedal Depressor	Page 24
Oil Reservoir Unit	Page 27
Foot Pedal Unit	Page 28
Drip Tray & Accessories	Page 30

Section III Power Stroker

Power Stroking Attachment	Page 32
Arm Assembly	Page 36
Tube & Shaft Assembly	Page 39
Cross Arm Assembly	Page 40

Section IV Electrical System

Automatic Size Control (MBC-1804)	Page 42
Control Panel	Page 44
Control Box	Page 47

Section IV Covers & Guards

Sheet Metal Covers & Related Hardware	Page 48
Belt Guard Assembly	Page 51