

OPERATION

AND

MAINTENANCE

MANUAL

ELEKTRA

infiniti

DRO


electronica

ELECTRONICA MECHATRONIC
SYSTEMS (INDIA) PVT. LIMITED.

Page Nos.

INDEX 1

INTRODUCTION 3

THE DRO

SPECIFICATIONS 4

THE FRONT PANEL 7

THE REAR PANEL 9

Chapter 1:

SETTING UP THE DRO

LINEAR MODE SELECTION 18

ANGULAR MODE SELECTION 28

Chapter 2:

BASIC FUNCTIONS

RESET MODE 34

SET A VALUE 35

ABS/INC MODE 38

RAD/DIA MODE 39

INCH/MM MODE 40

½ FUNCTION 41

PRESET FUNCTION 42

SETTING THE REFERENCE 45

Chapter 3:

SPECIAL FUNCTIONS

CIRCULAR BOLT HOLE FUNCTION	52
LINEAR BOLT HOLE FUNCTION	57
ANGLE HOLE FUNCTION	59
ARC FUNCTION	62
1000 STEP MEMORY FUNCTION	66
TOOL OFFSET FUNCTION	73
CENTRE FUNCTION	78
CALCULATOR FUNCTION	83

Chapter 4 :

SPECIAL FEATURES

SELECTABLE COUNTING DIRECTION	84
FLOATING NEGATIVE SIGN	84
NON-VOLATILE MEMORY	84
NEAR ZERO WARNING	84
KEY BOARD LOCK	84

Chapter 5:

OPTIONAL FEATURES

RS232 INTERFACE	85
SIX OUTPUT FUNCTION	94
PROBE INTERFACE	99

Chapter 6:

TROUBLESHOOTING

SELF DIAGNOSTIC MODE	100
GUIDELINES FOR TROUBLE SHOOTING	102
PIN CONNECTIONS	105
LIST OF RECOMMENDED SPARES	106