

NT-series

Support Tool

OPERATION MANUAL

OMRON

NT-series Support Tool Operation Manual

Produced July 1995

TABLE OF CONTENTS

SECTION 1

Setting Up the Support Tool	1
1-1 Preparing Equipment	2
1-1-1 Equipment to be Prepared	2
1-1-2 Before Starting Preparations	3
1-2 IBM PC/AT Preparations	4
1-2-1 Installation Method	4

SECTION 2

Basic Operations of the Support Tool	7
2-1 Starting Up and Exiting the Support Tool	8
2-1-1 Start-Up Procedure	8
2-1-2 Exit Procedure	9
2-2 Basic Operating Procedures	10
2-2-1 Cursors	10
2-2-2 Selecting Options	11
2-2-3 Using the Function Keys	11
2-2-4 Using the Mouse	12
2-2-5 Using Help Messages	15
2-2-6 Selecting Numbers and Codes	16

SECTION 3

Support Tool Operations	19
3-1 Using the Support Tool	20
3-2 Main Menu	21
3-3 "Tool Settings" Screen	22
3-4 "File List" Screen	26
3-5 "Scr list" Screen	31
3-5-1 Functions of the "Scr list" Screen	31
3-5-2 Setting Direct Connection Information	42

SECTION 4

Creating Screen Data	49
4-1 Initial Editing Screen and Basic Operations	51
4-1-1 Displaying the "Edit" Screen	51
4-1-2 Basic Operations on the "Edit" Screen	54
4-1-3 Environmental Settings (Tool Settings for the "Edit" Screen)	59
4-2 Common Setting Operations	61
4-2-1 Setting Character/Character-String Displays	61
4-2-2 Setting Numeral Displays	63
4-2-3 Specifying the Display Color (NT30C, NT610C Only)	66
4-2-4 Setting Numeral Memory Tables	68
4-2-5 Setting Character-String Memory Tables	70
4-2-6 Bit Memory Table Setting	72
4-2-7 Setting Words and Bits	75
4-2-8 Copying to the Next Input Field (Increment Copy)	77

4-2-9	Searching Within a Memory Table	78
4-2-10	Batch Changing Bits and Words	79
4-3	Creating Fixed Displays	80
4-3-1	Inputting Characters	80
4-3-2	Inputting Marks	82
4-3-3	Creating Polylines	84
4-3-4	Creating Squares	86
4-3-5	Creating Polygons	88
4-3-6	Creating Circles/Arcs	90
4-3-7	Creating Fans	92
4-3-8	Tiling	93
4-4	Setting Numeral Displays	96
4-4-1	Setting Numeral Displays	96
4-4-2	Modifying Numeral Displays	97
4-5	Setting Character-String Displays	98
4-5-1	Setting Character-String Displays	98
4-5-2	Modifying Character-String Displays	99
4-6	Setting Lamps	100
4-6-1	Setting Lamps	100
4-6-2	Modifying Lamps	104
4-7	Setting Touch Switches	105
4-7-1	Setting Touch Switches	106
4-7-2	Modifying Touch Switches	115
4-8	Creating Graphs	117
4-8-1	Setting Graphs	118
4-8-2	Modifying Graphs	126
4-9	Creating Input Settings	128
4-9-1	Creating Numeral Setting Input Fields	131
4-9-2	Creating Character-String Setting Input Fields (NT30, NT30C, NT610G, NT610C with Ver.3 or Later Only)	134
4-9-3	Setting Window Displays (NT30, NT30C, NT610G, NT610C with Ver.3 or Later Only)	135
4-9-4	Creating Numeric Keys	136
4-9-5	Modifying Numeral/Character-String Setting Input Fields	137
4-9-6	Changing Orders	139
4-10	Extended I/O Settings	140
4-11	Inputting Image and Library Data	141
4-12	Editing Memory Tables	143
4-13	Creating Alarm Lists/Histories	144
4-13-1	Setting Alarm Lists/Histories	145
4-13-2	Modifying Alarm Lists/Histories	147
4-14	Standalone Settings	149
4-15	Editing Screen Data	150

SECTION 5

Creating Marks, Images, and Library Data 159

5-1	Marks	160
5-1-1	Mark Creation Procedure	160
5-1-2	Mark Creation Screen	160
5-1-3	Mark Creation Functions	161

5-2	Images	164
5-2-1	Procedure for Image Creation	165
5-2-2	Image Editing Operations	166
5-3	Library Data	171
5-3-1	Procedure for Library Data Creation	171
5-3-2	Library Editing Operations	172
SECTION 6		
Printing Data		175
6-1-1	Things that can be Done Using the Data Printing Function	176
6-1-2	Printing from the "File Selection" Screen	178
6-1-3	Printing from the "Screen Selection" Screen	180
SECTION 7		
Data Communication		183
7-1	Preparation and Procedure for Data Communication with the PT	184
7-2	Transmitting Data	188
7-3	Receiving Data	190
7-3-1	Data Reception	190
7-3-2	Reception of Display History Records	192
APPENDICES		193
A.	Connecting Cable Specifications	193
	Tool Interface Connector Specifications	193
	Assembly of Connecting Cables	193
B.	Error Messages	195
C.	Special Characters	197