

WIRE-CUT EDM SYSTEMS



OPERATION

MITSUBISHI ELECTRIC CORPORATION ©

(2nd version)



CONTENTS

INTRODUCTION	1
1. POWER-ON AND WORKTABLE OPERATION	1 - 1
1.1 Power-On	1 - 1
1.2 Setting the Machine Zero Point	1 - 2
1.3 Moving the Worktable	1 - 3
1.4 Identifying the Current Position	1 - 8
2. CONTROL UNIT OPERATING PROCEDURE	2 - 1
2.1 Manual Data Input Positioning (MDI)	2 - 1
2.2 Positioning by the Manual Input Positioning Screen	2 - 6
2.3 Manual Mode Positioning	2 - 12
2.4 Oblique Edge Positioning of the Workpiece (Axis Rotation)	2 - 21
2.5 Coordinate Rotation	2 - 23
3. PREPARATION AND ADJUSTMENT	3 - 1
3.1 Bobbin Installation Procedures	3 - 1
3.2 Wire Setting	3 - 2
3.3 Wire Selection	3 - 4
3.4 Wire Tension Adjustment	3 - 6
3.5 Wire Feed Speed Setting	3 - 9
3.6 Perpendicular Setting Wire	3 - 11
4. DIELECTRIC FLUID	4 - 1
4.1 Dielectric Fluid Resistivity Adjustment	4 - 1
4.2 How to use rust preventive dielectric fluid and adjustment fluid for the Mitsubishi wire electric discharge machine	4 - 4
4.3 Adjusting Dielectric Fluid Flow	4 - 6
5. MACHINING CONDITION SELECTION	5 - 1
5.1 Machining Condition Selection	5 - 1
5.2 Machining Condition Terminology	5 - 2
5.3 Electrical Condition Selection	5 - 7

C Series

6.	TAPER CUT DEVICE	6 - 1
6.1	Taper Positioning	6 - 1
6.2	Upper Guide (Z3) and Lower Guide Span (Z4) Measurement	6 - 7
6.3	Setting Various Taper Cutting Dimensions	6 - 12
6.4	Taper Angle and Other Data Input	6 - 15
6.5	Figure Check	6 - 20
6.6	Angle +A or -A by Offset Direction	6 - 22
6.7	Machining Procedures	6 - 23
7.	GRAPHIC FUNCTIONS	7 - 1
7.1	Program Check	7 - 1
7.2	Partial Magnification Procedures	7 - 17
7.3	Other Functions	7 - 20
7.4	Position MNTR (Current position monitor)	7 - 22
7.5	Trace (Drawing Monitor)	7 - 24
7.6	Setting Screen	7 - 28
7.7	Power Failure Recovery (Option)	7 - 29
7.8	Message Table	7 - 30
7.9	Table of Graphically Simulated Functions	7 - 32
8.	TEST MACHINING	8 - 1
8.1	Workpiece Fixing and Parallel Adjustment	8 - 1
8.2	Setting the Upper Head Position During Machining	8 - 1
8.3	Machining Condition Setting Procedure (Adaptive Control: ON)	8 - 2
8.4	Machining Speed Setting Procedures (Adaptive control: OFF)	8 - 13
8.5	Determining the Offset Value	8 - 15
9.	NC TAPE MACHINING	9 - 1
9.1	Standard Machining Procedures	9 - 1
9.2	Figure Check	9 - 2
9.3	Wire and Workpiece Positioning	9 - 5
9.4	Machining Procedures	9 - 9
9.5	Machining Status Check	9 - 19
9.6	Stop during Machining	9 - 23

10.	MEMORY OPERATION MACHINING	10 - 1
10.1	NC Program Entry	10 - 1
10.2	Program Search	10 - 2
10.3	Standard Machining Procedure	10 - 6
10.4	Program Search by the USER SETTING Screen	10 - 6
10.5	Difference from by Tape Machining	10 - 7
10.6	NC Program Erasure	10 - 7
10.7	Disk Operation Machining	10 - 10
11.	APPLIED OPERATIONS	11 - 1
11.1	Power Failure Procedures	11 - 1
11.2	Remachining After Wire Breakage	11 - 3
11.3	Manual Motion Procedures for Multi-machining and Progressive Dies	11 - 16
11.4	MDI Machining (without NC tape)	11 - 22
11.5	Memory Editing Function	11 - 31
11.6	Machining Condition Program Control	11 - 44
11.7	Axis Parameter	11 - 58
11.8	Initial Hole Compensation Function	11 - 62
11.9	Multiple Coordinate Systems	11 - 64
11.10	3.5" Disk I/O Screen	11 - 69
12.	AUTOMATIC SECOND-CUT FUNCTION	12 - 1
12.1	Outline	12 - 1
12.2	Input Parameters	12 - 2
12.3	Output Parameters	12 - 6
12.4	Preparation of Automatic Second-cut Programs	12 - 8
12.5	NC Program Registration Procedures	12 - 23
12.6	Operation	12 - 26
12.7	Check and Change of Setting Conditions	12 - 43
12.8	Other Precautions	12 - 45
13.	REFERENCE	13 - 1
13.1	Parity Check Setting (Vertical parity)	13 - 1
13.2	Tape Search Procedure	13 - 2