



**VERTICAL MACHINING CENTER**

**F3/F5**

**INSTALLATION MANUAL**

**V1431I-I1E-XB**



1. Do not maintain, inspect or repair this machine before carefully reading and understanding this manual.
2. Store this manual in a clearly marked location for easy reference when maintaining, inspecting or repairing this machine.

**This machine, including technical data and software, may be subject to the Japanese Foreign Exchange and Foreign Trade Law. Prior to any re-sell, retransfer or re-export of controlled items, please contact Makino to obtain any required authorization or approval.**

## Contents

1. Introduction.....	5
1.1 Machine Characteristics .....	5
1.2 Components and Machine Function .....	5
2. Safety Precautions.....	6
2.1 Introduction.....	6
2.2 Danger, Warning, Caution Statements and Symbols .....	6
2.3 Installation Safety .....	9
3. Specifications .....	12
3.1 Introduction.....	12
3.2 Mechanical and Electrical Specification.....	13
3.3 Makino Professional 5 and Control Specifications.....	16
3.4 General View and Dimensional Drawings.....	19
3.5 Tooling Specification.....	30
4. Pre Installation Process .....	31
4.1 Introduction.....	31
4.2 Selecting the Machine Location.....	31
4.3 Foundation.....	33
4.4 Floor Plan and Marking.....	34
4.5 Power Supply and Cables .....	34
4.6 Transformer (Option) .....	36
4.7 Earthing/Grounding Preparations .....	37
4.8 Air Supply .....	37
4.9 Machine Handling Facilities .....	38
4.10 Service Facilities.....	38
4.11 Toolings and Fixtures .....	38
4.12 Coolant Requirements .....	55
4.13 Oil and Grease Requirements .....	55
4.14 Machine and Data server communication.....	56
4.15 Cables for direct connection to a computer without a network HUB .....	57
4.16 Installation Tooling Requirements (By FSE).....	58
4.17 Pre-Installation Checklist .....	60

5. Machine Delivery .....	64
5.1 Introduction.....	65
5.2 Container Layout .....	65
5.3 Inspect the Machine.....	66
5.4 Unloading Lifting and Moving .....	66
5.4.1 Lifting the Machine.....	66
5.4.2 Lifting the Front Coolant tank.....	69
5.4.3 Lifting the Chip Conveyor .....	70
5.4.4 Lifting the Rear tank.....	71
5.4.5 Lifting the Transformer.....	72
5.4.6 Machine Rolling .....	73
5.5 Initial Cleaning .....	75
5.6 Machine Packing list.....	75
6. Installation Process.....	76
6.1 Introduction.....	76
6.2 General Instructions .....	76
6.3 Installation Process .....	76
6.3.1 Installation of ATC covers.....	76
6.3.2 Installation of Spindle Oil Cooler.....	78
6.3.3 Installation of Transformer .....	84
6.3.4 Installation of Z axis motor.....	85
6.3.5 Installation of Z axis Cable chain .....	86
6.3.6 Installation of Air Dryer (Option) .....	87
6.4 Procedure for Machine Leveling .....	93
6.5 Installation Procedure for S Series Coolant tank .....	95
6.6 Installation Procedure for Rear coolant tank with chip bucket (option) .....	97
6.7 Installation Procedure for Rear coolant tank with hinge belt/scrapper Lift up chip conveyor .....	99