

Contents

Introduction _____ **IN**

Technical description _____ **T**

Machine parameters and commissioning _____ **C**

PLC-description _____ **P**

Chapter overview

	Section	Page
Technical data	T1	1
Hardware components	T2	1
Connections	T3	1
Dimensions	T4	1
Grounding plan	T5	1

Chapter overview

	Section	Page
Machine parameters	C1	1
General	C1	1
Edit protection	C1	1
User-parameters	C1	1
Entry values	C1	1
Categories	C1	4
Complete list	C1	5
Encoders and machine axes	C1	5
Positioning	C1	9
Operating and speed precontrol	C1	12
Operation with trailing error (lag)	C1	13
Spindle control	C1	14
Integral PLC	C1	16
Adaptation of data interface	C1	19
Measurement using the 3D touch probe system	C1	21
Tapping	C1	22
Display and programming	C1	23
Colour distribution for colour screen	C1	25
Machining and program run	C1	27
Hardware	C1	29

Chapter overview

	Section	Page
Introduction	P1	1
Operating modes	P2	1
Address and exit	P2	1
Deleting a program	P2	2
Transfer of program from EPROM	P2	2
Editing	P2	3
TRACE-function	P2	5
I/O/C/T/M-address	P2	5
TRACE START	P2	5
TRACE END	P2	6
TRACE-BUFFER DISPLAYS	P2	6
Tables I/O/C/T/M	P2	6
Program translation	P2	7
Operating mode "Utilisation"	P2	7
Transfer of program	P2	8
Commands	P3	1
Programming	P3	1
Command format	P3	1
Overview of operands	P3	2
Structure of PLC-processor	P3	3
Overview	P3	5
Logic sequences	P3	5
Arithmetical functions	P3	6
Logic comparisons	P3	7
Shift functions	P3	8
Bit manipulation	P3	8
Load commands	P3	9
Assignments	P3	10
Preset commands	P3	10
Jump commands	P3	11
Stack operations	P3	12
PLC-EPROM	P4	1
Memory structure	P4	1

Chapter overview

	Section	Page
Permanently assigned memory		
Markers	P5	1
Byte, Word, Doubleword	P5	20
Data transfer NC → PLC	P5	20
Data transfer PLC → NC	P5	21
Machine parameters	P5	23
Error messages		
Syntax errors within a command line	P6	1
Syntax errors related to program	P6	1
Timing errors	P6	2