

MITSUBISHI

WIRE-CUT EDM SYSTEMS

RA Series

INSTRUCTION MANUAL

BRN-60809-A

CONTENTS

CHAPTER 1 SYSTEM

CHAPTER 2 BASIC OPERATIONS

CHAPTER 3 APPLICATION OPERATION

CHAPTER 4 MACHINING TECHNOLOGY

CHAPTER 5 NC OPERATION DISPLAY SCREEN

CHAPTER 6 PROGRAMMING

CHAPTER 7 COMMUNICATION WITH EXTERNAL DEVICES

CHAPTER 8 MAINTENANCE AND ALARM LIST

CHAPTER 9 OPTION

CHAPTER 1 SYSTEM

CONTENTS

1. Configuration.....	1-1
2. Specifications.....	1-2
2.1 Machine Unit	1-2
2.2 Power Supply W21RA Specifications	1-2
2.2.1 Power supply section	1-2
2.2.2 Control unit section	1-3
3. Installation	1-5
3.1 Installation Layout	1-5
3.2 Installation Location.....	1-5
3.3 Power Supply	1-5
3.4 Dimensional Outline Drawing.....	1-7
3.5 Radio Frequency Interference Caused by Wire-Cut EDM System and Its Preventive Measures	1-9
3.5.1 Occurrence of radio frequency interference	1-9
3.5.2 Propagation route of radio frequency interference	1-10
3.5.3 Radio frequency interference caused by wire-cut EDM systems and installation conditions	1-10
3.5.4 How to prevent radio frequency interference.....	1-11
3.5.4.1 System installation location selection	1-11
3.5.4.2 Locating television receivers.....	1-11
3.5.4.3 Insulation cover for the working tank	1-12
3.5.4.4 Shielded room.....	1-12
3.5.4.5 Shielded room serving also as dustproof room (Constant temperature room)	1-16
3.5.4.6 Installation of line filter	1-18
3.5.5 Regulations related to radio frequency interference.....	1-20
3.6 Waste Fluid Treatment	1-20
4. Control System.....	1-21
4.1 Outline	1-21
4.2 System Configuration	1-22
5. Machine System	1-23
5.1 Names and Functions of Each Components	1-23
5.2 Mounting the Workpiece.....	1-23
5.3 Using Auxiliary Hose	1-25
5.4 Mechanical System Standard Accessories	1-25
6. Dielectric Fluid Reservoir.....	1-26
6.1 Major Component Names	1-26
6.2 Dielectric Fluid Reservoir Operation	1-28
6.2.1 Resistivity adjustment & operation.....	1-28
6.2.2 Water purifier (Ion exchange resin)	1-28
6.2.3 Replenishing dielectric fluid	1-29
6.2.4 Replacing filter element.....	1-29
6.2.5 Water drainage (Freeze prevention measure)	1-31

CHAPTER 2 BASIC OPERATIONS

CONTENTS

1. Starting the EDM	2-1
1.1 Starting the System	2-1
1.2 Machine Origin Setting Method.....	2-2
1.3 How to Thread the Wire	2-3
1.3.1 Initial setting of wire electrodes.....	2-3
2. General Operations Before Machining	2-6
2.1 Operating the Operation Panel.....	2-6
2.1.1 Lamps and operation keys	2-7
2.1.2 Basics of inputting data	2-11
2.1.2.1 Changing the screen.....	2-11
2.1.2.2 Using the overlap window	2-11
2.1.2.3 Inputting data	2-14
2.2 Manual Operation Box Functions	2-21
2.2.1 Axis movement functions	2-21
2.2.1.1 Moving the X axis and Y axis.....	2-21
2.2.1.2 Moving the U axis and V axis	2-21
2.2.1.3 Explanation of movement modes	2-21
2.2.1.4 List of speeds and movement amounts.....	2-22
2.2.2 Automatic positioning function.....	2-22
3. Starting Machining	2-23
3.1 Basic Machining Operations	2-24
3.1.1 Wire alignment	2-24
3.1.2 Workpiece setting and positioning.....	2-26
3.1.3 Upper nozzle and dielectric fluid flow rate adjustment	2-29
3.1.4 Settings for machining	2-30
3.1.4.1 Setting data required for machining.....	2-30
3.1.4.2 Machining with PM control.....	2-32
3.2 Taper Machining	2-40
3.2.1 Taper specifications.....	2-40
3.2.2 Setting specifications for taper machining	2-41
3.2.3 Settings for taper machining	2-43

CHAPTER 3 APPLICATION OPERATION

CONTENTS

1. Machining With Automatic Second Cut.....	3-1
1.1 How to Create a Numerical Control Program for Automatic Second Cut.....	3-1
1.1.1 Precautions.....	3-1
1.1.2 Sample programs	3-2
1.2 Settings for Machining.....	3-8
1.2.1 Precautions.....	3-8
1.2.2 Operation example	3-8
1.2.2.1 Single die shape	3-9
1.2.2.2 Multiple setup of die shape	3-11
1.2.2.3 Single die shape with cutting blade	3-14
1.2.2.4 Multiple setup of die shape with cutting blade	3-16
1.2.2.5 Single punch shape	3-19
1.2.2.6 Multiple setup punch shape.....	3-21
1.2.2.7 Plus-one machining of single die shape.....	3-23
1.2.2.8 Additional machining of single die shape.....	3-25
1.2.3 Confirming the machining shape.....	3-27

CHAPTER 4 MACHINING TECHNOLOGY

CONTENTS

1. Setting Machining Conditions	4-1
1.1 Names of Notches	4-1
1.2 E Pack, Offset Amount, Machining Speed (FA) Settings	4-2
2. Setting Machining Conditions for Different Wire Electrodes	4-3
2.1 Wire Electrode Materials	4-3
2.2 Wire Electrode Selection.....	4-3
2.3 Notch Setting and Wire Tension	4-5
2.4 Machining Condition Settings for Different Wire Electrode Diameters	4-6
2.5 Estimates of Machining Time per 1 Wire Bobbin	4-7
3. Machining Condition Settings for Different Workpieces	4-8
3.1 Machining Condition Settings for Different Workpieces	4-8
3.2 Notch Setting and Dielectric Fluid Resistivity	4-9
4. Increase of Machining Speed and Prevention of Wire Breakage	4-11
4.1 Precautions for Rough Machining	4-11
4.2 Machining Condition Settings for Stepped and Taper Machining	4-11
4.3 How to Apply Water When Starting Machining from an Edge Surface	4-12
4.4 Avoiding Wire Breakage Due to Trouble	4-13
5. Increasing Machining Accuracy	4-16
5.1 How to Do Test Machining.....	4-16
5.2 Number of Machining Operations as Related to Surface Roughness and Dimensional Accuracy	4-17
5.3 Adjustment of the Dielectric Fluid	4-18
5.4 How to Adjust Machining Conditions for Automatic 2nd Cut.....	4-19
5.5 Programming for the Random 2nd Cut	4-20
5.6 Effect of Machining Distortion on Accuracy	4-21
5.7 Heat Treatment of Workpieces	4-22
5.8 Machining Distortion in the Wire Electrical Discharge	4-23
6. How to Repeat Machining Manually when the Wire Breaks	4-25
6.1 How to Reconnect Wiring Manually.....	4-25
6.2 How to Repeat Machining Manually	4-27
7. Peripheral Technology	4-29
7.1 Tools and Jigs.....	4-29
7.2 Preventing Dielectric Fluid Splashing	4-31
7.3 How to Use Rust Preventive Fluid for the Mitsubishi Wire-cut Electric Discharge Machine....	4-33

CHAPTER 5 NC OPERATION DISPLAY SCREEN

CONTENTS

1. Setup	5-1
1.1 What is the WORKPIECE SETUP Screen?	5-1
1.2 Explanation of Each Menu	5-2
1.2.1 Positioning (POSITION SELECT)	5-2
1.2.2 Contact positioning (WKPC PICKUP)	5-4
1.2.2.1 Outline	5-4
1.2.2.2 Explanation of each positioning method	5-5
1.2.3 Coordinate preset (WORK OFFSET ORIG-NO)	5-15
1.2.4 Zero point (origin) return (ZP-RTN)	5-17
1.2.5 Wire alignment/Taper specifications (WIRE ALIGN/TAPER-Z)	5-19
1.2.5.1 ALIGN W/GAUGE	5-19
1.2.5.2 Electrical-discharge wire alignment/origin setting (ALIGN/SPARK/ORIGIN SET)	5-21
1.2.5.3 Setting the taper specifications (TAPER-Z)	5-24
1.2.6 Setting the Z axis gap (Z POSITION)	5-26
1.2.7 Soft limit (SOFT LIMIT)	5-28
2. E.S.P.E.R	5-31
2.1 What is the E.S.P.E.R Screen?	5-31
2.1.1 Outline	5-31
2.1.2 Machining data and checking data	5-31
2.1.3 Changing the pages	5-32
2.2 Searching for the Machining Conditions	5-33
2.2.1 Operation procedures	5-33
2.2.2 "SETTINGS/AUTO PG1" page	5-34
2.2.2.1 Explanation of menus	5-34
2.2.2.2 Explanation of setting items	5-34
2.2.3 "AUTO PG2" page	5-37
2.2.3.1 Explanation of menus	5-37
2.2.3.2 Explanation of setting items	5-37
2.2.3.3 Carrying out pitch movement with program	5-40
2.3 To Not Search for the Machining Conditions	5-41
2.3.1 Operation procedures	5-41
2.3.2 "SETTING/AUTO PG1" page	5-41
2.3.2.1 Explanation of menus	5-41
2.3.2.2 Explanation of setting items	5-41
2.4 "PARAMETERS" page	5-43
2.4.1 Explanation of menus	5-43
2.4.2 Explanation of setting items	5-43
2.5 "PROG. CHECK/EST. TIME" page	5-46
2.5.1 Outline	5-46
2.5.2 Explanation of screen displays	5-46
2.5.2.1 Graphics	5-46
2.5.2.2 Machining estimate	5-49

2.5.3	Main graphic operation procedures	5-50
2.5.4	Explanation of menus	5-51
2.5.5	Functions that can be simulated with graphic check	5-54
3.	Monitor	5-55
3.1	Outline	5-55
3.2	Explanation of Screens	5-55
3.2.1	Graphics and setting area	5-55
3.2.2	Machining results	5-57
3.2.3	Setting the parameters.....	5-58
3.3	Explanation of Menus.....	5-59
4.	Maintenance.....	5-60
4.1	Maintenance Information.....	5-60
4.1.1	Work inspection monitor	5-60
4.1.1.1	Outline.....	5-60
4.1.1.2	Explanation of setting items.....	5-60
4.1.2	Total Time of Machining Condition.....	5-62
4.1.3	AF maintenance guidance.....	5-63
4.2	Environment Settings (Preferences)	5-65
4.2.1	AWF function list	5-65
4.2.1.1	Outline	5-65
4.2.1.2	Explanation of each function	5-67
4.2.1.3	Examples of using AWF extension function according to state	5-91
4.2.2	List of various switches	5-95
4.2.2.1	Outline	5-95
4.2.2.2	Explanation of setting items.....	5-95
4.2.3	Environment Settings (Preferences)	5-101
4.2.3.1	Outline	5-101
4.2.3.2	Explanation of setting items.....	5-101
4.3	Management Information	5-104
4.3.1	Status record	5-104
4.3.1.1	Outline.....	5-104
4.3.1.2	Explanation of screens.....	5-104
4.3.2	VERSION	5-106
4.4	PITCH COMPE.....	5-107
5.	Overlap.....	5-109
5.1	E-PACK.....	5-109
5.1.1	Outline.....	5-109
5.1.2	Displaying an E-Pack.....	5-110
5.1.3	Setting/releasing the E-Pack edit lock	5-111
5.1.4	Editing data in an E-Pack.....	5-111
5.1.5	Creating an E-Pack.....	5-112
5.1.5.1	Creating a new E-Pack	5-112

5.1.5.2	Copying an existing E-Pack	5-112
5.1.5.3	Current E-Pack copy	5-112
5.1.6	Deleting an E-Pack	5-112
5.2	VARIABLE	5-113
5.2.1	Outline	5-113
5.2.2	Common variables	5-114
5.2.2.1	Displaying the common variables	5-114
5.2.2.2	Editing the common variables	5-115
5.2.2.3	List of common variables used with specific functions	5-116
5.2.3	Local variables	5-117
5.3	Program	5-120
5.3.1	Outline	5-120
5.3.2	Displaying a list of NC programs	5-121
5.3.3	Setting/releasing the NC program edit lock	5-123
5.3.4	Operating an NC program as a file	5-124
5.3.4.1	Replacing the file character strings	5-124
5.3.4.2	Copying a file	5-126
5.3.4.3	Deleting a file	5-126
5.3.5	Editing an NC program	5-127
5.3.5.1	Outline	5-127
5.3.5.2	Opening the NC program editing screen	5-128
5.3.5.3	Editing the NC program	5-129
5.3.5.4	Saving the NC program	5-130
5.3.5.5	Closing the NC program editing screen	5-130
5.4	POSITION	5-131
5.4.1	Explanation of screens	5-131
5.4.2	Explanation of each coordinate value	5-132
5.5	Data I/O functions	5-133
5.5.1	Outline	5-133
5.5.2	Starting data input/output	5-135
5.5.3	Canceling data input/output	5-135
5.5.4	Operating data on a 3.5-inch floppy disk	5-136
5.5.5	Communication parameters (RS-232 PARAM)	5-138
5.5.6	Data format	5-141
5.5.7	Methods for converting data between 64-bit machine and conventional machine, MEDIAPT and MS20 using an FLD	5-143
5.5.7.1	Formats usable with each series	5-143
5.5.7.2	64-bit machine $\longleftrightarrow$ 16-bit machine	5-143
5.5.7.3	64-bit machine $\longleftrightarrow$ 32-bit machine	5-144
5.5.7.4	64-bit machine $\longleftrightarrow$ MEDIAPT product	5-145
5.5.7.5	64-bit machine $\longleftrightarrow$ MS-20 (CAD/CAM)	5-146

CHAPTER 6 PROGRAMMING

CONTENTS

1. Introduction	6-1
2. Programming Procedure	6-2
3. Program Format	6-3
3.1 Program Codes	6-3
3.2 Program Format.....	6-3
3.2.1 Words and addresses	6-3
3.2.2 Block.....	6-3
3.2.3 Programs	6-4
3.2.4 NC Program Specification	6-4
3.3 Special Codes	6-4
3.3.1 EOB (;) code	6-4
3.3.2 EOR (%) code	6-4
3.3.3 Significant information interval (label-skip function)	6-4
3.3.4 Control out and control in comments (Putting comments)	6-4
3.3.5 Block delete	6-5
3.4 Input Setting Unit.....	6-5
3.5 Decimal Point.....	6-6
3.6 Address Command Format List	6-7
4. Program Number L.....	6-9
5. Coordinate System	6-11
5.1 Coordinate Terms X, Y, U, V, I, and J.....	6-11
5.1.1 Axial direction and axial signs.....	6-11
5.1.2 Maximum command values per unit of input setting	6-11
5.2 Program Coordinate System	6-11
5.3 Coordinate System Setting (G92).....	6-12
5.4 Position Command Procedure (G90, G91)	6-12
6. Move Command	6-14
6.1 Positioning and Rapid Traverse (G00)	6-14
6.2 Linear Interpolation (G01).....	6-15
6.3 Circular Interpolation (G02 and G03).....	6-16
6.3.1 I, J command circular interpolation.....	6-16
6.3.2 R designation circular interpolation (G02, G03)	6-17
6.3.3 Q designation circular interpolation	6-18
6.3.4 Helical arc interpolation (G02.1, G03.1 and G69)	6-19
6.4 Zero Point Return	6-20
6.4.1 Machine zero point, and 2nd, 3rd, and 4th zero points.....	6-20
6.4.2 Dog-type zero point return (G60).....	6-21
6.4.3 Zero point return (G28).....	6-21
6.4.4 Zero point return (2nd, 3rd, and 4th) (G48)	6-22
6.4.5 Zero verification (G27)	6-22
6.5 Dwell (G04)	6-23
7. Wire Diameter Compensation Function.....	6-24
7.1 Wire Diameter Compensation Function (G40, G41, G42)	6-24
7.1.1 Command format.....	6-24

7.1.2	Wire diameter compensation number ($H\Delta\Delta\Delta$)	6-24
7.1.3	Start and end of wire diameter compensation	6-25
7.2	Program Wire Diameter Compensation Amount Setting and Transfer (G43 (H1 =))	6-29
7.3	Corner Processing Modes (G88 and G89)	6-30
7.3.1	Intersection point calculation mode (G89)	6-30
7.3.2	Corner R mode (G88).....	6-45
7.4	Upper and Lower Identical R (G87), Upper and Lower Designation R (Q), and Center of Taper Plane (Z5) Designation (QI, QJ)	6-50
7.5	Undercutting Prevention by Wire Diameter Compensation (Interference check function)	6-57
7.5.1	Other alarms in dealing with interference blocks (errors).....	6-59
7.5.2	Conditions that validate the cutting prevention process (Interference check)	6-60
7.5.3	Limitations of interference checking by three-block advanced reading	6-63
7.5.4	Example of interference check function	6-63
7.5.5	"CMP ERROR CHECK" (interference stop) switch	6-64
8.	Machining Support Function	6-65
8.1	Edge Plane Positioning (G29).....	6-65
8.2	Hole Center Positioning (G30).....	6-67
8.3	Automatic Vertical Alignment (G78).....	6-69
8.4	Current Value Reading (G14).....	6-70
8.5	Reading and Writing of Time Data (G43.1, G44.1)	6-71
8.6	Soft Limit (G63, G64)	6-73
9.	Program Supporting Functions	6-74
9.1	Subprogram Control (G22 and G23).....	6-74
9.2	Figure Rotation (G22 and G23).....	6-79
9.3	Microjoint Function (G46)	6-80
9.4	G Command Mirror Image (G62, G51.1)	6-82
9.5	G Command X-Y Axis Exchange (G97).....	6-85
9.6	Adjustment of Wire Diameter Compensation (OFFSET) Content.....	6-87
9.7	Operation on Variables	6-88
9.7.1	Outline	6-88
9.7.2	Structure of variable operation mode	6-89
9.7.3	Variable function	6-90
9.7.4	Variable operation function of conventional compatibility mode	6-94
9.7.5	Variable type 2	6-96
9.8	External Output Commands	6-102
9.9	User Macro Function (G101 to G111, G200 to G202, G203, G65, G66, G66.1)	6-104
9.9.1	Operation instruction (G101 to G110)	6-104
9.9.2	3-point center calculation (G111)	6-107
9.9.3	Judgement branch instruction (G200 to G203)	6-108
9.9.4	Bit test (G203)	6-110
9.9.5	Macro simple call (G65).....	6-111
9.9.6	Macro modal access A (G66).....	6-115
9.9.7	Macro modal access B (G66.1).....	6-116
9.10	Control Commands	6-117

9.11	Corner Chamfering	6-120
9.12	Corner R	6-122
9.13	Linear Angle Command	6-123
9.14	Geometric Command	6-124
9.15	Approach Error Compensation	6-125
10.	Multiple Coordinate System Function (G53 to G59, G54.1 P00 to P99 and G43).....	6-128
10.1	Machine Coordinate System and Workpiece Coordinate.....	6-128
10.2	Setting Multiple Coordinate System by NC Program.....	6-128
10.3	Local Coordinate System Setting (G52)	6-136
11.	Preparatory Functions (G Code).....	6-138
12.	Feedrate Function (F)	6-141
12.1	Rapid Traverse Rate (G00).....	6-141
12.2	Machining Feedrate	6-141
12.3	Command Increments and Command Speed Range	6-141
12.4	F Command Related Items.....	6-141
13.	Miscellaneous Function (M Code).....	6-142
13.1	Miscellaneous Function List	6-142
13.2	Miscellaneous Function Explanation	6-143
13.2.1	Program stop (M00).....	6-143
13.2.2	Optional stop (M01)	6-143
13.2.3	Program end (M02 or M30)	6-144
13.2.4	External signal output (M60 to M69) (option)	6-144
13.2.5	Dielectric fluid preparation ON/OFF (M74, M75)	6-144
13.2.6	Dielectric fluid circulation ON/OFF (M76, M77)	6-144
13.2.7	Rapid filling up (M78).....	6-144
13.2.8	Dielectric fluid ON/OFF (M80, M81)	6-144
13.2.9	Automatic wire feeder control (M20, M21, M22 and M23).....	6-144
13.2.10	Wire feed ON/OFF (M82, M83)	6-145
13.2.11	Machining ON/OFF (M84, M85)	6-145
13.2.12	Dielectric fluid LOW/HIGH (M88, M89)	6-145
13.2.13	Adaptive control ON/OFF (M90, M91)	6-145
13.2.14	All stop (M93).....	6-145
13.2.15	Fluid level setting LOW/HIGH (M58, M59)	6-145
13.2.16	Automatic scrap treatment (M52)	6-146
13.2.17	Automatic work change (M53).....	6-146
13.2.18	PM mode selection (M101, M102, M103, M105).....	6-146
13.2.19	Machining speed adjustment (M106)	6-148
14.	Machining Conditions Selection E	6-149
14.1	Command Format	6-149
14.2	Package Change	6-149
15.	Coordinates Rotation Function; K (G05)	6-150
16.	Figure Magnification Setting Function; S (G51)	6-152
17.	Taper Angle Command Function; A.....	6-154
18.	Axis Rotation Setting Function.....	6-156

19. Execution Sequence for Simultaneous Commands of Graphic Scale and Coordinate Rotate.....	6-157
20. Upper and Lower Optional Shape Programming.....	6-158
20.1 Move Path for Intersection Point Calculation Mode (G89).....	6-158
20.2 Move Path for Corner R Mode (G88).....	6-159
20.3 Precautions for the Upper Lower Random Shape Program.....	6-160

CHAPTER 7 COMMUNICATION WITH EXTERNAL DEVICES

CONTENTS

1. Communication between Control Unit and External Device Using RS-232-C	7-1
1.1 Communication Outline	7-1
1.2 Communication by Code Control Method (DC1 and DC3 Methods)	7-1
1.2.1 Control unit side data reception (Control code method)	7-2
1.2.2 Control unit side data transmission (Control code method)	7-2
1.3 Communication by Code Control Method (DC1 and DC3 Method + DC2 and DC4)	7-3
1.4 Data Transmission and Signal Flow by the Control Unit	7-4
1.5 Communication by Line Control (RS-CS Control) Method.....	7-5
1.6 Communication by Protocol Control (DC1, DC3 Control)	7-5
1.7 Transmission Method	7-6
1.8 Codes	7-6
1.9 NC Tape Format.....	7-7
1.10 Signals	7-8
1.11 Connector and Pin Arrangement	7-9
1.12 Interface.....	7-10

CHAPTER 8 MAINTENANCE AND ALARM LIST

CONTENTS

I. Precautions for Maintenance and Inspection	I
II. Measures for Faults and Abnormalities	II
III. Prohibition of Modifications	II
 1. Maintenance and Inspection Items	 8-1
2. Maintenance and Inspection Method	8-2
2.1 Daily Inspection and Before-Operation Inspection	8-2
2.1.1 Confirmation of wire route	8-2
2.1.2 Inspection of nozzles	8-2
2.1.3 Confirmation of dielectric fluid	8-2
2.1.4 Confirmation of dielectric fluid specific resistivity.....	8-3
2.1.5 Cleaning of working tank	8-3
2.1.6 Confirmation of machining position	8-4
2.1.7 Inspection of wire collection section	8-5
2.1.8 Oiling.....	8-6
2.2 Weekly Inspection	8-7
2.2.1 Maintenance and inspection of lower roller section	8-7
2.2.2 Maintenance and inspection of the wire guide.....	8-8
2.3 Monthly Inspection	8-11
2.3.1 Inspection of wire-alignment device	8-11
2.3.2 Cleaning of flowmeter	8-11
2.4 6-month Inspection	8-12
2.4.1 Inspection of floppy disk unit	8-12
2.5 Miscellaneous	8-13
3. Maintenance and Inspection of Dielectric Fluid Reservoir	8-14
3.1 Dielectric Fluid Reservoir Maintenance and Inspection Items	8-14
3.1.1 Replenishment of dielectric fluid	8-14
3.1.2 Inspection of filter pressure	8-14
3.1.3 Inspection of the supply pump.....	8-14
3.1.4 Cleaning of specific resistivity sensor.....	8-14
3.1.5 Replacement of water purifier (ion exchange resin).....	8-15
3.1.6 Cleaning the constant flow valve	8-16
4. List of Alarms	8-17
4.1 Operation Alarms.....	8-17
4.2 Alarms Concerning PLC (Programmable Logic Controller).....	8-21
4.3 Operation Alarms.....	8-25
4.4 Stop Alarms.....	8-27
4.5 Servo Alarms.....	8-32
4.6 MCP Alarms.....	8-42
4.7 Other Servo Alarms	8-44
4.8 Program Alarms	8-45
4.9 System Alarms	8-53
5. List of Consumables.....	8-55
6. Reference Information on Wire Electrodes	8-56

CHAPTER 9 OPTION

1 Dielectric Fluid Temperature Control Unit

CONTENTS

1. Introduction	9-1
2. Specifications	9-1
3. Configuration	9-2
4. Handling	9-3
5. Installation of Unit Cooler Outside a Constant Temperature Room	9-3