

MAINTENANCE MANUAL

**CNC LATHE
SL-25**

MORI SEIKI

MM-SL25-9E

SL-25

MAINTENANCE MANUAL

IMPORTANT

Before using your Mori Seiki SL-25 NC lathe for the first time, this Manual should be read carefully. It is especially important that the WARNINGS contained in this Manual be thoroughly understood.

This Manual should be kept in a safe place where it is always easily accessible during operations of your Mori Seiki SL-25 NC lathe.

MORI SEIKI CO., LTD.

TABLE OF CONTENTS

A. SPECIFICATIONS AND EFFECTIVE MOVEMENT RANGES

1. MACHINE SPECIFICATIONS	1
2. RATING	7
3. SPINDLE SPEED VS. OUTPUT PERFORMANCE	8
4. EFFECTIVE MOVEMENT RANGES	14
5. TURRET INTERFERENCE DIAGRAMS	25
6. WINDOW GLASS OF FRONT DOOR	35

B. INSTALLATION

1. OVERALL VIEW	1
2. INSTALLATION SITE	7
3. INPUT POWER	7
4. GROUNDING	8
5. POWER CAPACITY SPECIFICATIONS	9
6. HOISTING THE SL-25	13
7. INSTALLATION CONFIGURATION	14
8. LEVELING THE SL-25	24
9. INSTALLATION CHECKPOINTS	27

C. LUBRICATION

1. STANDARD LUBRICANT	1
2. OTHER RECOMMENDED LUBRICANTS	2
3. STARTING CHECK TABLE	3
4. SPINDLE	4
5. TURRET	5
6. COOLANT	6
7. CHUCK	7
8. SLIDEWAY LUBRICATION PUMP (Volume type system)	9

9.	CONSUMPTION OF LUBRICANT	24
D. ELECTRICAL COMPONENTS AND SWITCHES		
1.	FUNCTIONAL TESTS OF MAJOR ELECTRICAL COMPONENTS	1
E. HYDRAULIC UNIT		
1.	HYDRAULIC UNIT	1
2.	HYDRAULIC PRESSURE ADJUSTMENT	8
3.	HYDRAULIC FLUID: SUPPLY AND QUANTITY	9
4.	HYDRAULIC FLUID CHANGE (EVERY 6 MONTHS)	9
5.	REPLACING THE PRESSURE ADJUSTMENT OF SOLENOID COIL AND VALVE	10
6.	DISASSEMBLING THE PUMP MOTOR	15
F. TOOLING MANUAL		
1.	CAUTIONS FOR MOUNTING TOOL HOLDERS	1
2.	TOOLING SYSTEM	4
3.	CONFIGURATION OF THE TOOL MOUNTING AREA	6
4.	STANDARD CUTTING TOOLS	7
5.	MOUNTING O.D. CUTTING AND FACING TOOLS	9
6.	CUTTING OIL DISCHARGE SYSTEM	10
7.	CUTTING TOOL OVERHANG	11
8.	TOOL HOLDERS	12
9.	SLEEVES	16
G. THE TURRET		
1.	THE INDEXING MECHANISM	1
2.	RE-CENTERING THE TURRET	4
3.	INDEXING SEQUENCE OF THE TURRET HEAD	8
4.	RESETTING THE REFERENCE POINT	14

H. CHUCKS AND CYLINDERS

1.	CAUTIONARY NOTES	1
2.	MOUNTING THE CHUCK	5
3.	MAIN SPINDLE NOSE	9
4.	CHUCK AND CYLINDER COMBINATION TABLE	12
5.	CHUCK	14
6.	CYLINDER	19
7.	CYLINDER CHUCK CONNECTOR	23
8.	CYLINDER ADAPTER	25
9.	INTERMEDIATE ADAPTER	27
10.	SOFT JAW	28

I. THE TAILSTOCK

1.	CONFIGURATION	1
2.	ADJUSTING THE TAILSTOCK	3
3.	ADJUSTING THE TAILSTOCK MOVEMENT	5
4.	ADJUSTING THE TENSION OF THE DRIVE BELTS	8
5.	THE IS8 DISK BRAKE	10

A. SPECIFICATIONS AND
EFFECTIVE MOVEMENT
RANGES

CONTENTS

1. MACHINE SPECIFICATIONS	1
2. RATING	7
3. SPINDLE SPEED VS. OUTPUT PERFORMANCE	8
3.1 SL-25A FANUC	8
3.2 SL-25A YASNAC	8
3.3 SL-25B FANUC	9
3.4 SL-25B YASNAC	9
3.5 SL-25A Power up	10
3.6 SL-25B Power up	10
3.7 SL-25B Special MODEL 40P	11
3.8 SL-25B Special MODEL 40P	11
3.9 SL-25A Power up + 2700 rpm	12
3.10 SL-25B 2500 rpm	12
3.11 SL-25M/MC rotary tool (standard type)	13
3.12 SL-25M/MC rotary tool (high speed type)	13
4. EFFECTIVE MOVEMENT RANGES	14
4.1 Effective movement range for SL-25/500 standard type	14
4.2 Effective movement range for SL-25/1000 standard type ...	15
4.3 Effective movement range for SL-25/500 quick changing turret type	16
4.4 Effective movement range for SL-25/1000 quick changing turret type	17
4.5 Effective movement range for SL-25/500 by the use of the holder for SL-3	18
4.6 Effective movement range for SL-25/1000 by the use of the holder for SL-3	19
4.7 SL-25/1000 steady rest stroke diagram	20
4.8 Effective movement range for SL-25M, MC/500 standard turret type	21
4.9 Effective movement range for SL-25M, MC/1000 standard turret type	22
4.10 Effective movement ranges for SL-25M, MC/500 quick changing turret type	23
4.11 Effective movement ranges for SL-25M, MC/1000 quick changing turret type	24
5. TURRET INTERFERENCE DIAGRAMS	25
5.1 Turret interference diagram for standard type turret (12 stations)	25
5.2 Turret interference diagram for standard type turret (10 stations)	26
5.3 Turret interference diagram for quick changing type turret (12 stations)	27
5.4 Turret interference diagram for quick changing type turret (10 stations)	28
5.5 Turret interference diagram for SL-25 by the use of the holder for SL-3 (12 stations)	29
5.6 Turret interference diagram for SL-25 by the use of the holder for SL-3 (10 stations)	30
5.7 Turret interference diagram for SL-25M, MC standard type turret (12 stations)	31

5.8	Turret interference diagram for SL-25M, MC standard type turret (10 stations)	32
5.9	Turret interference diagram for SL-25M, MC quick changing type turret (12 stations)	33
5.10	Turret interference diagram for SL-25M, MC quick changing type turret (10 stations)	34
6.	WINDOW GLASS OF FRONT DOOR	35

B. INSTALLATION

CONTENTS

1. OVERALL VIEW	1
1.1 SL-25/500 chip conveyor discharge to right	1
1.2 SL-25/1000 chip conveyor discharge to right	2
1.3 SL-25/500 chip conveyor discharge to rear	3
1.4 SL-25M, MC/500 chip conveyor discharge to right	4
1.5 SL-25M, MC/1000 chip conveyor discharge to right	5
1.6 SL-25M, MC/500 chip conveyor discharge to rear	6
2. INSTALLATION SITE	7
3. INPUT POWER	7
4. GROUNDING	8
5. POWER CAPACITY SPECIFICATIONS	9
5.1 Installation precautions	11
5.2 Before turning power on	11
5.3 After turning power on	12
6. HOISTING THE SL-25	13
7. INSTALLATION CONFIGURATION	14
7.1 Installation configuration for SL-25/500 (chip conveyor discharge to right)	14
7.2 Installation configuration for SL-25/1000 (chip conveyor discharge to right)	15
7.3 Installation configuration for SL-25/500 (chip conveyor discharge to rear)	16
7.4 Installation configuration for SL-25M, MC/500 (chip conveyor discharge to right)	17
7.5 Installation configuration for SL-25M, MC/1000 (chip conveyor discharge to right)	18
7.6 Installation configuration for SL-25M, MC/500 (chip conveyor discharge to rear)	19
7.7 Mounting position of fixing brackets	20
7.8 SL-25/500 foundation diagram (chip conveyor discharge to right)	21
7.9 SL-25/1000 foundation diagram (chip conveyor discharge to right)	22
7.10 SL-25/500 foundation diagram (chip conveyor discharge to rear)	23
8. LEVELING THE SL-25	24
9. INSTALLATION CHECKPOINTS	27

C. LUBRICATION

CONTENTS

1. STANDARD LUBRICANT	1
2. OTHER RECOMMENDED LUBRICANTS	2
3. STARTING CHECK TABLE	3
3.1 Starting check table	3
3.2 Annual check table	3
4. SPINDLE	4
5. TURRET	5
6. COOLANT	6
7. CHUCK	7
7.1 Chip and coolant collector (for hollow cylinders).....	8
8. SLIDEWAY LUBRICATION PUMP	
(Volume type system)	9
8.1 Overview	9
8.2 Specifications	10
8.3 Internal configuration and circuit diagram	11
8.4 Explanation of operations of each part	
of the lubrication pump	12
8.5 Maintenance and countermeasures	15
8.6 Distributor (Destar plunger Model DPB)	16
8.6.1 Model coding	16
8.6.2 Specifications	17
8.6.3 Model DPB-10 Delivery rate 0.16 cc	17
8.6.4 Explanation of operation (Model DPB 10)	18
8.7 Daily Inspection	19
8.8 Waste-lubricant collector for slideway lubrication	21
8.9 Required operations during operation	
and periodically at maintenance/inspection	22
9. CONSUMPTION OF LUBRICANT	24

D. ELECTRICAL COMPONENTS AND SWITCHES

CONTENTS

1. FUNCTIONAL TESTS OF MAJOR ELECTRICAL COMPONENTS	1
1.1 Magnet switch (LCI type, OMRON)	1
1.2 Thermal relays (LR-1-type, OMRON)	3
1.3 Relays	4
1.3.1 Control relays	4
1.3.2 Keep relays	5
1.4 Circuit protectors (Breakers)	6
1.5 Fuses	8
1.5.1 Plug fuses	8
1.5.2 Alarm fuses	8
1.5.3 Cylindrical fuses	8
1.6 BESTACT relays	9
1.7 Location of limit and proximity switches for turret indexing and X-axis OT	11
1.8 Plate showing location of position limit and proximity switches	13
1.9 List of limit and proximity switches	14
1.10 Limit switches used on the SL-25 for X-axis and Z-axis overtravel, tailstock unclamp	15
1.11 Proximity switches on the SL-25 used for (turret functions and reference point return)	16
1.12 Electromagnetic brake (spring brake type)	18
1.12.1 Configuration.....	18
1.12.2 Operation	18
1.12.3 Cautions when mounting the electromagnetic brake	19
1.12.4 Maintenance	19
1.13 Work lamp.....	20

E. THE HYDRAULIC UNIT

CONTENTS

1. HYDRAULIC UNIT	1
2. HYDRAULIC PRESSURE ADJUSTMENT	8
2.1 Main pressure adjustment	8
2.2 Clamping the turret	8
2.3 Chucking pressure	9
2.4 Tailstock quill pressure	9
3. HYDRAULIC FLUID: SUPPLY AND QUANTITY	9
4. HYDRAULIC FLUID CHANGE (EVERY 6 MONTHS)	9
5. REPLACING THE PRESSURE ADJUSTMENT OF SOLENOID COIL AND VALVE	10
5.1 Replacing the solenoid coil	11
5.2 Replacing the solenoid valve	11
5.3 Replacing the terminal box	11
5.4 Solenoid valve troubleshooting	12
6. DISASSEMBLING THE PUMP MOTOR	15
6.1 The Pump Motor is located at the rear of the lathe	15
6.2 Cross section of connections	15
6.3 Troubleshooting	16

F. TOOLING MANUAL

CONTENTS

1. CAUTIONS FOR MOUNTING TOOL HOLDERS	1
2. TOOLING SYSTEM	4
2.1 Standard	4
2.2 M/MC type	4
3. CONFIGURATION OF THE TOOL MOUNTING AREA	6
4. STANDARD CUTTING TOOLS	7
4.1 Standard ("reverse-bite") fitting of the O.D. cutting tool	7
4.2 Non-standard or so-called "normal bite" fitting of the O.D. cutting tool	8
5. MOUNTING O.D. CUTTING AND FACING TOOLS	9
6. COOLANT DISCHARGE SYSTEM	10
7. CUTTING TOOL OVERHANG	11
8. TOOL HOLDERS	12
8.1 Standard tool holder for I.D. cutting and face cutting	12
8.2 Boring bar holder	13
8.3 Drill holder	14
8.4 Clearance holder	15
9. SLEEVES	16
9.1 Boring bar sleeves	16
9.2 Drill sockets	17
9.3 Throw-away drill sockets	18
9.4 Drill socket	19

G. THE TURRET

CONTENTS

1.	THE INDEXING MECHANISM	1
1.1	Operating the turret	2
2.	RE-CENTERING THE TURRET	4
2.1	Tools needed for re-centering the turret	4
2.2	Re-centering procedure	5
3.	INDEXING SEQUENCE OF THE TURRET HEAD	8
3.1	Overview	8
3.2	Returning the turret head to home position	8
3.3	Time chart for turret head indexing	11
3.4	Control timing for detecting the home position	13
4.	RESETTING THE REFERENCE POINT	14
4.1	Setting the Z Axis	14
4.2	Setting the X Axis	16

H. CHUCK AND CYLINDERS

CONTENTS

1. CAUTIONARY NOTES	1
1.1 Test operation	1
1.2 Cautions on use	2
1.3 Cautions on forming the soft jaws	3
1.4 Maintenance and inspection	3
2. MOUNTING THE CHUCK	5
2.1 Connector length	8
3. MAIN SPINDLE NOSE	9
4. CHUCK AND CYLINDER COMBINATION TABLE	12
4.1 SL-25A	12
4.2 SL-25B	12
4.3 SL-25M, MC (Standard)	13
4.3 SL-25M, MC (Power up)	13
5. CHUCK	14
5.1 KITAGAWA Hollow Chuck	14
5.2 MATSUMOTO Hollow Chuck	15
5.3 HOWA Hollow Chuck	16
5.4 HOWA Solid Chuck	17
5.5 RIKEN Collet Chuck	18
6. CYLINDER	19
6.1 KITAGAWA Cylinder	19
6.2 MATSUMOTO Cylinder	20
6.3 HOWA Cylinder (HH34C)	21
6.4 HOWA Cylinder (HH4C)	22
7. CYLINDER CHUCK CONNECTOR	23
8. CYLINDER ADAPTER	25
9. INTERMEDIATE ADAPTER	27
10. SOFT JAW	28

I. THE TAILSTOCK

CONTENTS

1. CONFIGURATION	1
1.1 Outline	1
1.2 Oil seal	1
1.3 Removing the center	2
2. ADJUSTING THE TAILSTOCK	3
3. ADJUSTING THE TAILSTOCK MOVEMENT	5
4. ADJUSTING THE TENSION OF THE DRIVE BELTS	8
5. THE IS8 DISK BRAKE	10
5.1 Configuration	10
5.2 Inspection and replacement	12
5.2.1 Inspecting the pad assembly for wear	12
5.2.2 Bleeding air in the brake hydraulic line	13
5.2.3 Replacing brake pads (IS8)	15