



MITSUBISHI WIRE-CUT EDM SYSTEMS

MP Series

Operation and Maintenance Guidebook

BRN-67076-A

CONTENTS

1. Basic Operation	4
1.1 Simple Manual Operation Box.....	4
1.2 High-function Manual Operation Box	4
1.3 NC Operation Panel Setting Methods and Screen	5
1.4 Mouse and Keyboard Operations Methods.....	6
2. Initial Settings	7
2.1 Power ON	7
2.2 Setting the programming style	7
2.3 Zero point return	8
2.4 Adjusting the Z axis scale.....	8
2.5 Aligning the wire	8
2.6 Taper initialization	9
3. Preparing for Machining	10
3.1 Setting the workpiece	10
3.2 Positioning	10
3.3 Setting the upper nozzle height.....	12
3.4 Inputting the NC data	13
4. Program	14
4.1 Creating the Program (For Straight Machining)	14
4.2 Editing the Program (For Taper Machining)	15
4.3 Copying and deleting a program	16
5. Machining Conditions	17
5.1 Copying, editing or deleting machining conditions.....	17
5.2 Changing the machining conditions	18
5.3 Using the ME-Pack.....	19
6. Control Functions.....	20
7. Other Functions	21
7.1 Automatic return function	21
7.2 Re-machining	21
7.3 Connecting the wire by hand.....	21
7.4 Dry run.....	22
7.5 Alarm screen	22
7.6 AT Maintenance screen.....	22
7.7 eManual screen.....	23
7.8 Know-how screen.....	23
7.9 USB	23
7.10 Saving and restoring the machining information packs	24
7.11 Returning the axis state.....	25
8. Examples of Machining Operation.....	26
8.1 Selecting the machining procedure	26
8.2 Machining operation 1 (Basic E-Pack machining/PM machining).....	27
8.3 Machining operation 2 (Taper machining E-Pack machining/PM machining)	30
8.4 Machining operation 3 (Using an external CAD/CAM).....	33
8.5 Machining operation 4 (Using the EDM's built-in CAD/CAM)	36
8.6 Machining operation 5 (Machining condition search ME-Pack)	44
8.7 Machining operation 6 (Machining condition Using the EDM's built-in CAD/CAM)	47
8.8 Machining operation 7 (Machining condition 3D-PM machining).....	55
9. Updating the System	61
9.1 Preparation for updating the system	61
9.2 Updating the system.....	62
10. Power OFF/ Power Save Mode	63
10.1 Turning the Power OFF	63
10.2 Using the Auto Power OFF.....	63
10.3 Using the Wakeup Mode	63

11. Maintenance and Inspection Items	64
Maintenance and inspection sections 1.....	66
Maintenance and inspection sections 2.....	67
1.	
(1) Confirmation of wire route	69
(2) Confirmation of PT (pretension) switch	69
(3) Confirmation of felt	69
(4) Inspection of main tension roller/ MT pinch roller.....	70
(5) Inspection of anneal roller	71
(6) Cleaning of auxiliary die A.....	71
(7) Cleaning of auxiliary die B.....	72
(8) Cleaning of auxiliary die C.....	72
(9) Inspection of slack detection plate	73
(10) Cleaning of guide pipe.....	74
(11) Inspection of cutting energizer/cutting energizer presser	75
(12) Inspection of wire pressing roller.....	76
(13) Inspection of scraper.....	76
(14) Inspection of wire guide.....	77
2.	
(1) Inspection of upper guide U, D.....	79
(2) Inspection of lower guide U, D	79
(3) Inspection of upper guide C	80
(4) Inspection of lower guide C	80
(5) Inspection of upper power feed terminal.....	81
(6) Inspection of lower power feed terminal.....	82
(7) Positioning any position of the upper power feed terminal	83
(8) Positioning any position of the lower power feed terminal	84
(9) Inspection of jet nozzle.....	85
(10) Inspection of upper diamond die	86
(11) Inspection of lower diamond die.....	86
(12) Inspection of upper guide block	87
(13) Inspection of lower guide block	88
(14) Inspection of rectification plate.....	89
(15) Inspection of lower roller	90
(16) Inspection of nesting	91
(17) Inspection of lower roller block.....	91
(18) Cleaning of fluid level sensor	92
(19) Cleaning of float switch	92
(20) Inspection of lower ceramic plate.....	92
(21) Inspection of ceramic plate of table.....	93
(22) Cleaning of working tank.....	93
(23) Cleaning of seal plate for working tank	93
3.	
(1) Inspection of collection roller	94
(2) Confirmation of wire collection box	96
(3) Confirmation of wire chip collection box.....	97
(4) Confirmation of automatic lubrication unit/Disposal of waste oil	97
4.	
(1) Confirmation of dielectric fluid specific resistivity	98
(2) Replacement of ion exchange resin	98
(3) Cleaning of specific resistivity sensor	98
(4) Confirmation of dielectric fluid filter pressure	98
(5) Replacing the filter.....	99
(6) Confirmation of fluid level in tank	99
(7) Cleaning the dielectric fluid tank (dirty fluid tank).....	100
(8) Cleaning of unit cooler.....	100
(9) Inspection of supply pump.....	101
(10) Inspection of air filter of power supply	102

5.	
(1)	Setting of jet pressure103
(2)	Confirmation of dielectric fluid flow rate103
(3)	Lubricating the UV, Z axis105
(4)	Confirmation of lower nozzle gap106
(5)	Inspection of wire alignment device106
12.	List of Consumables107
13.	Reference Information on Wire Electrodes.....115
14.	List of Recommended Parts115
	Appendix System Updating Procedures116