

Parts List

TL-3,5

TYPE



CONTENTS

SHEET NO.	NAME	PAGE
1-1	HEAD STOCK.....	1
1-2	BED & LEG	2
1-3	BED & LEG	3
2-1	HEAD STOCK (A TYPE).....	5
2-2	HEAD STOCK (A TYPE).....	7
2-3	HEAD STOCK (B TYPE).....	9
2-4	HEAD STOCK (B TYPE).....	11
3	CARRIAGE & CROSS SLIDE.....	13
4-1	FEED GEAR BOX (FANUC X)	15
4-2	FEED GEAR BOX (YASNAC X)	17
4-3	FEED GEAR BOX (FANUC Z)	19
4-4	FEED GEAR BOX (YASNAC Z)	21
5-1	TOOL POST.....	23
5-2	TOOL POST.....	25
5-3	TOOL POST.....	27
5-4	TOOL POST.....	29
6	TAIL STOCK (TL-3) (TL-5)	31
7-1	DRIVING MOTOR	33
7-2	DRIVING MOTOR	35
8	HEAD STOCK LUBRICATION	37
9	COOLANT PIPES	39
10	TOOL POST PIPES.....	41
11-1	HYDRAULIC PIPES (TL-3)	43
11-2	HYDRAULIC PIPES (TL-5)	45
12-1	SPLASH GUARD.....	47
12-2	SPLASH GUARD.....	49
13	TOOL HOLDER	57

These specifications will be sometimes changed without notice, in the case of improving the quality and capacity of machines.