



**INSTRUCTION  
MANUAL**

**CNC Precision Automatic Lathe**  
***BM 163/164/165***

**PRECISION TSUGAMI**

3148-LTE08-02  
10-01

# CONTENTS

<b>CHAPTER 1 SAFETY</b> .....	<b>1-1</b>
1.1 Precaution on Operation .....	1-1
1.2 Qualification of Operator .....	1-2
1.3 Precautions on Tooling .....	1-2
1.4 Precautions on Electric Equipment .....	1-2
1.5 Precautions on Unattended Operation .....	1-3
1.6 Warning and Caution Plates .....	1-4
1.7 Notice for Bar Feeder.....	1-6
1.8 Interlock with Bar Feeder .....	1-6
1.9 Door Interlock Function.....	1-7
1.9.1 Caution on Using Door Interlock Function .....	1-7
1.9.2 Operation Condition When Door is Open.....	1-7
1.10 Safety Instructions for Coolant Selection .....	1-8
<b>CHAPTER 2 SPECIFICATIONS</b> .....	<b>2-1</b>
2.1 External View and Names of Parts .....	2-1
2.2 BM 163 (Names of Parts) .....	2-2
2.3 BM 164 (Names of Parts) .....	2-3
2.4 BM 165 (Names of Parts) .....	2-4
2.5 Tooling Zone.....	2-5
2.6 Floor Space.....	2-7
2.7 Tooling System .....	2-8
2.8 Machine Models .....	2-9
2.9 Types of Peripheral Units.....	2-10
2.10 Standard Machine Specifications and Standard Accessories .....	2-11
2.10.1 Standard Specification of Machine.....	2-11
2.10.2 Standard NC Specifications.....	2-12
2.10.3 Standard Accessories .....	2-13
2.10.4 Standard Tool.....	2-15
2.11 Options.....	2-16
2.11.1 Options for Machine .....	2-16
2.11.2 Options for Electric Units.....	2-18
<b>CHAPTER 3 TRANSPORTAION AND INSTALLATION</b> .....	<b>3-1</b>
3.1 Transportation.....	3-1
3.2 Installation of Machine .....	3-2
3.3 Preparation .....	3-5
3.4 Provision against an Earthquake Disaster .....	3-6
3.5 Points to Check After Turning on the Power for the First Time.....	3-7

<b>CHAPTER 4 OPERATION</b> .....	<b>4-1</b>
4.1 Power Switches.....	4-2
4.1.1 Main Switch.....	4-3
4.1.2 NC Power Switch.....	4-3
4.1.3 Emergency Stop Button.....	4-4
4.2 Operation Panel.....	4-5
4.3 Operation.....	4-16
4.3.1 Power ON.....	4-16
4.3.2 Power OFF.....	4-17
4.3.3 Emergency Stop.....	4-18
4.3.4 Start and Stop of Main Spindle.....	4-19
4.3.4.1 Start of Main Spindle.....	4-19
4.3.4.2 Stop of Main Spindle.....	4-21
4.3.5 Start and Stop of Back Spindle.....	4-22
4.3.5.1 Start of Back Spindle.....	4-22
4.3.5.2 Stop of Back Spindle.....	4-24
4.3.6 Main and Back Spindle Chuck Open/Close.....	4-25
4.3.7 Move Operation of Each Axis.....	4-26
4.3.7.1 Move Operation of Each Axis by JOG.....	4-26
4.3.7.2 Move Operation of Each Axis by HANDLE.....	4-27
4.3.8 Indexing of Tool Post.....	4-28
4.3.9 Setting of Tool.....	4-30
4.3.9.1 Setting of Cutting Tool (Using Tool Set Gauge).....	4-30
4.3.9.2 Setting of Cutting Tool (How to butt and set the cutting tool against bar stock).....	4-32
4.3.9.3 Setting of Cross Drill (Option).....	4-36
4.3.9.4 When the Tool Setting Position is in Front of the Reference Tool Point.....	4-39
4.3.9.5 Setting of Front Tool (Using drill set gauge(Option)).....	4-42
4.3.9.6 Setting of Back Tool (Using drill set gauge(Option)).....	4-44
4.3.10 Input/Output Procedure of Program by Using Memory Card.....	4-46
4.3.10.1 Applicable Memory Card.....	4-46
4.3.10.2 Input/Output of Program.....	4-47
4.3.10.3 Input/Output of Parameter.....	4-53
4.3.11 Offset Setting.....	4-61
4.3.11.1 Offset Screen.....	4-61
4.3.11.2 Offset Examples.....	4-63
4.3.12 Emergency Stop Cancel Method.....	4-64
4.3.13 Coolant Discharge ON/OFF.....	4-65
4.3.14 WK.COUNT Setting.....	4-66
4.3.15 Manual Operation by MDI.....	4-68
4.3.16 Periodic Maintenance Screen.....	4-69
4.3.17 Tool-height Displacement Compensation.....	4-71
4.3.18 Tool Life Counter.....	4-74

<b>CHAPTER 5 PREPARATION FOR MASS-MACHINING .....</b>	<b>5-1</b>
5.1 Conditions for Automatic Operation .....	5-1
5.2 Items to be Confirmed in Idling, Trial Machining, Measurement and Mass Machining .....	5-2
5.3 Items to be Confirmed before Mass Machining .....	5-3
5.4 Program Check.....	5-5
5.4.1 Preparation for Program Check .....	5-5
5.5 Setting of Automatic Operating Functions with Operator's Panel .....	5-6
5.5.1 Operator's Panel Displaying Method.....	5-6
5.5.2 Automatic Operating Functions.....	5-8
5.5.3 Memory Protect Key.....	5-9
5.6 Program Check.....	5-10
5.6.1 Program Check with MACHINE LOCK Function .....	5-10
5.6.2 Program Check in Automatic Operation without Bar Stock (Idling) .....	5-13
5.6.2.1 Setting WARM UP Function to ON.....	5-13
5.6.2.2 Program Check with WARM UP and BLOCK SKIP Functions .....	5-15
5.7 From Call of Program to Continuous Machining .....	5-17
5.7.1 When the Program Number is not Known .....	5-17
5.7.2 When the Program Number is Known.....	5-21
5.8 Removing of Chips Tangled around Workpiece .....	5-24
 <b>CHAPTER 6 ADJUSTMENT, INSPECTION AND MAINTENANCE.....</b>	 <b>6-1</b>
6.1 Periodic Check .....	6-1
6.1.1 Daily Check .....	6-1
6.1.2 Monthly Check .....	6-2
6.1.3 Check in Every 3 Months.....	6-3
6.1.4 Check in Every 6 Months.....	6-3
6.1.5 Yearly Check .....	6-3
6.2 Replacement of Main Spindle Collet Chuck and Back Spindle Collet Chuck.....	6-6
6.2.1 Main Spindle Collet Chuck .....	6-6
6.2.2 Back Spindle Collet Chuck.....	6-7
6.3 Adjusting the Spindle Collet Chuck Gripping Force and Replacing the Toggle .....	6-8
6.3.1 Adjusting the Spindle Collet Chuck Gripping Force .....	6-8
6.3.2 Replacing the Main Spindle Toggle.....	6-11
6.4 Adjusting Back Spindle Collet Chuck Gripping Force and Replacing the Toggle.....	6-13
6.4.1 Adjusting Back Spindle Collet Chuck Gripping Force .....	6-13
6.4.2 Replacing the Back Spindle Toggle .....	6-15
6.5 Inspecting the Lubrication and Coolant .....	6-20
6.6 Pneumatic Unit .....	6-22
6.7 Lubricating Oil Level and Replacing of Filter.....	6-24
6.7.1 Replacing of the Suction Filter .....	6-25
6.8 Injecting Grease into Cross Rotary Tool (Option) .....	6-26
6.9 Adjusting Method of Coolant Flow Switch (Fluid sensor)(Option).....	6-27

6.9.1	Setting Coolant Flow Switch (Fluid sensor SI5000).....	6-28
6.9.2	Confirming PMC DGN .....	6-30
6.9.3	Emergency-stop Function Check at the time of Lack of Coolant .....	6-31
6.10	Function Check of Coolant Level Switch .....	6-32
6.11	Pre-operation Procedure after the Long-term Suspension .....	6-34
6.12	Reference Position Setting .....	6-35
6.12.1	Procedure for Setting Reference Position of the X1, Z1, Y1 and X2 axis .....	6-36
6.12.2	Procedure for Setting Reference Position of Z2 Axis.....	6-38
6.12.3	Index Position of Each Axis .....	6-40
6.13	Keep Relay Changing Method (The prosedures to change the keep relay No. K00.).....	6-41
6.14	Replacing Battery.....	6-45
6.15	Machine Maintenance Parts .....	6-47
6.16	Electric Maintenance Parts .....	6-50
6.16.1	Model of the Amplifier, Motor Cable.....	6-50
6.17	Precaution on Placing Orders for Repair Parts .....	6-52
<b>CHAPTER 7</b>	<b>PROGRAM .....</b>	<b>7-1</b>
7.1	Caution .....	7-1
7.2	Functions and Meanings of Addresses .....	7-2
7.3	Coordinate System and Coordinate Values .....	7-3
7.4	G Codes .....	7-6
7.4.1	Modal: G Codes (G00, G01, G02, G03, G04, G32, G50) (G90, G92, G94, G96, G97, G98, G99).....	7-8
7.4.1.1	Positioning (rapid traverse) G00.....	7-8
7.4.1.2	Linear Interpolation (Cutting feed) G01 .....	7-9
7.4.1.3	Circular Interpolation G02, G03 .....	7-9
7.4.1.4	Dwell (Stop time) G04 .....	7-12
7.4.1.5	Constant Lead Threading G32.....	7-12
7.4.1.6	Work Coordinate System Shift G50.....	7-13
7.4.1.7	Max. Spindle Speed Clamp (Constant surface speed control) G50.....	7-16
7.4.1.8	Canned Cycle G90, G92, G94, G96, G97 .....	7-16
7.4.2	Special: G Codes .....	7-19
7.4.2.1	Tool Nose Radius Compensation G40, G41, G42 .....	7-19
7.4.2.2	Coordinate System Setting G150 .....	7-22
7.4.2.3	Start Point Return Command G300, G310 .....	7-23
7.4.2.4	Cycle for Face Tapping G84.....	7-27
7.4.2.5	Cross Rigid Tapping (Option) G184.....	7-28
7.5	M Codes .....	7-30
7.5.1	Rotation/Stop of Main Spindle and Back Spindle M03 to M05, M13, M14, M103 to M105.....	7-33
7.5.2	Operating Main Chuck and Back Chuck M10, M11, M20, M21 .....	7-34
7.5.3	Chamfering M34, M35.....	7-34

7.5.4	Main Spindle Indexing M50, M51, Back Spindle Positioning M90000 to M93599(Option).....	7-35
7.5.5	Main/Back-spindle Rotation Synchronization Control M56, M57 Main/Back-spindle Phase Synchronization Control M54, M55.....	7-36
7.5.6	Bar feeder Work Check (Option) M95, M96, M91 to M93.....	7-39
7.5.7	Waiting M Codes M500 to M599.....	7-40
7.5.8	Z1/Z2-axis Synchronization Control M704, M220, M705, M221 .....	7-41
7.5.9	Z1/Z2-axis Composite Control M230, M232.....	7-43
7.6	S Codes .....	7-45
7.7	T Codes .....	7-46
7.7.1	Calculating Offset Value .....	7-48
7.7.1.1	Offset of Main Side Machining .....	7-48
7.7.1.2	Offset of Back Side Machining.....	7-52
7.8	Programming Example .....	7-56
7.8.1	Programming Procedure.....	7-56
7.8.2	Program Flow .....	7-58
7.8.3	Beginning and End of Program.....	7-61
7.8.4	Front Machining .....	7-73
7.8.4.1	Centering, Drilling, and Tapping.....	7-73
7.8.4.2	Drilling and Boring .....	7-75
7.8.4.3	Rigid Tapping .....	7-76
7.8.4.4	Turning and Thread Cutting.....	7-77
7.8.5	Back Machining.....	7-79
7.8.5.1	Back Machining with Tool on Rear Tool Post (T41 to T44).....	7-79
7.8.5.2	Back Machining with Tool on Back Tool Post (T31 to T34) (only for B0 125/205, BM165) .....	7-90
7.8.6	Cross Drilling (Option) .....	7-97
7.8.6.1	Center Drilling .....	7-97
7.8.6.2	Cross End Milling (Vertical traverse milling) .....	7-98
7.8.6.3	Tapping (Float type).....	7-99
7.8.6.4	Rigid Tapping (Option) .....	7-100
7.8.6.5	Y1/Z1 Interpolation Function (Circular interpolation) .....	7-101
7.8.6.6	Slotting .....	7-103
7.8.7	Special Machining.....	7-104
7.8.7.1	Cut-off Tool Breakage Detector (Differential speed command type) (Option) .....	7-104
7.8.7.2	Main/back-spindle Rotation/Phase Synchronization Control.....	7-108
7.8.7.3	Stock Exchange Program .....	7-113
7.8.7.4	Beginning and End of Program of Long Workpiece Program .....	7-114
7.8.7.5	Stock Replacing Program for Long-workpiece Machining.....	7-119
7.8.7.6	Z1/Z2-axis Synchronization Control.....	7-122
7.8.8	Machining Examples .....	7-125
7.8.8.1	Front Internal Machining, Turning, Cross End Milling (B0 123/203, BM163).....	7-125

# CONTENTS

---

7.8.8.2 Back Internal Machining, Turning, Cross End Milling (B0 74/124/204, BM 164).....	7-129
7.8.8.3 Internal Machining, Back Internal Machining, Turning, Cross Drilling (B0 125/205, BM 165).....	7-134
7.8.8.4 Simultaneous Machining of Front/Back, Long-workpiece Machining (B0 74/124/204, BM 164).....	7-139
7.8.8.5 Simultaneous Machining of Front/Back, Long-workpiece Machining (B0 125/205, BM 165).....	7-144
7.9 Cutting Condition Data.....	7-149
7.9.1 Cutting Speed Selection Reference Table.....	7-149
7.9.2 Thread Cutting Count Table.....	7-150
7.9.3 Incomplete Thread Length Table at Thread Cutting .....	7-151
7.9.4 Feeding Conditions .....	7-152
7.9.5 Cutting Condition.....	7-153
7.9.6 Compensation Table for Taper Chamfering without Tool Nose Radius Compensation(NC Option).....	7-155
<b>CHAPTER 8 TROUBLESHOOTING.....</b>	<b>8-1</b>
8.1 Alarm Messages and Corrective Actions .....	8-1
<b>CHAPTER 9 OPTION .....</b>	<b>9-1</b>
9.1 Ø12 Main Spindle Specifications (3275-Y020).....	9-1
9.1.1 Specification.....	9-1
9.1.2 Collet Chuck .....	9-1
9.1.3 Replacing and Adjusting Collet Chuck.....	9-2
9.2 Back Spindle Diaphragm Chuck Specification (3275-Y010).....	9-9
9.2.1 Specification.....	9-9
9.2.2 4-inch Diaphragm Chuck (3243-Y1211) .....	9-9
9.2.3 Pneumatic Unit.....	9-10
9.2.4 Replacing and Adjusting Diaphragm Chuck.....	9-11
9.2.5 Adjusting Chuck Pressure .....	9-13