

C200HW-SRM21-V1
CQM1-SRM21-V1
SRT1 Series
SRT2 Series

CompoBus/S

OPERATION MANUAL

OMRON

C200HW-SRM21-V1

CQM1-SRM21-V1

SRT1 Series

SRT2 Series

CompoBus/S

Operation Manual

Revised June 1999

TABLE OF CONTENTS

PRECAUTIONS	xi
1 Intended Audience	xii
2 General Precautions	xii
3 Safety Precautions	xii
4 Operating Environment Precautions	xii
5 Application Precautions	xiii
6 Conformance to EC Directives	xiv
SECTION 1	
System Design	1
1-1 Introduction	2
1-2 Comparison with Previous Models	4
1-3 CompoBus/S System Components	7
1-4 CompoBus/S System Specifications	18
1-5 I/O Allocations	30
1-6 I/O Response Time Characteristics	43
1-7 Master Unit Specifications	49
1-8 Slave Unit Specifications	61
1-9 Cable and Connector Specifications	197
1-10 Design Checklist	201
SECTION 2	
Installation and Wiring	203
2-1 Mounting	204
2-2 Communications Cable Assembly	207
2-3 Cable Connections	215
2-4 External I/O Connections to Slaves	217
2-5 Operations Checklist	230
SECTION 3	
Starting Communications	233
3-1 Turning the Power ON	234
3-2 Power-up Checklist	234
SECTION 4	
Error Processing and Maintenance	235
4-1 Indicators and Error Processing	236
4-2 Special I/O Unit Area Flags (CS1 and C200H□)	241
4-3 Error Detection with the Alarm Output (CQM1 Only)	242
4-4 Troubleshooting	243
4-5 Cleaning and Inspection	251
4-6 Precautions for Replacement of Units or Parts	253
Appendices	
A Standard Models	255
B Related PC Data Area Bits and Flags	259