


UMESS UX

for machine operators



Operating Instructions

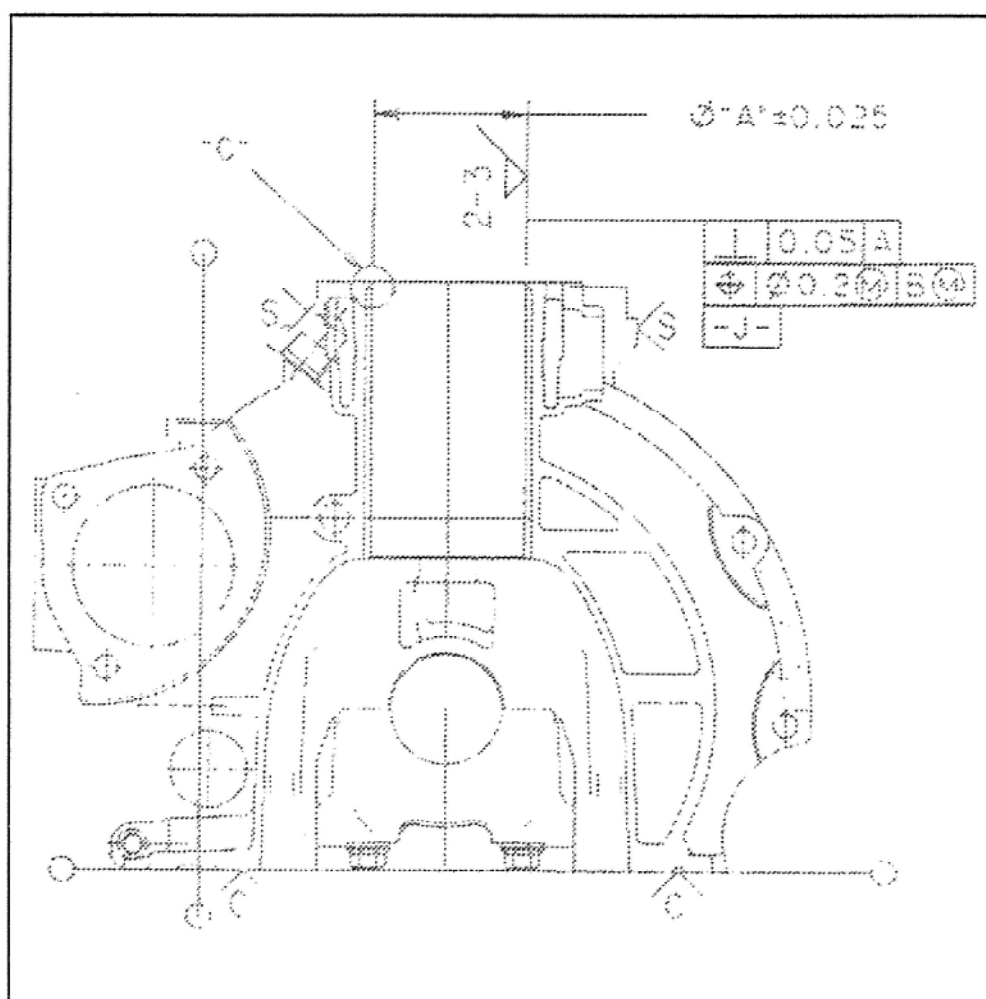

UMESS UX

for machine operators

Revision: 7.5.X
Edition: 12/94
Order no.: 612401-9131

This manual must not be circulated or copied, or its contents utilized and disseminated, without our express written permission. Persons misusing this manual are subject to prosecution.

All rights reserved, especially in cases of granting a patent or registering a design.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

Contents

1	General	1
2	Starting up the entire system	2
3	Preparing the measuring mode	4
4	Measuring	10
5	Shutting down the entire system	14

UMESS UX

Option UX 1 Extended Display of Measurement Results

Revision: 7.7.x
Edition: 07 / 96
Order no: 612401-9104

This manual must not be circulated or copied, or its contents utilized and disseminated, without our express written permission. Persons misusing this manual are subject to prosecution.

All rights reserved, especially in cases of granting a patent or registering a design.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

Contents

	Page
1 Variable record	
1.1 Principle	1 - 1
1.2 The program file	1 - 2
1.3 The text files	1 - 2
1.3.1 The record file A	1 - 2
1.3.2 Files B to J	1 - 5
1.4 Creating the variable record	1 - 6
1.4.1 Procedure	1 - 6
1.4.2 Call and functions of DI 1687	1 - 7
1.5 Describing EQL (Easy Quality Language)	1 - 9
1.5.1 Variables	1 - 9
1.5.2 The WRITE command	1 - 10
1.5.3 DO loops	1 - 12
1.5.4 IF branchings	1 - 14
1.5.5 Program structure	1 - 18
1.5.6 Changing the type size	1 - 18
1.6 Application example	1 - 20
1.6.1 Application example 1	1 - 20
1.6.1.1 Record file A	1 - 21
1.6.1.2 Program file	1 - 21
1.6.1.3 Variable record	1 - 22
1.6.2 Application example 2	1 - 23
1.6.2.1 Record file A	1 - 24
1.6.2.2 Text file B	1 - 24
1.6.2.3 Text file C	1 - 25
1.6.2.4 Program file	1 - 25
1.6.2.5 Variable record	1 - 26

	Page
2 Plotting actual values	
2.1 General	2-1
2.2 Procedure	2-2
2.3 Options for plot display	2-2
2.4 Plotting the results of nominal-actual comparisons	2-3
2.4.1 Selection page	2-3
2.4.2 Reserving the nominal-actual table	2-4
2.4.3 Setting P1, P2 at the plotter	2-4
2.4.4 Setting the plotter scale	2-4
2.4.5 Nominal-actual table with measurement program	2-5
2.4.6 Nominal-actual table with DIN program	2-6
 3 Outputting HPGL files	

UMESS UX

Option UX 2

Extended Form and Position Inspection

Revision: 7.7.x
Edition: 07 / 96
Order no.: 612401-9118

This manual must not be circulated or copied, or its contents utilized and disseminated, without our express written permission. Persons misusing this manual are subject to prosecution.

All rights reserved, especially in cases of granting a patent or registering a design.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

Contents

	Page
1 Mode setting for graphics output devices	
1.1 Function call (DI 1625)	1 - 1
1.2 Listing the graphics output mode (LIST)	1 - 2
1.3 Configuration of graphics output (CONFIG)	1 - 3
1.4 Activating/deactivating plot output device/plot format (SELECT)	1 - 6
1.5 Checking readiness for operation/Initializing the plot output device (INIT)	1 - 8
2 Graphic evaluation of form deviations	
2.1 Procedure	2 - 1
2.2 Requesting GDT plots	2 - 1
2.2.1 Requesting GDT plots (DI 1470)	2 - 2
2.2.2 Requesting fast plots (DI 1461)	2 - 4
2.3 Roundness plot	2 - 5
2.4 Straightness plot with plane tolerance	2 - 7
2.5 Straightness plot with cylindrical tolerance	2 - 9
2.6 Flatness plot	2 - 11
2.7 Cylindricity plot	2 - 13
2.8 Plot form	2 - 14
2.9 Linear plot from circle segment measurements (<RADMEAS>)	2 - 15
3 GDT plot performance modes	
3.1 General and procedure	3 - 1
3.2 Performance modes supplied	3 - 1
3.3 Creating/changing performance modes	3 - 2
3.3.1 Main menu GDT plot performance mode	3 - 2
3.3.2 Plot format	3 - 4
3.3.3 Character size / pen numbers	3 - 6
3.3.4 Display fields for labels	3 - 8
3.3.5 Plot fields for nominal/actual data and extreme values	3 - 10

3.3.6	Plot parameters for straightness with plane tolerance	3 - 13
3.3.7	Plot parameters for straightness with tolerance cylinder	3 - 15
3.3.8	Plot parameters for flatness	3 - 17
3.3.9	Plot parameters for cylinder form	3 - 19
3.3.10	Plot parameters for roundness	3 - 21
3.3.11	Plot parameters for bore pattern	3 - 23
3.4	Explanation of terms for GDT plot performance mode	3 - 25
3.4.1	Device field, frame, drawing field, display field	3 - 25
3.4.2	Display fields	3 - 26
3.4.3	Scale factor	3 - 27
3.4.4	Field positioning	3 - 28
4	2D Best fit of bore patterns	
4.1	Overview and procedure	4 - 1
4.2	Best fit of bore patterns	4 - 2
4.2.1	Function call and data input (DI 1159)	4 - 2
4.2.2	Requesting the bore pattern plot	4 - 7
4.2.3	Best fit	4 - 10
4.3	Interpretation of results	4 - 12
4.3.1	Record output	4 - 12
4.3.2	Bore pattern plot	4 - 13
4.4	Control data list and notes for special applications	4 - 16

Direct input functions

DI number	Input abbrev.	Function	Page
1625		Mode setting for graphics devices	1 - 1
1470		To request GDT plot To set GDT plot performance mode	2 - 1 3 - 1
1461		To request a fast plot	2 - 3
1652		Paper change	2 - 1
1159		To fit bore pattern	4 - 1

UMESS UX

Option UX 3

Extended Best Fit Functions

Revision: 7.7.x
Edition: 10 / 96
Order no: 612401-9119

This manual must not be circulated or copied, or its contents utilized and disseminated, without our express written permission. Persons misusing this manual are subject to prosecution.

All rights reserved, especially in cases of granting a patent or registering a design.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

Contents

1	3D Point to point best fit	1 - 1
1.1	Procedure	1 - 1
1.2	Specifying nominals and actuals for the best fit	1 - 2
1.3	Best fit	1 - 3
2	Calculation of geometric elements using minimum circumscribed, maximum inscribed and minimum criteria	2 - 1
2.1	Basic principles and application examples	2 - 1
2.2	Best fit of geometric elements DI 1180	2 - 3
2.2.1	Procedure	2 - 3
2.2.2	Line best fit	2 - 4
2.2.3	Surface best fit	2 - 5
2.2.4	Circle best fit	2 - 7
2.2.5	Cylinder best fit	2 - 9
2,3	Best fit of circle into curve (DI 1168)	2 - 11

UMESS UX

Option UX 4

Control Data Converter

Revision: 7.x
Edition: 06 / 95
Order no.: 612401-9116

This manual must not be circulated or copied, or its contents utilized and disseminated, without our express written permission. Persons misusing this manual are subject to prosecution.

All rights reserved, especially in cases of granting a patent or registering a design.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

List of contents

1	Introduction	
2	Online transfer from desktop computer to process computer	
2.1	Principle	2 - 1
2.2	Transferring the control data	2 - 2
2.3	Converting the control data	2 - 3
2.3.1	Record file	2 - 5
2.3.2	Process computer control data file	2 - 5
2.3.3	Control data list	2 - 5
3	Offline transfer from desktop computer to process computer	
3.1	Transfer principles	3 - 1
3.2	Transferring the control data	3 - 3
4	Online transfer from process computer to desktop computer	
4.1	Principle	4 - 1
4.2	Conversion of control data	4 - 2
4.2.1	Record file	4 - 4
4.2.2	Desktop computer control data file in ASCII format	4 - 4
4.2.3	Control data list	4 - 4
4.3	Transferring the control data	4 - 5
5	Off-line transfer from the process computer to the desktop computer	
5.1	Transfer principle	5 - 1
5.2	Transferring control data	5 - 2

6	Creating CMS control data (DI 1802)	
6.1	Standard CNC line	6 - 4
6.2	Probing speed (A633)	6 - 6
6.3	Travel speed (A27)	6 - 7
6.4	Temperature correction (A623)	6 - 8
6.5	Measurement record on ASCII file (A637)	6 - 9
6.6	Computer link ASCII (A639)	6 - 10
6.7	Changing the plot format (A537)	6 - 11
6.8	Programming the plotter scale (A151)	6 - 12
6.9	Programming the graphics evaluation (A153)	6 - 13
6.9.1	Text input (Task 1)	6 - 13
6.9.2	Record head (Task 2)	6 - 14
6.9.3	Nominal-actual table (Task 3)	6 - 15
6.9.4	Vector diagram (Task 4)	6 - 16
6.9.5	Bar diagram (Task 5)	6 - 17
6.9.6	Bar diagram with recall (Task 6)	6 - 18
6.10	Programming the probe change (A183)	6 - 19
6.11	Storing/reading in probe configurations (A185)	6 - 20
6.12	Control data lines produced	6 - 21

UMESS UX

Option UX 5

One button operation

Revision: 7.7.x
Edition: 07 / 96
Order no: 612401-9127

This manual must not be circulated or copied, or its contents utilized and disseminated, without our express written permission. Persons misusing this manual are subject to prosecution.

All rights reserved, especially in cases of granting a patent or registering a design.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

Contents

	Page
1 Overview of the one button operation	5
2 Setting up/modifying the one button operation (DI 1668)	7
2.1 Entering the key assignment	9
2.2 Entering a comment	14
2.3 Modifying the run data	16
3 One button operation	19
3.1 Switching on the one button operation (DI 1669)	19
3.2 Starting the workpieces	21
3.3 Switching off the one button operation	23

UMESS UX

Option UX 6 Edge Points

Revision: 7.x
Edition: 10 / 94
Order no: 612401-9126

This manual must not be circulated or copied, or its contents utilized and disseminated, without our express written permission. Persons misusing this manual are subject to prosecution.

All rights reserved, especially in cases of granting a patent or registering a design.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

Contents

		Page
1	General	5
2	Difference between space point / grid point	7
3	Administration of the space point modes	11
4	Mode input (DI 1121)	13
5	Space point measurement run (DI 1120)	19
6	Edge point (DI 1220)	21
7	Corner point (DI 1216)	23
8	Parabola edge point (DI 1173)	25

UMESS UX

Option UX 7 CADLINK

Revision: 7.x
Output: 4 / 95
Order no.: 612401-9110

Die Weitergabe oder Vervielfältigung dieser Unterlage sowie die Verwertung und Mitteilung ihres Inhalts ist nicht gestattet soweit dies nicht ausdrücklich zugestanden wird. Zuwiderhandlungen verpflichten zum Schadenersatz.

Alle Rechte vorbehalten, insbesondere für den Fall der Patenterteilung oder der Eintragung eines Gebrauchsmusters.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

List of Contents

1	General	1
1.1	Program tasks	1
1.2	Preparations in UMESS	1
1.3	Configurations when using HOLOS	1
1.4	Calling CADLINK	2
2	Communication with HOLOS-UX	3
3	Measuring run parameters	5
4	Travel commands	7
5	Probe change functions	8
5.1	Probe change	8
5.2	Selecting the probe combination and configuration	9
6	Measurement	10
6.1	Manual measurement	10
6.2	Automatic measurement	11
6.3	Scanning	11
6.4	Starting a measuring run	11
7	Digitizing	12
7.1	Generating a point grid	12
7.2	Generating curves	14
7.3	Generating points	16

UMESS UX

Option UX 8

Managing Control Data Catalogs

Revision: 7.x
Edition: 04 / 94
Order no: 612401-9113

This manual must not be circulated or copied, or its contents utilized and disseminated, without our express written permission. Persons misusing this manual are subject to prosecution.

All rights reserved, especially in cases of granting a patent or registering a design.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

List of Contents

1	General	5
2	Basic menu for the control data catalog management	9
3	To change or delete a password	11
4	Defining the output	12
5	Changing the control data catalog	13
6	Creating a new control data catalog	16
7	Modifying or deleting a control data catalog	18

UMESS UX

Option UX 10 PCM Library

Revision: 7.6.x
Edition: 08 / 95
Order no.: 612401-9129

This manual must not be circulated or copied, or its contents utilized and disseminated, without our express written permission. Persons misusing this manual are subject to prosecution.

All rights reserved, especially in cases of granting a patent or registering a design.

Carl Zeiss
Unternehmensbereich
Industrielle Meßtechnik
D-73446 Oberkochen

Contents

	Page
1	General information on the PCM library
1.1	Terms 1 - 2
1.2	Self-teach programming a CNC run with PCM modules 1 - 3
2	Integrating PCM modules into the CNC program
2.1	Procedure 2 - 1
2.1.1	Switching on the PCM run mode 2 - 2
2.1.2	Switching on the name allocation 2 - 2
2.1.3	Determining the W-position 2 - 2
2.1.4	Call PROG mode 2 - 3
2.1.5	Calling the record head 2 - 3
2.1.6	Aligning the workpiece 2 - 3
2.1.7	Selecting the PCM measurement library 2 - 4
2.1.8	Displaying and changing control data catalogs, Softkey <CHAN CAT> 2 - 4
2.1.9	Displaying the catalog of the dialog files, <CATALOG> softkey 2 - 6
2.1.10	Transferring PCM modules to the CNC program 2 - 8
2.1.11	Ending the self-teach programming 2 - 9
2.2	Catalog of the PCM measuring modules (calculation module) 2 - 10
2.3	Run in the CNC program 2 - 10
2.4	PCM Generating run (DI 1647) 2 - 11
3	PCM dialogs on the geometric elements
3.1	Dialogs which occur frequently 3 - 3
3.2	Dialog on the PCM measurement modules: surface XY, surface YZ, surface ZX 3 - 7
3.3	Dialog on the line PCM measurement module 3 - 9
3.4	Dialog on the scanning line PCM measurement module 3 - 11
3.5	Dialog on the cone PCM measurement module 3 - 13
3.6	Dialog on the circle PCM measurement module 3 - 16
3.7	Dialog for the scanning circle PCM measurement module and scanning circle file 3 - 20

		Page
3.8	Dialog for the sphere or sphere_6_Point PCM measurement modules	3 - 22
3.9	Dialog for the point PCM measurement module	3 - 25
3.10	Dialog for the cylinder and cylinder_8_point PCM measurement modules	3 - 27
4	PCM dialogs on the special elements and on the multi-component elements	
4.1	PCM dialogs for special elements	4 - 1
4.1.1	Dialog for the thread position PCM measurement module	4 - 1
4.1.2	Dialog for the thread gauge PCM measurement module	4 - 3
4.1.3	Dialog for the 3D circle and ring-shaped area PCM measurement module	4 - 7
4.1.4	Dialog for the scanning ring-shaped area PCM measurement module	4 - 10
4.1.5	Dialog for the slot PCM measuring module	4 - 13
4.1.6	Dialog for the bore pattern PCM measurement module	4 - 15
4.2	PCM dialogs for the multi-component elements	4 - 17
5	Index	

Direct input functions

DI number	Input code	Function	Page
1671		Activate PCM run mode	2 - 2
1663		Set name allocation	2 - 2
1712	WLVKAT	Read W-position	2 - 2
1639	PROG	Call PROG mode	2 - 3
1713	WLNWS	Form workpiece coordinate system from control coordinate system	2 - 3
1079	EXCALL	Select PCM measurement library	2 - 4 3 - 1
1632	P-END	End PROG mode	2 - 8
1647		PCM generating run	2 - 11