


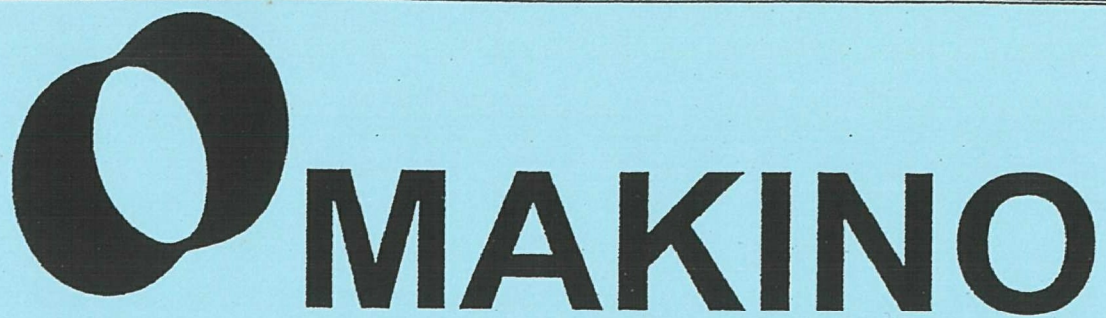


MACHINE OPERATION MANUAL
(MOMAX659201)

MAX 65

JUNE 19, 1996

MACHINE OPERATION MANUAL

(MOMAX659201)

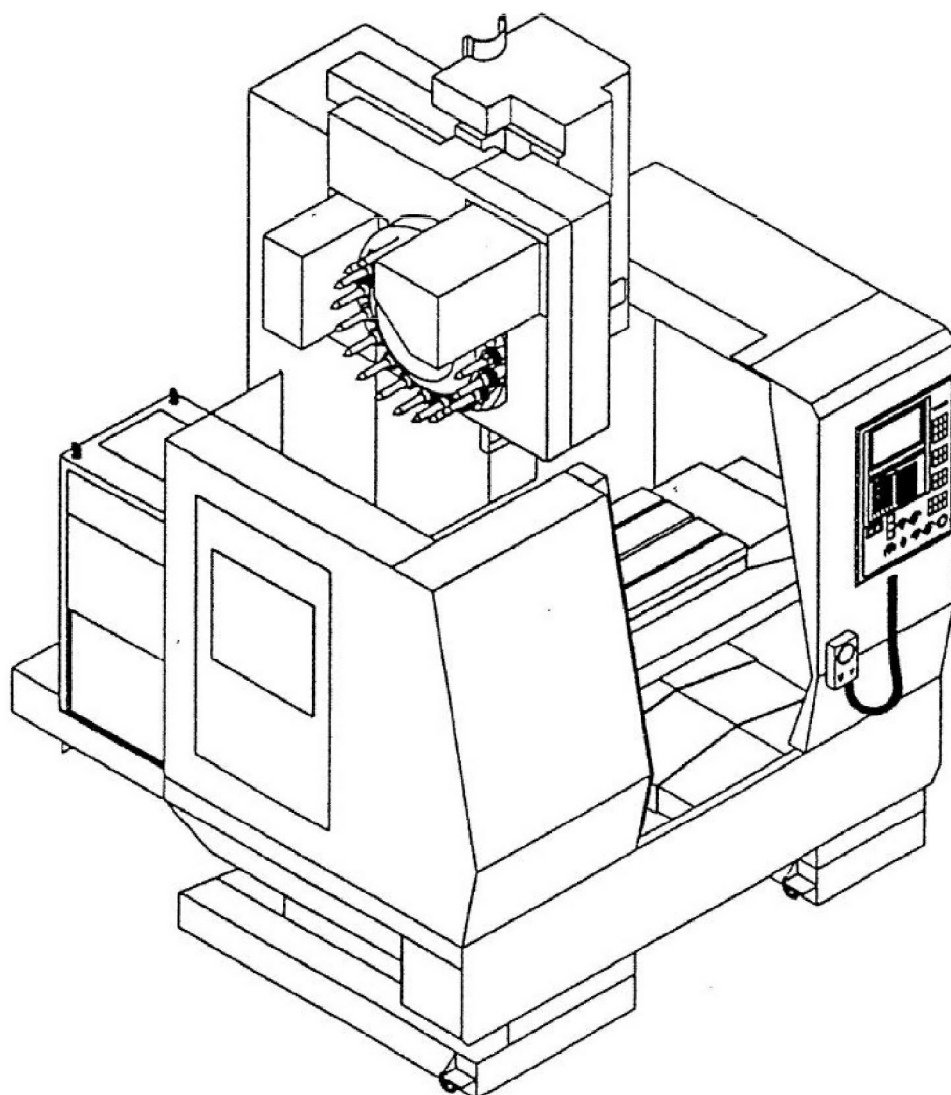

MAX 65

TABLE OF CONTENTS**PAGE****CHAPTER 1 UNIT IDENTIFICATION**

1.1 MACHINE TOOL CONTROL (MTC) CABINET	1-1
1.1.1 Main Power Switch & Power Lamp	1-1
1.1.2 RS-232 Port	1-2
1.1.3 Battery Compartment (Only For Professional 3)	1-2
1.2 OPERATOR STATION	1-2
1.3 MANUAL PULSE GENERATOR (MPG)	1-3

CHAPTER 2 OPERATION OF OPERATOR STATION

2.1 EMERGENCY STOP	2-1
2.1.1 EMERGENCY STOP Push Button	2-1
2.2 AUTOMATIC OPERATION CONTROL	2-1
2.2.1 CYCLE START Push Button/Automatic Operation Indication Lamp (Green)	2-1
2.2.2 FEED HOLD Button/Stop Indication Lamp (Red)	2-2
2.2.3 FEEDRATE OVERRIDE Rotary Switch	2-2
2.3 SPINDLE OPERATION CONTROL	2-2
2.3.1 SPINDLE START Button & Indicator	2-2
2.3.2 SPINDLE STOP Button & Indicator	2-3
2.3.3 SPINDLE SPEED OVERRIDE Rotary Switch	2-3
2.3.4 SPINDLE ORIENTATION Button & Indicator (Optional)	2-3
2.4 NC MODES	2-3
2.4.1 EDITOR (Memory Editing Mode) Button & Indicator	2-3
2.4.2 MEMORY (Memory Command Mode) Button & Indicator	2-3
2.4.3 MDI (Manual Data Input Mode) Button & Indicator	2-3
2.4.4 DNC/TAPE Button & Indicator	2-4
2.4.5 HANDLE MODE Button & Indicator	2-4
2.4.6 JOG FEED (MANUAL CUTTING FEED) MODE Button & Indicator	2-4
2.4.7 MANUAL RAPID TRAVERSE MODE Button & Indicator	2-4
2.4.8 ZERO REFERENCE POINT RETURN MODE Button & Indicator	2-4
2.5 NC FUNCTIONS	2-4
2.5.1 SINGLE BLOCK (Single Block ON/OFF) Button & Indicator	2-4
2.5.2 BLOCK SKIP (Block Skip ON/OFF) Button & Indicator	2-5
2.5.3 DRY RUN (Dry Run ON/OFF) Button & Indicator	2-5
2.5.4 MANUAL ABSOLUTE (Manual Absolute ON/OFF) Button & Indicator	2-5
2.5.5 OPTIONAL STOP (Optional Stop ON/OFF) Button & Indicator	2-5
2.5.6 PROGRAM RESTART Button & Indicator	2-5
2.5.7 Z-FEED NEGLECT (Z-Axis Command Cancel ON/OFF) Button & Indicator	2-5
2.5.8 MACHINE LOCK (Machine Axis ON/OFF) Button & Indicator	2-6
2.5.9 HANDLE INTERRUPT (Handle Interrupt) Button & Indicator	2-6
2.5.10 AUX-FUNCTION LOCK Button & Indicator (Optional)	2-6
2.5.11 F1-FEED Button & Indicator (Optional)	2-6
2.5.12 PLAY BACK Button & Indicator (Optional)	2-6
2.6 AUXILIARY FUNCTION	2-6
2.6.1 MACHINE LIGHT Button (Optional)	2-6

2.6.2	POWER OUT (Automatic Power OFF) Button (Optional)	2-7
2.6.3	AIR BLOWER Button & Indicator (Optional)	2-7
2.6.4	WORK WASH Button & Indicator (Optional)	2-7
2.6.5	OILMIST Button & Indicator (Optional)	2-7
2.6.6	THROUGH TOOL Button & Indicator (Optional)	2-7
2.6.7	COOLANT FLUSH Button & Indicator (Optional)	2-7
2.7	OTHER MISCELLANEOUS FUNCTION PB	2-8
2.7.1	OVERTRAVEL RELEASE/ALARM RELEASE Button	2-8
2.7.2	DISPLAY SELECT Button	2-8
2.7.3	RAPID TRAVERSE OVERRIDE Rotary Switch	2-8
2.7.4	NOZZLE COOLANT Button & Indicator	2-8
2.7.5	KEY LOCK SWITCH (MEMORY PROTECT KEY) Switch	2-9
2.8	AXES CONTROL	2-9
2.8.1	MANUAL AXIS SELECTOR Switches	2-9
2.8.2	JOG FEEDRATE Rotary Switch	2-10
2.9	INDICATORS	2-10
2.9.1	SPINDLE LOAD METER	2-10
2.9.2	WARNING Lamp	2-10
2.9.3	ALARM Lamp	2-10
2.9.4	PROBE STATUS Lamp	2-10
2.9.5	ATC STANDBY Lamp	2-11
2.9.6	MIRROR IMAGE Indicator Lamp	2-11
2.9.7	ZERO Reference Point Return Completion Lamps	2-11
2.10	MANUAL PULSE GENERATOR (MPG)	2-11
2.10.1	AXIS Selection Switch	2-11
2.10.2	FEED AMOUNT SETTING Switch	2-12
2.10.3	MANUAL PULSE GENERATOR	2-12
 CHAPTER 3 EMERGENCY STOP AND ALARM		
3.1	EMERGENCY STOP OPERATION	3-1
3.2	ALARM OPERATION	3-2
 CHAPTER 4 PROCEDURE START-UP AND POWER OFF		
4.1	TURNING ON POWER	4-1
4.2	TURNING ON AIR SUPPLY	4-1
4.3	TURNING OFF POWER	4-1
 CHAPTER 5 MANUAL MODE		
5.1	INTRODUCTION	5-1
5.2	MANUAL AXIS FEED	5-1
5.2.1	JOG Feed	5-1
5.2.2	RAPID Feed	5-1
5.2.3	HANDLE Feed	5-2

5.3	MANUAL REFERENCE POINT (ZERO POINT) RETURN.....	5-2
5.4	AXIS OVERTRAVEL.....	5-2
5.5	STARING & STOPPING SPINDLES.....	5-3
5.6	SPINDLE FIXED ANGLE POSITIONING (ORIENTATION)	5-3
5.7	SPINDLE TOOL LOADING/UNLOADING	5-4
5.8	AUTOMATIC TOOL CHANGE (ATC).....	5-4
5.9	NOZZLE COOLANT.....	5-4

CHAPTER 6 MEMORY MODE

6.1	POWER ON AND MEMORY MODE SELECTION.....	6-1
6.1.1	Power ON.....	6-1
6.1.2	MEMORY Mode Selection.....	6-1
6.2	MACHINE REFERENCE.....	6-1
6.2.1	Manual Reference Point Return.....	6-1
6.2.2	Automatic Return To Reference Point	6-2
6.3	DISPLAY OF AXES POSITION.....	6-2
6.3.1	Absolute Position Display	6-2
6.3.2	Relative Position Display	6-2
6.3.3	Presetting The Relative Position.....	6-4
6.4	TOOL OFFSET	6-5
6.4.1	Tool Radius Compensation.....	6-5
6.4.2	Tool Length Offset.....	6-5
6.4.3	Display Of Tool Offset Value	6-5
6.4.4	Entry Of Tool Offset Value Through MDI	6-6
6.4.5	Input/Output Of Tool Offset Value	6-6
6.4.6	Deletion Of Tool Offset Value From Operation	6-7
6.5	WORK COORDINATE SYSTEM.....	6-7
6.5.1	Display Of Workpiece Coordinate Screen.....	6-7
6.5.2	Setting Values For Work Coordinate System	6-8
6.6	MACHINE SET UP FOR MEMORY OPERATION	6-8
6.6.1	Tool Data Table	6-8
6.6.2	Tool Number Registration.....	6-9
6.6.3	Air Pressure.....	6-9
6.6.4	Splash Guard Door.....	6-9
6.6.5	Lubrication.....	6-10
6.6.6	Spindle Temperature Controller.....	6-10
6.7	PROGRAM RUN IN MEMORY MODE.....	6-10
6.7.1	Set Up For Memory Operation.....	6-10
6.7.2	Retrieve Of Program For Memory Operation	6-11
6.7.3	Start-Up Of Memory Operation.....	6-11
6.7.4	Temporary Stop Of Memory Operation.....	6-14
6.7.5	Manual Operation While Memory Operation Is Halted.....	6-14
6.7.6	MDI Operation While Memory Operation Is Halted	6-15
6.7.7	Restarting The Memory Operation.....	6-15
6.7.8	Shutdown Of Memory Operation	6-15
6.8	PROGRAM RE-START.....	6-15
6.8.1	P Type Program Re-Start	6-16
6.8.2	Q Type Program Re-Start.....	6-17

6.8.3	Points To Be Noted During Program Re-Start	6-18
CHAPTER 7 DNC/TAPE MODE		
7.1	INTRODUCTION.....	7-1
7.2	DNC OPERATION FROM A COMPUTER	7-1
7.3	TAPE OPERATION.....	7-1
CHAPTER 8 ATC OPERATION		
8.1	ATC CONTROL PANEL.....	8-1
8.2	TOOL LOADING AND UNLOADING.....	8-3
8.2.1	Direct Loading And Unloading Of Tool.....	8-3
8.2.2	Indirect Loading Of The Tool To The Magazine.....	8-3
8.3	SET UP FOR ATC OPERATION.....	8-3
8.3.1	Setting Data Table For 20-Tool ATC (Pro B)	8-4
8.3.2	Setting Data Table For 30-Tool ATC (Pro B)	8-5
8.3.3	Registering The Tool Number.....	8-5
8.3.4	Standby Of ATC Unit.....	8-7
8.3.5	Zero Return Of Tool Magazine	8-7
8.4	ATC OPERATION.....	8-8
8.4.1	ATC Automatic Operation.....	8-8
8.4.2	ATC Manual Operation (Pro B).....	8-9
8.4.3	ATC Operation In Manual Inching For ATC Arm Recovery.....	8-10
8.4.4	ATC Operation In PC Screen Maintenance (Prof. 3)	8-11
8.5	RESTORATION OF ATC FROM HANG UP.....	8-12
8.6	RESTORATION OF ATC ARM USING ATC SUB PANEL	8-12
8.6.1	Restoration Of ATC Arm Using Maintenance Screen	8-13
8.7	ADDITIONAL FEATURES IN ATC FOR HEAVY TOOL.....	8-14
CHAPTER 9 TYPES AND OPERATION OF PC SCREENS (PROF 3)		
9.1	PC SCREEN TYPE.....	9-1
9.1.1	Screen - Select Soft Keys.....	9-1
9.2	PC INITIAL SCREEN (PRIMARY OPERATION SCREEN)	9-2
9.2.1	Machine Status Page	9-2
9.2.2	Function Page	9-4
9.3	TOOL DETAIL SCREEN.....	9-4
9.3.1	Tool Details Display Items	9-5
9.3.2	Tool Details Screen Operation.....	9-6
9.4	TOOL MONITOR SCREEN.....	9-7
9.4.1	Tool Monitor Screen Display Items	9-7
9.4.2	Tool Monitor Screen Operation.....	9-9
9.5	HELP SCREEN.....	9-10
9.6	ALARM SCREEN.....	9-11
9.6.1	Alarm Screen Display Items	9-12
9.6.2	Alarm Screen Operation	9-12
9.6.3	Alarm Record	9-13
9.6.4	Alarm Record Screen Display Items	9-13

9.6.5	Alarm Record Screen Operation.....	9-13
9.7	DIAGNOSE SCREEN	9-14
9.7.1	Diagnose Screen Display Items.....	9-14
9.7.2	Diagnose Screen Operation	9-15
9.8	MAINTENANCE SCREEN	9-15
9.8.1	ATC Maintenance Screen For Recovery Operation.....	9-16
9.8.2	ATC Magazine Maintenance Screen (ATC 20, 30)	9-17
9.8.3	ATC Magazine Maintenance Screen Soft Key	9-18
9.8.4	ATC Magazine Maintenance Screen Operation.....	9-18
9.9	PARAMETER SCREEN	9-18
9.9.1	Parameter Screen Display Contents.....	9-19
9.9.2	Parameter Screen Operation.....	9-20
9.9.3	Parameter Screen Soft Key	9-20
9.10	REGULAR MAINTENANCE SCREEN	9-20
9.10.1	Regular Maintenance Screen Operation.....	9-21
 CHAPTER 10 TOOL MONITOR FUNCTIONS (PROF 3)		
10.1	AUTOMATIC TOOL MONITORING	10-1
10.2	ADAPTIVE CONTROL FUNCTION	10-1
10.3	STUDY FUNCTION	10-1
10.3.1	M-Function For Storing SL/AC Value	10-1
10.3.2	Control Under Study Mode.....	10-2
10.4	SL FUNCTION.....	10-2
10.4.1	Monitoring Range	10-3
10.4.2	Monitoring Logic.....	10-3
10.5	AC FUNCTION	10-3
10.5.1	AC Range.....	10-3
10.5.2	AC Control.....	10-3
10.6	PROGRAM EXAMPLE	10-4
10.7	TOOL LIFE MONITORING FUNCTION	10-5
10.8	TOOL MONITOR ALARM	10-5
10.8.1	TL Alarm	10-6
10.8.2	SL, AC Alarm	10-6
10.9	TOOL MONITOR MODE SELECTION	10-6
10.10	M CODES FOR TOOL MONITORING FUNCTIONS	10-6
10.10.1	M-codes For Part Program.....	10-6
10.10.2	M-codes For Tool Data Registration.....	10-7

CHAPTER 11 SPARE TOOL SELECTION FUNCTION (PROF 3)

11.1 SPARE TOOL SELECTION (STS) OPTION	11-1
11.2 REGISTRATION OF SPARE TOOL	11-1
11.3 TOOL LENGTH AND CUTTER COMPENSATION FOR SPARE TOOL	11-1
11.4 PROGRAM EXAMPLE	11-2

CHAPTER 12 DIRECT SPARE TOOL CHANGE (PROF. 3)

12.1 INTRODUCTION.....	12-1
12.2 OPERATION OF DIRECT SPARE TOOL CHANGE	12-1
12.2.1 Direct Spare Tool Change At A Specified Position Using M105.....	12-1
12.2.2 Direct Spare Tool Change Under Permitting Mode.....	12-2
12.3 DNC OPERATION PROGRAM.....	12-2
12.4 RESTRICTION OF DIRECT SPARE TOOL CHANGE	12-3
12.5 PARAMETERS FOR SPARE TOOL CHANGE	12-3

CHAPTER 13 ONE TOUCH FUNCTIONS (PROF 3)

13.1 INTRODUCTION.....	13-1
13.2 FUNCTIONAL DETAILS	13-2

APPENDIX 1 M-CODE LIST**APPENDIX 2 ALARM MESSAGES FOR PRO 3 MACHINES****APPENDIX 3 ALARM MESSAGES FOR PRO B MACHINES**