

Mazak

OPERATING MANUAL

FJV-200 & FJV-250

SMM 2500

Manual No.: S528SG0021E

NC UNIT: M640M

OPERATING MANUAL



OPERATING MANUAL

FJV-200 & FJV-250
SMM 2500

Manual No.: S528SG0021E

NC UNIT: M640M

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by Manual Publication Section, Yamazaki Mazak Corporation, Japan

CONTENTS

PART 1 ABOUT THIS MANUAL

1. INTRODUCTION
2. SAFETY PRECAUTIONS

PART 2 MACHINE OPERATION

1. CONFIGURATION
2. OPERATION PANELS
3. PREPARATION FOR OPERATION
4. MANUAL OPERATION
5. PREPARING FOR MACHINING

PART 3 OPERATING NC UNIT AND PREPARATION FOR AUTOMATIC OPERATION

1. PREPARATION FOR AUTOMATIC OPERATION
2. DISPLAY OVERVIEW
3. DATA SETTING METHODS
4. DISPLAYS RELATED TO THE MACHINE OPERATIONAL STATUS
5. DISPLAYS RELATED TO MACHINING SET UP
6. DISPLAYS RELATED TO PROGRAM CREATION
7. DISPLAYS RELATED TO TOOLS
8. DISPLAYS RELATED TO PARAMETERS
9. DISPLAYS RELATED TO DATA STORAGE
10. DISPLAYS RELATED TO DIAGNOSIS

11. OPTION

PART 4 AUTOMATIC OPERATION

1. AUTOMATIC OPERATION EXECUTION
2. SELECTING EXECUTION CONDITIONS
3. CHANGING THE CUTTING CONDITIONS
4. STOPPING AUTOMATIC OPERATION
5. MANUAL INTERRUPTION
6. OPERATIONS POSSIBLE DURING AUTOMATIC OPERATION

PART 5 APPENDIX

1. STANDARD MACHINE DATA
2. LIST OF ALARMS
3. M CODE LIST

PART 1

ABOUT THIS MANUAL

CONTENTS

1	INTRODUCTION	1-1
1-1	List of Related Manuals and Documents	1-1
1-2	Pagination.....	1-1
1-3	Numbering of Figures and Tables.....	1-2
2	SAFETY PRECAUTIONS	2-1
2-1	Rule	2-1
2-2	Basic Safety.....	2-1
2-3	Clothing and Personal Safety	2-3
2-4	Operational Safety	2-3
2-5	Safety Considerations Relating to Holding Workpieces and Tooling	2-4
2-6	Maintenance Safety	2-5
2-7	Workplace Safety.....	2-6
2-8	Safety Considerations Relating to Chip Conveyor	2-6
2-9	Safety Equipment	2-6
2-10	Remarks on the Cutting Conditions Recommended by the NC	2-7
2-11	Safety Nameplates	2-7
2-12	Locations of Main Safety Equipment and Nameplates	2-8

PART 2

MACHINE OPERATION

CONTENTS

1	CONFIGURATION <small>配置</small>	1-1
1-1	Machine Nomenclature <small>名称</small>	1-1
1-2	Coordinate Axes <small>坐标轴</small>	1-2
2	OPERATION PANELS.....	2-1
2-1	Locations of Operation Panels.....	2-1
2-2	NC Operation Panel.....	2-2
2-2-1	Arrangement of Switches on the NC Operation Panel.....	2-2
2-2-2	Names and Functions of Switches and Other Controls on the NC Operation Panel.....	2-3
2-3	Auxiliary Operation Panel <small>辅助</small>	2-7
2-4	Magazine Operation Panel.....	2-8
2-5	Main Switch.....	2-9
2-6	Operator's Door Interlock.....	2-9
2-7	Magazine Door Interlock Function (for the magazine equipped with the tool mounting/removal door).....	2-12
2-8	Data Input/Output Panel.....	2-12
3	PREPARATION FOR OPERATION.....	3-1
3-1	Inspection before Starting Operation.....	3-1
3-2	How to Stop Machine Operation.....	3-1
3-2-1	Emergency Stop.....	3-1
3-2-2	Other ways to Stop the Machine.....	3-2
3-3	How to Turn On the Power.....	3-2

3-4	How to Turn Off the Power	3-3
3-5	1st Zero-Point Return	3-3
3-5-1	If Zero-Point Return has not been Executed after Switching ON Power.....	3-3
3-5-2	If Zero-Point Return has Already been Completed	3-4
3-6	Warmup Operation	3-4
4	MANUAL OPERATION.....	4-1
4-1	Manual Operation Mode	4-1
4-1-1	Selecting the Manual Operation Mode.....	4-1
4-2	Spindle Operation	4-2
4-2-1	Starting the Spindle	4-2
4-2-2	Stopping the Spindle	4-2
4-2-3	Jogging the Spindle.....	4-2
4-2-4	Changing the Direction of Spindle Rotation	4-3
4-3	Feed Operation.....	4-3
4-3-1	Rapid Traverse Operation	4-3
4-3-2	Cutting Feed Operation	4-3
4-3-3	Pulse Handle Feed Operation	4-4
4-3-4	Soft-Limit	4-5
4-4	Moving the Axes to the 2nd Zero Point.....	4-5
4-5	Coolant System Operation.....	4-6
4-6	ATC Operation (PLC Version 460W529-E*** and later)	4-7
4-6-1	Manual ATC Operation.....	4-7
4-6-2	Spindle Tool Clamp/Unclamp	4-8
4-6-3	Spindle Orientation.....	4-8

4-7	Recovering ATC Operation after Interruption (PLC Version 460W529-E*** and later).....	4-8
4-7-1	Recovering an Interrupted ATC Operation by Pressing the Emergency Stop Button.....	4-8
4-7-2	Recovering an Interrupted ATC Operation by Pressing the Reset Switch.....	4-12
4-7-3	Recovering an Interrupted ATC Operation by Shutting off the Power	4-12
4-7-4	Recovering an Interrupted ATC Operation by Feed Hold Operation	4-13
4-7-5	ATC Barrier 柵機.....	4-14
4-8	Chip Conveyor (Option) Operation	4-15
4-8-1	Arrangement and Function of the Switches	4-15
4-8-2	Manual Operation Procedure.....	4-15
4-9	Lubrication Motor Operation	4-16
4-10	Operation of the AUTO POWER OFF Switch (Option).....	4-16
4-11	ATC Operation (PLC Versions 460W529-B***, 460W529-C*** and 460W529-D***).....	4-17
4-11-1	ATC Shifter 旋轉裝置.....	4-17
4-11-2	ATC Cover	4-17
4-11-3	Spindle Tool Clamp/Unclamp	4-18
4-11-4	Spindle Orientation 定位.....	4-18
4-12	Recovering ATC Operation after Interruption (PLC Versions 460W529-B***, 460W529-C*** and 460W529-D***).....	4-19
4-12-1	Recovering an Interrupted ATC Operation by Pressing the Emergency Stop Button.....	4-19
4-12-2	Recovering an Interrupted ATC Operation by Pressing the Reset Switch.....	4-22
4-12-3	Recovering an Interrupted ATC Operation by Shutting off the Power	4-23
4-12-4	Recovering an Interrupted ATC Operation by Feed Hold Operation	4-24

4-12-5	ATC Barrier	4-24
5	PREPARING FOR MACHINING.....	5-1
5-1	Mounting and Removing Tools in the Magazine	5-1
5-1-1	Mounting/Removal Procedure	5-1
5-1-2	Precautions on Mounting Tools	5-1
5-2	Removing Spindle Tools.....	5-3
5-3	Coolant Control in Automatic Operation	5-4
5-3-1	Supplying Coolant	5-4
5-3-2	Stopping Coolant.....	5-4

PART 3

OPERATING NC UNIT AND PREPARATION FOR AUTOMATIC OPERATION

CONTENTS

	Page
1 PREPARATION FOR AUTOMATIC OPERATION	1-1
1-1 Preparation Steps for Automatic Operation	1-1
2 DISPLAY OVERVIEW	2-1
2-1 Name of the Components of Each Display	2-1
2-2 Types of Displays	2-3
2-3 Configuration of Displays.....	2-4
2-3-1 DISPLAY MAP display.....	2-6
2-4 Windows	2-7
3 DATA SETTING METHODS.....	3-1
3-1 Setting Data and Address.....	3-2
3-2 Selecting Menu Data	3-3
3-3 Erasing Data.....	3-3
3-4 Modifying Data.....	3-4
3-5 Incremental Input.....	3-4
3-6 Saving Data onto the Hard Disk.....	3-4
4 DISPLAYS RELATED TO THE MACHINE OPERATIONAL STATUS	4-1
4-1 POSITION Display.....	4-1
4-1-1 Data display.....	4-1
4-1-2 Data registration	4-5
4-1-3 Display operations	4-6

4-2	TRACE Display.....	4-6
4-2-1	Data display.....	4-7
4-2-2	Displaying machining shape and tool tip.....	4-8
4-2-3	Plane select.....	4-9
4-2-4	Change of scale values	4-9
4-3	EIA MONITOR Display	4-11
4-3-1	Data display.....	4-11
4-3-2	EIA/ISO monitor function	4-12
4-3-3	Editing functions	4-12
4-3-4	Restart 2 unmodal function.....	4-13
4-4	MACHINING - MONITORING Display	4-14
4-4-1	Data display.....	4-14
4-4-2	Display modes of the MACHINING - MONITORING display.....	4-17
4-4-3	Selecting graphs to be displayed in the machining-monitoring mode.....	4-18
4-4-4	Setting the threshold in the drill-monitoring mode	4-19
4-4-5	Scale change in the drill-monitoring mode	4-20
4-4-6	Setting the display time scale	4-20
5	DISPLAYS RELATED TO MACHINING SET UP.....	5-1
5-1	TOOL LAYOUT Display.....	5-1
5-1-1	Data display.....	5-1
5-1-2	Tool layout procedure.....	5-2
5-1-3	Clearing pocket numbers.....	5-7
5-1-4	Specifying a spare tool	5-8
5-1-5	Erasing spare tool data.....	5-9

5-1-6	Erasing procedures for registered tool data	5-9
5-1-7	Other functions	5-10
5-2	VISUAL TOOL MANAGEMENT Display	5-11
5-2-1	Data display	5-11
5-2-2	Display modes	5-13
5-2-3	NECESSARY TOOL display section	5-14
5-2-4	STOCK TOOL display section	5-15
5-2-5	Tool layout for the necessary tools	5-18
5-2-6	Other functions for display operation	5-23
5-3	WORK OFFSET Display	5-25
5-3-1	Data display	5-25
5-3-2	Data registration	5-26
5-4	MACRO VARIABLE Display	5-29
5-4-1	Data display	5-30
5-4-2	Data registration	5-31
5-4-3	Display operations	5-32
5-5	ADDITIONAL WPC Display	5-34
5-5-1	Data display	5-34
5-5-2	Data registration	5-35
5-5-3	Address setting	5-35
5-5-4	Considerations to measurement	5-36
5-6	Manual Measurement	5-37
5-6-1	Function overview	5-37
5-6-2	Use of manual measurement	5-37

5-6-3	Measurement pattern	5-38
5-6-4	MEASURE display.....	5-42
5-6-5	Mode changeover.....	5-44
5-6-6	Measuring procedure.....	5-45
5-6-7	Other functions	5-48
5-6-8	Graph of straightness data (option)	5-51
5-7	SPINDLE LOAD GRAPHIC DISPLAY Display.....	5-53
5-7-1	Data display.....	5-53
5-7-2	Displaying spindle load data	5-54
5-7-3	Display mode selection.....	5-54
5-7-4	Displaying additional data related to spindle load	5-55
5-8	MACHINING NAVIGATION - RESULT Display	5-56
5-8-1	Data display.....	5-56
5-8-2	Displaying data.....	5-58
5-8-3	Display modes.....	5-58
6	DISPLAYS RELATED TO PROGRAM CREATION	6-1
6-1	PROGRAM Display	6-1
6-2	TOOL PATH CHECK Display	6-1
6-2-1	Data display.....	6-2
6-2-2	Displaying machining shape	6-3
6-2-3	Displaying tool-tip path	6-3
6-2-4	Restarting tool path check	6-4
6-2-5	Block skip.....	6-4
6-2-6	Other menu functions	6-4

6-2-7	Solid Mode	6-5
6-3	SHAPE CHECK Display	6-19
6-3-1	Data display.....	6-19
6-3-2	Displaying machining shape	6-20
6-3-3	Other menu functions	6-21
6-4	PLANE CHECK Window.....	6-22
6-4-1	Data display.....	6-22
6-4-2	Displaying machining shape	6-23
6-4-3	Others	6-23
6-5	SECTION CHECK Window.....	6-23
6-5-1	Data display.....	6-24
6-5-2	Displaying sectional shapes	6-25
6-5-3	Others	6-25
6-6	PROGRAM FILE Display	6-26
6-6-1	Data display.....	6-26
6-6-2	Program name setting	6-27
6-6-3	Work number change	6-28
6-6-4	Program erasure	6-28
6-6-5	Program copy	6-29
6-6-6	All program erasure	6-29
6-6-7	Converting MAZATROL program to EIA/ISO program.....	6-29
6-6-8	Opening the shape drawing window	6-29
6-6-9	Directory change	6-30
6-6-10	Program transfer	6-31

6-6-11	Program management functions.....	6-31
6-7	PROCESS CONTROL Display.....	6-33
6-7-1	Data display.....	6-33
6-7-2	Process-number search.....	6-34
6-7-3	Other functions.....	6-34
6-8	PROGRAM LAYOUT Display.....	6-35
6-8-1	Data display.....	6-35
6-8-2	Priority number setting.....	6-36
6-8-3	Delay priority designation.....	6-36
6-8-4	Priority number assignment.....	6-36
6-8-5	Priority number movement.....	6-37
6-8-6	Priority number all erase.....	6-38
6-8-7	Store.....	6-38
6-8-8	Program write.....	6-39
6-8-9	Simultaneous use of functions.....	6-39
6-8-10	Program reference window.....	6-39
6-9	MACHINING NAVIGATION - PREDICT Display.....	6-40
6-9-1	Data display.....	6-40
6-9-2	Displaying data.....	6-43
6-9-3	Display modes.....	6-44
6-9-4	Modifying the cutting conditions.....	6-46
7	DISPLAYS RELATED TO TOOLS.....	7-1
7-1	TOOL DATA Display.....	7-1
7-1-1	Data display.....	7-1

7-1-2	Tool-data input procedures (for MAZATROL programs)	7-3
7-1-3	Interchanging pocket numbers (for MAZATROL programs)	7-7
7-1-4	Registering the tools to be used	7-8
7-1-5	Manual measurement of the tool lengths	7-10
7-1-6	Other functions (for MAZATROL programs).....	7-12
7-1-7	Setting tool data (for EIA/ISO programs)	7-15
7-1-8	Setting tool group numbers.....	7-17
7-1-9	Manual measurement of tool lengths (Setting tool length offset data using the LENG-OFS TEACH menu function).....	7-18
7-1-10	Other functions (for EIA/ISO programs).....	7-19
7-1-11	MAZATROL tool data "INVALIDATION" (Option).....	7-19
7-1-12	Tool length listing window.....	7-22
7-2	TOOL FILE Display.....	7-23
7-2-1	Data display.....	7-24
7-2-2	Registering milling tool data.....	7-26
7-2-3	Erasing a part of the registered data.....	7-30
7-3	TOOL OFFSET Display	7-31
7-3-1	Data display.....	7-31
7-3-2	Tool-compensation data setting procedures	7-32
7-3-3	Setting the current position	7-34
7-3-4	EIA/ISO tool length measurement	7-34
8	DISPLAYS RELATED TO PARAMETERS	8-1
8-1	CUTTING CONDITION (W.-MAT./T.-MAT.) Display.....	8-1
8-1-1	Data display.....	8-1
8-1-2	Registering data	8-2

8-1-3	Read and Write of text file	8-3
8-2	CUTTING CONDITION Display	8-5
8-2-1	Data display.....	8-5
8-2-2	Data registration.....	8-7
8-3	USER PARAMETER Display.....	8-8
8-3-1	Data display.....	8-8
8-4	MACHINE PARAMETER Display	8-9
8-4-1	Data display.....	8-9
9	DISPLAY RELATED TO DATA STORAGE	9-1
9-1	DATA I/O Display.....	9-1
9-1-1	Data display.....	9-1
9-1-2	DATA I/O operations (CARD)	9-2
9-1-3	DATA I/O operations (CMT)	9-6
9-1-4	DATA I/O operations (TAPE).....	9-10
9-1-5	DATA I/O operations (FLOPPY)	9-14
9-1-6	DATA I/O operations (DNC)	9-17
9-1-7	DATA I/O operations (HARD DISK).....	9-20
9-1-8	Data input/output in text file format	9-25
9-2	Program Transfer from the Host PC to the Memory Card.....	9-26
9-2-1	Outline.....	9-26
9-2-2	Detailed description.....	9-26
10	DISPLAYS RELATED TO DIAGNOSIS	10-1
10-1	DIAGNOSIS (USER) – ALARM Display	10-1
10-1-1	Data display.....	10-2

10-2	DIAGNOSIS (USER) – ALARM HISTORY Display.....	10-5
10-2-1	Data display.....	10-5
10-3	DIAGNOSIS (USER) – PLC SIGNAL Display.....	10-6
10-3-1	Data display.....	10-6
10-4	MAINTENANCE CHECK Display	10-7
10-4-1	Data display.....	10-7
10-4-2	Data display for long-term check items (1500 and 3000 hours check items).....	10-8
10-4-3	Display operations	10-8
10-4-4	Entry of the check items to be displayed.....	10-9
10-5	PLC Display	10-11
10-5-1	Data display.....	10-11
10-6	RUNNING CONTROL Display.....	10-12
10-6-1	Data display.....	10-12
10-6-2	Display modes.....	10-15
10-7	DIAGNOSIS (MAKER) – VERSION Display.....	10-18
10-7-1	Data display.....	10-18
10-8	DIAGNOSIS (MAKER) – DIAGNOSIS MONITOR Display	10-19
10-8-1	Data display.....	10-19
10-8-2	Display operations	10-20
10-9	DIAGNOSIS (MAKER) – OPTION Display	10-23
10-9-1	Data display.....	10-23
11	OPTION.....	11-1
11-1	Machining Management Functions	11-1
11-1-1	General	11-1

11-1-2	PALLET MANAGEMENT display.....	11-2
11-1-3	Scheduled-operation function.....	11-3
11-1-4	External unit skipping function.....	11-9
11-1-5	External multi-piece machining function.....	11-11
11-1-6	Jig offsetting function.....	11-13
11-1-7	Parameters.....	11-16
11-1-8	Machining management data writing macro-program.....	11-16
11-2	Function Relating EIA/ISO Program (Option).....	11-21
11-2-1	Configuration of displays.....	11-21
11-2-2	POSITION display.....	11-24
11-3	Workpiece Measurement Printout System.....	11-26
11-3-1	Function overview.....	11-26
11-3-2	System configurations.....	11-32
11-3-3	Parameter registration.....	11-34
11-3-4	Program configuration.....	11-37
11-3-5	Explanations of macro programs.....	11-42
11-3-6	Program and measurement pattern chart.....	11-64
11-3-7	Output of measurement results.....	11-65
11-3-8	Alarm displays.....	11-68
11-3-9	Program and printout example.....	11-69
11-4	Geometry Compensation Function.....	11-74
11-4-1	Function general.....	11-74
11-4-2	Detailed description.....	11-76
11-4-3	Hold Status.....	11-81
11-4-4	Notes.....	11-82

11-4-5	Parameters.....	11-82
11-4-6	Appendix	11-83
11-5	Hard Disk Operating Function.....	11-86
11-5-1	Outline.....	11-86
11-5-2	Preparation for HD operation.....	11-86
11-5-3	Selection of operation mode.....	11-86
11-5-4	Program selection for HD operation.....	11-88
11-5-5	Restart in the HD operation mode	11-89
11-5-6	Format for HD operation programs	11-89
11-6	IC Memory Card Operating Function	11-91
11-6-1	Outline.....	11-91
11-6-2	Preparation for CARD operation.....	11-91
11-6-3	Selection of operation mode.....	11-91
11-6-4	Program selection for CARD operation.....	11-93
11-6-5	Restart in the CARD operation mode	11-94
11-6-6	Format for CARD operation programs	11-94
11-7	Ethernet Operating Function.....	11-96
11-7-1	Outline.....	11-96
11-7-2	Preparation for ENET operation.....	11-96
11-7-3	Selection of operation mode.....	11-97
11-7-4	Program selection for ENET operation	11-99
11-7-5	Restart in the ENET operation mode	11-100
11-7-6	Format for ENET operation programs.....	11-100
11-8	EIA/ISO Conversion.....	11-103

11-8-1	Outline.....	11-103
11-8-2	EIA conversion program format.....	11-104
11-8-3	Output data unit.....	11-104
11-8-4	Operating procedure.....	11-105
11-8-5	Supplementary description and precautions for conversion of MAZATROL programs into EIA/ISO programs.....	11-105
11-8-6	Parameter and alarm lists.....	11-110
11-9	Inch/Metric Unit System Change Simplifying Function	11-111
11-9-1	Outline.....	11-111
11-9-2	Data concerned.....	11-112
11-9-3	Operating procedure.....	11-112
11-9-4	Internal management of data.....	11-113

PART 4

AUTOMATIC OPERATION

CONTENTS

	Page
1 AUTOMATIC OPERATION EXECUTION	1-1
1-1 Automatic Operation Execution Procedure	1-1
1-2 Types of Automatic Operation Mode	1-3
1-2-1 Automatic operation.....	1-4
1-2-2 Restart operation.....	1-8
1-2-3 MDI operation.....	1-17
2 SELECTING EXECUTION CONDITIONS	2-1
2-1 Optional Stop	2-1
2-1-1 Procedure.....	2-1
2-1-2 Description	2-2
2-2 Dry Run	2-2
2-2-1 Procedure.....	2-2
2-2-2 Description	2-3
2-3 Machine Lock.....	2-3
2-3-1 Procedure.....	2-3
2-3-2 Description	2-3
2-4 Work Light	2-3
2-4-1 Procedure.....	2-3
2-5 Block Skip.....	2-4
2-5-1 Procedure.....	2-4
2-5-2 Description	2-4
2-6 Single Block.....	2-4

2-6-1	Procedure.....	2-4
2-6-2	Description	2-4
2-7	Comparison Stop	2-5
2-7-1	Setting procedure	2-5
2-7-2	Description	2-5
2-8	Z-axis Cancel.....	2-7
2-8-1	Procedure.....	2-7
2-8-2	Description	2-7
2-9	MST Lock	2-8
2-9-1	Procedure.....	2-8
2-9-2	Description	2-8
2-10	ATC Stop	2-8
2-11	TUNING SV PARAM	2-9
2-11-1	Operation procedure.....	2-9
2-11-2	Function description	2-11
3	CHANGING THE CUTTING CONDITIONS	3-1
3-1	Rapid Feed Override	3-1
3-1-1	Procedure.....	3-1
3-2	Cutting Feed Override	3-2
3-2-1	Procedure.....	3-2
3-3	Spindle Speed Override.....	3-3
3-3-1	Procedure.....	3-3
3-4	VFC Function.....	3-4
3-4-1	Procedure.....	3-4

3-4-2	Description	3-4
3-5	AFC Function (Option).....	3-8
3-5-1	Setting the desired current load value.....	3-9
3-5-2	Tools available with AFC and AFC supervisory modes.....	3-10
3-5-3	Functional operation	3-10
4	STOPPING AUTOMATIC OPERATION	4-1
4-1	Emergency Stop	4-1
4-1-1	Emergency stop	4-1
4-1-2	Releasing the emergency stop status.....	4-1
4-2	Reset	4-2
4-3	Feed Hold	4-2
4-4	Stopping by Changeover to a Manual Operation Mode	4-3
4-5	Single-block Stop.....	4-3
4-5-1	Single-block stop by changing within automatic operation modes.....	4-3
4-5-2	Single-block stop using the SINGLE BLOCK key	4-4
4-6	Program Stop.....	4-4
4-7	Stopping by Turning the Power Off.....	4-4
5	MANUAL INTERRUPTION	5-1
5-1	Handle Interruption (Option)	5-1
5-1-1	Handle interruption	5-1
5-1-2	Clearing the manual handle interruption	5-1
5-2	TPS Function	5-2
5-2-1	Storing the data of only the stop point of automatic operation.....	5-2

5-2-2	Storing the data of both the stop point of automatic operation and the passage point(s) existing during manual interruption	5-3
5-2-3	Storing the data of only the passage point(s) existing during manual interruption	5-4
5-2-4	General remarks on TPS function.....	5-4
6	OPERATIONS POSSIBLE DURING AUTOMATIC OPERATION	6-1
6-1	Data Rewriting	6-1
6-1-1	Data writing conditions	6-1

PART 5

APPENDIX

CONTENTS

1	STANDARD MACHINE DATA	1-1
1-1	Major Machine Specifications	1-1
1-2	Stroke Diagrams	1-3
1-3	Spindle Power/Torque Characteristics Diagrams	1-4
1-4	Table Dimensions	1-5
1-5	Sub-Table Dimensions	1-6
1-6	Interference between Tool and Workpiece during ATC Operation.....	1-8
2	LIST OF ALARMS	2-1
3	M CODE LIST	3-1