

INJECTION MOLDING MACHINE INSTRUCTION MANUAL

IS-G

Model : IS852GTW - 81A

TOSHIBA MACHINE CO.,LTD.
TOKYO,JAPAN

INSTRUCTION MANUAL S10
(PREPARATIONS PRIOR TO OPERATION AND
OPERATING PROCEDURES)

Contents

STE 55201

Section 1 Outline of the Inject Molding Machine

1.Main Unit and Equipment	3
2.Control Station of INJECTVISOR-S10	5

Section 2 Safety

1. Safety Devices	6
1-1 Electrical Safety Device	7
1-2 Hydraulic Safety Device	8
1-3 EMERGENCY STOP Button	8
2. Safety Precautions	9
2-1 Precaution for Injection	9
2-2 Precaution for Clamping	11
2-3 Precaution for the Hydraulic System	12
2-4 Precaution for the Electric System	13
2-5 Other Precautions	14
3. For principles Regarding Safety	15
4. Modifying the Injection Molding Machine	15

Section 3 Preparation for Operation

1. Inspection Prior to Starting Operation	16
2. Starting the Machine	17
3. Mold Set-up	19
3-1 Preparation	19
3-2 Replacement of Ejector Pins	21
3-3 Mold Mounting	24
3-4 Purging Air from the Clamping Cylinder	28

Section 4 Adjustment and Setting

1. Adjustment of the Clamping Unit	29
1-1 Setting the Clamping Pressure(high/low Pressure)	29
1-2 Setting the Mold Opening/Closing Speed and Change Position	31

Contents

STE 55201

2. Adjustment of Hydraulic Ejection Control Unit	35
2-1 Ejector Movement and Setting the Number of Times	35
2-2 Setting of Ejector Stroke	36
2-3 Setting of Ejector Speed	37
3. Setting the Barrel Controller	38
3-1 Setting The Barrel Temperature and Nozzle Temperature	38
3-2 Auto Tuning of The Barrel Controller	40
4. Adjustment of Injection Charge Control Unit	42
5. Adjustment of Nozzle Control Unit	46
6. Setting of Timer	47
Section 5 Production Control	
1. Load and Store of Molding Condition	48
2. Quality Monitoring	50
3. Process Alarm	53
4. Shot Control	54
5. Sequence Movement Monitor	55
Section 6 Test Running	
1. MANUAL Operation	57
2. SEMI-AUTOMATIC Operation	59
3. AUTOMATIC Operation	60
4. Stop	61
Section 7 Auxiliary Equipment	
1. Screw Cold Start Prevention Device	62

STE 55203

INSTRUCTION MANUAL

(MAINTENANCE AND INSPECTION)

Contents

STE 55203

Section 1 Prohibited Operations	2
Section 2 Inspection Prior to Operation	3
Section 3 Daily Inspection	7
Section 4 Periodic Inspection	12
4-1 Weekly (Every 150 Hours)	12
4-2 Monthly (Every 700 Hours)	14
4-3 Three Months (Every 2000 Hours)	18
4-4 Six Months (Every 4000 Hours)	18
4-5 One Year (Every 8000 Hours)	19
Section 5 Replacing the Parts	20
5-1 Replacing the Screw and Barrel	20
5-1-1 Swiveling the Injection Unit	20
5-1-2 Replacing the Screw	22
5-1-3 Replacing the Barrel	25
5-2 Replacing the Oil Cleaner Filter Element	27
5-3 Replacing the Packing	28
5-3-1 Replacing the Clamp V Packing	28
5-3-2 Replacing the Injection U Packing	28
5-4 Replacing the Nozzle Heater Fuse	32
5-5 Replacing the Contactor	33
Section 6 Maintenance	34
6-1 Three-phase Induction Motor	34
6-2 Cleaning the Air Breather Element	34
6-3 Cleaning the Heat Exchanger	35
6-4 Cleaning the Suction Strainer	37
6-5 Heater Maintenance and Inspection	38
6-6 Inspection for Check Ring Wearing	39
6-7 Measures for Excessive Oil Temperature Rise	40

INSTRUCTION MANUAL S10

(TROUBLESHOOTING)

Troubleshooting

1. Troubleshooting Flow	2
1-1 Alarm Display	3
2. Self Test and External Test	5
2-1 Alarm Display	5
2-1-1 Machine Abnormality and Fault Diagnosis	6
2-1-2 Monitoring Alarm	28
2-1-3 Operational Diagnosis	35
2-1-4 Start Inspection and Periodic Inspection Instructions	36
2-2 Self Test of MAIN PC Board	37
2-3 SEQ Module (PC Board)	39
2-4 Operational Troubleshooting	40
2-5 How to Replace the Output Module Fuse	53
2-6 How to Replace the Battery	55
3. Layout of Major Electrical Components	57
3-1 Injection Molding Machine	57
3-2 Control Cabinet	60

STE 35171

INSTRUCTION MANUAL
FOR
THREE-PHASE SQUIRREL-CAGE INDUCTION MOTOR

INJT107

STE 35171

TABLE OF CONTENTS

	Page
1. Storage	2
2. Operation	3
3. Maintenance	3
3-1 Disassembly and Inspection	3
3-2 Recording	3
4. Maintenance of Bearing	5
4-1 Sealed Bearing	5
4-2 Open Type Bearing with Over-grease Prevention	5
4-3 Vibration	10
5. Trouble and Measures	11

STE55259

INSTRUCTION MANUAL

FOR

SPECIAL HYDRAULIC EJECTOR

<B CIRCUIT>

IS-G, IV-S10

全
8P

TABLE OF CONTENTS

	Page
1. Outline	2
2. Special Hydraulic Ejector Movement (B Circuit)	2
2-1 Movement in AUTOMATIC/SEMI-AUTOMATIC Operations	2
2-2 Movement in MANUAL Operation	2
2-3 Movement	3
3. Preparation for Operation	4
3-1 Ejector Stroke Adjustment	4
3-2 Ejection Speed Adjustment	4
3-3 Adjustment for Ejection Start Position LS30	4
4. Operation Procedure	5
4-1 Control Switches	5
4-2 Selection of Ejector Movement	5
4-3 MANUAL Operation	6
4-4 AUTOMATIC/SEMI-AUTOMATIC Operations	6
5. Alarm Comment Display	7