



# ELECTRICAL MANUAL

## **MV66A**

(FANUC MXP100i / MXP200i / 18iMB)

VERTICAL MACHINING CENTER

(FOR SHANK 30/40/50 MACHINE ONLY)

**YEONG CHIN MACHINERY INDUSTRIES CO., LTD.**

HEADQUARTERS : 888, HOMU RD., HSINCHUANG  
SHENKANG, TAICHUNG, TAIWAN

TEL : 886-4-25623211 FAX : 886-4-25626479 . 886-4-25628399  
SERVICE TEL : 886-4-25612965 FAX : 886-4-25612966

E-mail : sales@YCMCNC.com

Web site : <http://www.YCMCNC.com>

ENDEAVORING TO CONFORM THE ISO 14001 ENVIRONMENTAL PROTECTION POLICIES;  
IN PURSUIT OF EXCELLENCE; ALWAYS IMPROVING AND REFINING.

YCM  
ELECTRICAL MANUAL  
**MV66A**

(FANUC MXP100i / MXP200i / 18iMB)

(薄膜式操作面板適用)

VERTICAL MACHINING CENTER  
(FOR SHANK 30/40/50 MACHINE ONLY)

OPVMCE115

R010

INDEX	PAGE
1.CAUTION AND WARNING 注意與警告	
2.PREFACE 序文	
2.1 PREFACE 序文.....	2-1
2.2 THE CODE IDENTIFICATION OF ATC TYPE 刀庫型式代碼表 .....	2-2
2.3 THE CODE INDNTIFICATION OF APC TYPE 床台交換型式代碼表	2-3
3.ELECTRIC-SYMBOL DETAIL 電氣符號表	
4.CONNECTION BLOCK DIAGRAM 接線方塊圖	
4.1 MXP-100iM/200 iM/18iM 總連接圖(電源供應器單元 A1/B1).....	4-1
4.2 CONNECTION DIAGEAM OF PSM,SPM,AND SVM(FSSB)	
PSM,SPM 與 SVM(FSSB)連接圖.....	4-2
4.3 MACHINE I/O CONNECTION BLOCK DIAGRAM	
機械輸入/輸出連接方塊圖 .....	4-3
5.ELECTRIC LAYOUT 電氣箱配置圖	
5.1 WIRING LAYOUT&EARTHING ARRANGEMENT 配線及接地圖	5-1-1
5.1.1 FOR FV56T/FV56A/FV85A/FV102A/MV66A/MV76A/MV86A/ MV106A STANDARD MACHINES.....	5-1-1
5.1.2 FOR FV125A/TV116A/TV146A/MV168A/WV108A/WV108B/ MV138B/MV168B/TV116B/TV146B/TV158B/TV188B STANDARD MACHINES .....	5-1-2
5.1.3 FOR TV2110B/TV2610B STANDARD MACHINES .....	5-1-3
5.1.4 FOR FP66A/FP100A STANDARD MACHINES.....	5-1-4
5.2 OPERATOR CABINET BLOCK DIAGRAM 操作箱方塊圖.....	5-2-1
5.2.1 FOR FV56T/FV56A/FV56T+APC/FV56A+APC MACHINES .....	5-2-1
5.2.2 FOR MV66A/MV76A/WV108A/WV108B MACHINES.....	5-2-2
5.2.3 FOR FV85A/FV102A/FV125A/MV86A/MV106A/MV168A/TV116A/ TV146A/MV138B/MV168B/TV116B/TV146B/TV2110B/TV2610B MACHINES .....	5-2-3
5.2.4 FOR TV158B/TV188B MACHINES .....	5-2-3
5.2.5 FOR FP100A MACHINES .....	5-2-4
5.3 OPERATOR CABINET LAYOUT 操作箱之配置.....	5-3-1
5.3.1 FOR FV56T/FV56A/FV56T+APC/FV56A+APC/MV66A/MV76A/ WV108A/WV108B MACHINES.....	5-3-1
5.3.2 FOR FV85A/FV102A/FV125A/MV86A/MV106A/MV168A/TV116A/ TV146A/MV138B/MV168B/TV116B/TV146B/TV158B/TV188B/ TV2110B/TV2610B MACHINES .....	5-3-1
5.3.3 RS232C I/O CONNECTION *RS232C I/O 接線 .....	5-3-2
5.3.4 SIGNAL TOWWER CONNECTION 警示燈接線.....	5-3-2

5.4 MAIN OPERATOR'S PANEL 主操作面板 .....	5-4-1
5.4.1 FOR FV56T/FV56A/FV56T+APC/FV56A+APC MACHINE (SYMBOLIC+ENGLISH) FOR FV56T/FV56A/FV56T+APC/FV56A+APC 機種(符號+英文).....	5-4-1
5.4.2 FOR 20/24/30-TOOLS MACHINE(SYMBOLIC+ENGLISH) FOR 20/24/30-TOOLS 機種(符號+英文) .....	5-4-2
5.4.3 FOR FV56T/FV56A/FV56T+APC/FV56A+APC MACHINE (CHINESE) FOR FV56T/FV56A/FV56T+APC/FV56A+APC 機種(中文) .....	5-4-3
5.4.4 FOR 20/24/30-TOOLS MACHINE(CHINESE) FOR 20/24/30-TOOLS 機種(中文).....	5-4-4
<b>6. WIRING 配線</b>	
6.1 BASE FUNCTION 基本功能 .....	6-1-1
6.1.1 POWER SUPPLY 電源供應部份 .....	6-1-1
6.1.2 CONTROL VOLTAGE 220/110V AC 控制電壓交流 220V/110V.....	6-1-3
6.1.3 CNC POWER ON/OFF CNC 之電源開關 .....	6-1-4
6.1.4 EMERGENCY STOP 緊急停止 .....	6-1-5
6.1.4.1 STORK LIMIT (FOR FP100A/B USE) 極限開關 .....	6-1-5
6.1.4.2 STORK LIMIT (FOR FP120A/B USE) 極限開關 .....	6-1-6
6.1.4.3 STORK LIMIT 極限開關 .....	6-1-7
6.1.4.4 EMERGENCY STOP BUTTON 緊急停止按鈕.....	6-1-7
6.1.4.5 SAFTY COMPONET 安全元件.....	6-1-8
6.1.4.5.1 EMERGENCY STOP REALY 緊急停止繼電器 .....	6-1-8
6.1.4.5.2 SAFTY COMPONENT(OPTION) 安全元件(選擇).....	6-1-8
<b>6.1.4.6 EMERGENCY BUTTON 緊急按鈕.....</b>	<b>6-1-8</b>
6.1.5 FUNCTION 功能.....	6-1-9
6.1.6 MODE 模式.....	6-1-10
6.1.7 FEEDRATE OVERRIDE 進給率 .....	6-1-10
6.1.8 EDIT LOCK 編輯鎖定.....	6-1-11
6.1.9 LIGHT 工作燈.....	6-1-11
6.1.9.1 SHAN LIGHT 單工作燈.....	6-1-11
6.1.9.2 PAIR OF LIGHT 雙工作燈.....	6-1-11
6.1.10 CYCLE 循環.....	6-1-11
6.1.11 INDICATE 刀號指示燈.....	6-1-12
6.1.12 CUTTING ATR BLAST 切削吹屑.....	6-1-15
6.1.12.1 PB 按鍵 .....	6-1-15
6.1.12.2 COIL 線圈.....	6-1-15
6.1.12.3 SOLENOID AND MCC 電磁閥與電磁接觸器 .....	6-1-15
6.1.13 COOLANT 切削液.....	6-1-16

6.1.13.1 PB 按鍵 .....	6-1-16
6.1.13.2 COIL 線圈 .....	6-1-16
6.1.13.3 SOLENOID AND MCC 電磁閥與電磁接解器 .....	6-1-16
6.1.13.4 MOTOR 馬達 .....	6-1-16
6.1.14 CHIP CONVEYOR 螺旋捲屑機 .....	6-1-17
6.1.14.1 PB 按鍵 .....	6-1-17
6.1.14.2 COIL 線圈 .....	6-1-17
6.1.14.3 MCC 電磁接觸器 .....	6-1-18
6.1.14.4 MOTOR 馬達 .....	6-1-18
6.1.15 CHIP CONVEYOR 船型捲屑機 .....	6-1-19
6.1.15.1 PB 按鍵 .....	6-1-19
6.1.15.2 COIL 線圈 .....	6-1-19
6.1.15.3 MCC 電磁接觸器 .....	6-1-20
6.1.15.4 MOTOR 馬達 .....	6-1-20
6.1.15.5 DETECTION(FOR FV85A/FV102A/TV SERIES USE) 檢出(FV85A/FV102A 及 TV 系列使用) .....	6-1-20-1
6.1.16 SIGNAL TOWER 警示燈 .....	6-1-21
6.1.16.1 COIL 線圈 .....	6-1-21
6.1.16.2 LAMP 指示燈 .....	6-1-21
6.1.17 MOTOR OVERLOAD 馬達過載和空壓 .....	6-1-22
6.2 AXES FUNCTION 軸向功能 .....	6-2-1
6.2.1 AXES LUBE 軸向潤滑 .....	6-2-1
6.2.1.1 FOR TV96A/TV116A/TV146A/V168A AND #50 SERIES MACHINE LUBE FOR TV96A/TV116A/TV146A/V168A 及#50 機種軸向潤滑 .....	6-2-1
6.2.1.1.1 DETECTION 檢出 .....	6-2-1
6.2.1.1.2 COIL 線圈 .....	6-2-1
6.2.1.1.3 MOTOR 馬達 .....	6-2-1
6.2.1.2 FOR FV56T/FV56A/V65A/V85A/FV85A/FV102A/V105A AND #40 SERIES MACHINE LUBE FOR FV56T/FV56A/V65A/V85A/FV85A/FV102A/V105A 及#40 機種軸向潤滑 .....	6-2-2
6.2.1.2.1 DETECTION 檢出 .....	6-2-2
6.2.1.2.2 COIL 線圈 .....	6-2-2
6.2.1.2.3 MOTOR 馬達 .....	6-2-2
6.2.2 AXIS BREAK 軸向剎車 .....	6-2-3
6.2.2.1 COIL 線圈 .....	6-2-3
6.2.2.2 CONTACT 接點 .....	6-2-3
6.2.2.3 WIRING AND SET 配線及設定 .....	6-2-3
6.2.3 JOG AND AXIS STROKE LIMIT SWITCH UNIT	

手動與軸向極限單元.....	6-2-4
6.2.3.1 PB 按鍵.....	6-2-4
6.2.3.2 COIL 線圈.....	6-2-6
6.2.3.3 SOLEXOID 電磁閥.....	6-2-6
6.2.4 MPG OPERATOR'S PANEL 手輪操作面板.....	6-2-7
6.2.4.1 1'-MPG 單手輪.....	6-2-7
6.2.4.2 2'-MPG(OPTION) 雙手輪(選擇).....	6-2-8
6.2.4.3 3'-MPG(POTION) 三手輪(選擇).....	6-2-9
6.3 MAGAZINE FUNCTION 刀庫功能.....	6-3-1
6.3.1 MAGAZINE#1,#3 刀庫#1,#3.....	6-3-1
6.3.1.1 PB 按鍵.....	6-3-1
6.3.1.2 DETECTION 檢出.....	6-3-1
6.3.1.3 COIL 線圈.....	6-3-2
6.3.1.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-2
6.3.1.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-3
6.3.2 MAGAZINE#2 刀庫#2.....	6-3-4
6.3.2.1 PB 按鍵.....	6-3-4
6.3.2.2 DETECTION 檢出.....	6-3-4
6.3.2.3 COIL 線圈.....	6-3-5
6.3.2.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-5
6.3.2.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-6
6.3.2.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-6
6.3.3 MAGAZINE#4 刀庫#4.....	6-3-7
6.3.3.1 PB 按鍵.....	6-3-7
6.3.3.2 DETECTION 檢出.....	6-3-7
6.3.3.3 COIL 線圈.....	6-3-8
6.3.3.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-9
6.3.3.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-10
6.3.3.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-10
6.3.4 MAGAZINE#5 刀庫#5.....	6-3-11
6.3.4.1 PB 按鍵.....	6-3-11
6.3.4.2 DETECTION 檢出.....	6-3-11
6.3.4.3 COIL 線圈.....	6-3-12
6.3.4.4 SOLENOID AND MCC 電磁閥與電磁接觸器.....	6-3-13
6.3.4.5 POT ROTATION MOTOR 刀庫旋轉馬達.....	6-3-14
6.3.4.6 MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達.....	6-3-15
6.3.5 MAGAZINE#6 刀庫#6.....	6-3-16
6.3.5.1 PB 按鍵.....	6-3-16
6.3.5.2 DETECTION 檢出.....	6-3-16

6.3.5.3	COIL 線圈	6-3-17
6.3.5.4	SOLENOID AND MCC 電磁閥與電磁接觸器	6-3-18
6.3.5.5	POT ROTATION MOTOR 刀庫旋轉馬達	6-3-20
6.3.5.6	MAGAZINE AND ARM MOTOR 刀庫與刀臂旋轉馬達	6-3-20
6.3.6	MAGAZINE ARM D51=0 D57=7 刀庫/刀臂類型 D51=0 D57= 7	6-3-21
6.3.6.1	PB 按鍵	6-3-21
6.3.6.2	DETECTION 檢出	6-3-21
6.3.6.3	COIL 線圈	6-3-22-1
6.3.6.4	SOLENOID AND MCC 電磁閥與電磁接觸器	6-3-22-2
6.3.6.5	POT ROTATION MOTOR 刀庫旋轉馬達	6-3-23-1
6.3.6.6	VARIABLE SPEED DRIVES CONTROL 變頻器控制線路	6-3-23-2
6.3.6.7	VARIABLE DRIVES AND MOTOR 變頻器 AND 刀臂馬達	6-3-23-4
6.3.6.8	MCC 電磁接觸器	6-3-23-4
6.3.7	MAGAZINE ARM D51=0 D57=8/10 刀庫/刀臂 D51=0 D57= 8/10	6-3-24
6.3.7.1	PB 按鍵	6-3-24
6.3.7.2	DETECTION 檢出	6-3-24
6.3.7.3	COIL 線圈	6-3-26
6.3.7.4	SOLENOID AND MCC 電磁閥與電磁接觸器	6-3-27
6.3.7.5	POT ROTATION MOTOR 刀庫旋轉馬達	6-3-28
6.3.7.6	ARM MOTOR 刀臂旋轉馬達	6-3-28
6.4	SPINDLE FUNCTION 主軸功能	6-4-1
6.4.1	SPINDLE 主軸	6-4-1
6.4.1.1	PB 按鍵	6-4-1
6.4.1.2	DETECTION 檢出	6-4-2
6.4.1.3	COIL 線圈	6-4-3
6.4.1.4	SOLENOID 電磁閥	6-4-4
6.4.2	CYTEC SPINDLE UNIT CYTEC 主軸單元	6-4-5
6.4.2.1	DETECTION 檢出	6-4-5
6.4.2.2	COIL 線圈	6-4-6
6.4.2.3	SOLENOID 電磁閥	6-4-6
6.4.2.4	OIL AIR LUBE 油氣潤滑 LUBE	6-4-7
6.4.3	SPINDLE TO START BY Y-Δ CONNECTION(OPTION)	
	使用 Y-Δ 起動之主軸(選擇)	6-4-8
6.4.3.1	DETECTION 檢出	6-4-8
6.4.3.2	COIL 線圈	6-4-8
6.4.3.3	MOTOR 馬達	6-4-9
6.4.4	OIL AIR UNIT 油氣潤滑單元	6-4-10
6.4.4.1	DETECTION 檢出	6-4-10
6.4.4.2	COIL 線圈	6-4-10

6.4.4.3 MCC 電磁接觸器 .....	6-4-10
6.4.4.4 MOTOR 馬達 .....	6-4-10
6.4.4.5 SPINDLE TEMPERATURE CONTROLLER 主軸溫度控制器 .....	6-4-11
6.4.5 SKF OIL AIR UNIT(SKF-DC24V TYPE USE 504-E04-IR01)	
油氣潤滑單元(SKF-DC24V TYPE USE 504-E04-IR01).....	6-4-12
6.4.5.1 DETECTION 檢出.....	6-4-12
6.4.5.2 COIL 線圈.....	6-4-12
6.4.5.3 MCC 電磁接觸器 .....	6-4-12
6.4.5.4 MOTOR 馬達.....	6-4-13
6.4.5.5 SPINDLE TEMPERATURE CONTROLLER 主軸溫度控制器 .....	6-4-13
6.4.6 SKF OIL AIR UNIT(SKF-AC110V TYPE USE 504-E04-IR01)	
油氣潤滑單元(SKF-AC110V TYPE USE 504-E04-IR01).....	6-4-14
6.4.6.1 DETECTION 檢出.....	6-4-14
6.4.6.2 COIL 線圈.....	6-4-14
6.4.6.3 MCC 電磁接觸器 .....	6-4-14
6.4.6.4 MOTOR 馬達.....	6-4-15
6.4.6.5 SPINDLE TEMPERATURE CONTROLLER 主軸溫度控制器 .....	6-4-15
6.4.7 SKF OIL AIR UNIT(SKF TOS-EX2 CONTROLLER DC24V TYPE)	
油氣潤滑單元(SKF TOS-EX2 CONTROLLER DC24V TYPE).....	6-4-16
6.4.7.1 DETECTION 檢出.....	6-4-16
6.4.7.2 COIL 線圈.....	6-4-16
6.4.7.3 MOTOR AND SOLENOID 馬達與電磁閥.....	6-4-16
6.4.7.4 SPINDLE TEMPERATURE CONTROLLER 主軸溫度控制器 .....	6-4-17
6.5 OPTION FUNCTION 選擇功能.....	6-5-1
6.5.1 SPARE M CODE 預備 M CODE.....	6-5-1
6.5.1.1 DETECTION 檢出.....	6-5-1
6.5.1.2 COIL 線圈.....	6-5-1
6.5.1.3 CONTACT 接點 .....	6-5-1
6.5.2 JIG 夾治具 .....	6-5-2
6.5.2.1 PB 按鍵 .....	6-5-2
6.5.2.2 DETECTION 檢出.....	6-5-2
6.5.2.3 COIL 線圈.....	6-5-3
6.5.2.4 SOLENOID 電磁閥 .....	6-5-3
6.5.3 TANSHING SIMPLE ROTARY AXIS 潭興簡易旋轉軸.....	6-5-4
6.5.3.1 DETECTION 檢出.....	6-5-4
6.5.3.2 COIL 線圈.....	6-5-4
6.5.3.3 SOLENOID 電磁閥 .....	6-5-5
6.5.4 POWER OFF FUNCTION 自動斷電功能 .....	6-5-6
6.5.4.1 PB 按鍵 .....	6-5-6

6.5.4.2 CONTACT 接點 .....	6-5-6
6.5.4.3 TIMER 計時器 .....	6-5-6
6.5.4.4 REALY 繼電器 .....	6-5-7
6.5.5 AUTO DOOR 自動門 .....	6-5-8
6.5.5.1 PB 按鍵 .....	6-5-8
6.5.5.2 DETECTION 檢出 .....	6-5-8
6.5.5.3 COIL 線圈 .....	6-5-8
6.5.5.4 SOLENOID 電磁閥 .....	6-5-8
6.5.6 OIL MATIC 油溫控制器 .....	6-5-9
6.5.6.1 DETECTION 檢出 .....	6-5-9
6.5.6.2 MCC 電磁接觸器 .....	6-5-9
6.5.6.3 MOTOR 馬達 .....	6-5-9
6.5.7 HYDRAULIC UNIT 油壓單元 .....	6-5-10
6.5.7.1 MCC 電磁接觸器 .....	6-5-10
6.5.7.2 MOTOR 馬達 .....	6-5-10
6.5.8 AUTO TOOL LENGTH MEASUREMENT 自動刀長量測 .....	6-5-11
6.5.8.1 DETECTION 檢出 .....	6-5-11
6.5.8.2 COIL 線圈 .....	6-5-11
6.5.8.3 SOLENOID 電磁閥 .....	6-5-11
6.5.9 WORKPIECE MEASUREMENT 工件量測 .....	6-5-12
6.5.9.1 WORKPIECE MEASUREMENT(MP10/12) 工件量測(MP10/12)	6-5-12
6.5.9.2 WORKPIECE MEASUREMENT(MP11) 工件量測(MP11)	6-5-12
6.5.10 AWPM AND ATLM INSTALLED 工件(MP10/12)與刀長量測 .....	6-5-13
6.5.10.1 DETECTION 檢出 .....	6-5-13
6.5.10.2 COIL 線圈 .....	6-5-13
6.5.10.3 SOLENOID 電磁閥 .....	6-5-13
6.5.10A AWPM AND ATLM INSTALLED 工件(MP11)與刀長量測	6-5-13-1
6.5.10A.1 DETECTION 檢出	6-5-13-1
6.5.10A.2 COIL 線圈	6-5-13-1
6.5.10.A.3 SOLENOID 電磁閥	6-5-13-1
6.5.11 OIL HOLE 油路刀桿 .....	6-5-14
6.5.11.1 PB 按鈕 .....	6-5-14
6.5.11.2 COIL 線圈 .....	6-5-14
6.5.11.3 MCC 電磁接觸 .....	6-5-14
6.5.11.4 MOTO 馬達 .....	6-5-14
6.5.12 RUSH CHIP 底座沖屑 .....	6-5-15
6.5.12.1 PB 按鈕 .....	6-5-15
6.5.12.2 COIL 線圈 .....	6-5-15
6.5.12.3 MCC 電磁接觸 .....	6-5-15

6.5.12.4 MOTO 馬達.....	6-5-15
6.5.13 COOLANT THROUGH SPINDLE 主軸出油.....	6-5-16
6.5.13.1 PB 按鈕.....	6-5-16
6.5.13.2 DETECTION 檢出.....	6-5-16
6.5.13.3 COIL 線圈.....	6-5-16
6.5.13.4 MCC 電磁接觸.....	6-5-16
6.5.13.5 MOTO 馬達.....	6-5-16-1
6.5.14 COOLANT,OIL HOLE AND COOLANT GUN 切削液,油路刀桿及清洗噴槍.....	6-5-17
6.5.14.1 PB 按鈕.....	6-5-17
6.5.14.2 COIL 線圈.....	6-5-17
6.5.14.3 MCC 電磁接觸.....	6-5-18
6.5.14.4 MOTO 馬達.....	6-5-18
6.5.15 OIL SKIMMER 油水分離機.....	6-5-19
6.5.15.1 MCC 電磁接觸.....	6-5-19
6.5.15.2 MOTO 馬達.....	6-5-19
6.5.16 SAFETY DOOR 安全門.....	6-5-20
6.5.16.1 PB 按鈕.....	6-5-20
6.5.16.2 COIL 線圈.....	6-5-20
6.5.16.3 SOLENOID 電磁閥.....	6-5-20
6.5.17 PROGRAM COOLANT NOZZLE 可程式噴嘴.....	6-5-21
6.5.17.1 DETECTION 檢出.....	6-5-21
6.5.17.2 COIL 線圈.....	6-5-21
6.5.17.3 MOTOR 馬達.....	6-5-21
6.5.18 SPRAY MIST(OPTION) 噴霧吹屑.....	6-5-22
6.5.18.1 PB 按鍵.....	6-5-22
6.5.18.2 COIL 線圈.....	6-5-22
6.5.18.3 SOLENOID 電磁閥.....	6-5-22
6.5.19 FUNCTION KEY(OPTION) 功能鍵.....	6-5-24
6.5.20 CENTRIFUGAL COOLANT CLEANER 遠心分離機.....	6-5-25
6.5.20.1 DETECTION 檢出.....	6-5-25
6.5.20.2 COIL 線圈.....	6-5-25
6.5.20.3 MCC 電磁接觸器.....	6-5-25
6.5.20.4 TIMER 計時器.....	6-5-26
6.5.20.5 MOTOR 馬達.....	6-5-26
6.5.21 AUTO TOOL LENGTH MEASUREMENT FOR BLUM BLUM 雷射刀長量測.....	6-5-27
6.5.21.1 CONNECTION DIAGRAM 連接圖.....	6-5-27
6.5.21.2 WIRE DEFINEATION.....	6-5-28
6.5.22 SPECIAL BUTTON FUNCTION 特殊按鍵功能設定.....	6-5-29

6.5.22.1 PB 按鍵 .....	6-5-29
6.5.22.2 DESCRIPTION 功能說明 .....	6-5-29
6.5.22.3 DATA SETTING 資料設定 .....	6-5-29
6.5.23 4/5 AXIS FUNCTION 4/5 軸功能 .....	6-5-30
6.5.23.1 PB 按鍵 .....	6-5-30
6.5.23.2 DETECTION 檢出 .....	6-5-30
6.5.23.3 COIL 線圈 .....	6-5-31
6.5.23.4 SOLENOID 電磁閥 .....	6-5-31
6.5.24 SPINDLE THERMAL COMPENSATION 主軸溫升控制 .....	6-5-32
6.5.25 COOLANT THROUGH SPINDLE CTS 主軸出油 CTS 副水箱 .....	6-5-33
6.5.25.1 DETECTION 檢出 .....	6-5-33
6.5.25.1 COIL 線圈 .....	6-5-33
6.5.25.3 OVERFLOW TIMER 高水位計時器 .....	6-5-34
6.5.25.4 MCC 電磁接觸器 .....	6-5-34
6.5.25.5 MOTOR 馬達 .....	6-5-35
6.5.25.6 CTS ORGANIZATION CHART CTS 系統圖 .....	6-5-35
6.6. APC UNIT FOR SHUTTLE TYPE 直進式 APC 單元 .....	6-6-1
6.6.1 RACK TYPE(TP1) 排齒式 .....	6-6-1
6.6.1.1 APC OPERATOR'S PANEL APC 操作面板 .....	6-6-1
6.6.1.2 APC PB APC 按鍵 .....	6-6-1
6.6.1.3 APC DETECTION APC 檢出 .....	6-6-2
6.6.1.4 APC COIL APC 線圈 .....	6-6-3
6.6.1.5 APC INDICATE APC 指示 .....	6-6-4
6.6.1.6 APC SOLENOID APC 電磁閥 .....	6-6-5
6.6.2 ARM TYPE(TP3) 擺臂式 .....	6-6-6
6.6.2.1 APC OPERATOR'S PANEL APC 操作面板 .....	6-6-6
6.6.2.2 APC PB APC 按鍵 .....	6-6-6
6.6.2.3 APC DETECTION APC 檢出 .....	6-6-7
6.6.2.4 APC COIL APC 線圈 .....	6-6-8
6.6.2.5 APC INDICATE APC 指示 .....	6-6-9
6.6.2.6 APC SOLENOID APC 電磁閥 .....	6-6-10
6.6.2.7 APC RUSH CHIP MOTOR APC 沖屑馬達 .....	6-6-11
6.7. APC UNIT FOR ROTARY TYPE APC 旋轉式單元 .....	6-7-1
6.7.1 β6 SERVO MOTOR TYPE(TP4) β6 馬達式 .....	6-7-1
6.7.1.1 APC PB APC 按鍵 .....	6-7-1
6.7.1.2 APC DETECTION APC 檢出 .....	6-7-2
6.7.1.3 APC COIL APC 線圈 .....	6-7-3
6.7.1.4 APC INDICATE APC 指示 .....	6-7-4
6.7.1.5 APC SOLENOID APC 電磁閥 .....	6-7-5
6.7.1.6 APC RUSH CHIP MOTOR APC 沖屑馬達 .....	6-7-6

6.7.2 PMM β6 SERVO MOTOR TYPE FOR TCV51T (TP5) PMM β6 馬達式.....	6-7-7
6.7.2.1 APC PB APC 按鍵.....	6-7-7
6.7.2.2 APC DETECTION APC 檢出.....	6-7-8
6.7.2.3 APC COIL APC 線圈.....	6-7-9
6.7.2.4 APC INDICATE APC 指示.....	6-7-10
6.7.2.5 APC SOLENOID APC 電磁閥.....	6-7-11
6.7.2.6 PMM β6 SERVO MOTOR PMM β6 伺服馬達.....	6-7-12
6.7.2.6.1 COIL 線圈.....	6-7-12
6.7.2.6.2 MCC 電磁接觸器.....	6-7-12
6.7.2.6.3 PMM EMERGENCY BUTTON 緊急按鈕.....	6-7-12
6.7.2.6.4 PMM APC SERVO UNIT (β6 SERIES) 床台交換伺服單元(β系列).....	6-7-13
6.7.3 PMM β6 SERVO MOTOR TYPE FOR FV56A/T (TP7) PMM β6 馬達式.....	6-7-14
6.7.3.1 APC PB APC 按鍵.....	6-7-14
6.7.3.2 APC DETECTION APC 檢出.....	6-7-15
6.7.3.3 APC COIL APC 線圈.....	6-7-16
6.7.3.4 APC INDICATE APC 指示.....	6-7-17
6.7.3.5 APC SOLENOID APC 電磁閥.....	6-7-18
6.7.3.6 APC RUSH CHIP MOTOR APC 沖屑馬達.....	6-7-19
6.7.3.7 PMM β6 SERVO MOTOR PMM β6 伺服馬達.....	6-7-20
6.7.3.7.1 COIL 線圈.....	6-7-20
6.7.3.7.2 MCC 電磁接觸器.....	6-7-20
6.7.3.7.3 PMM EMERGENCY BUTTON 緊急按鈕.....	6-7-20
6.7.3.7.4 PMM APC SERVO UNIT (β6 SERIES) 床台交換伺服單元(β系列).....	6-7-21

## 7.CONNECTION PIN ASSIGNMENT 腳位連接分配

7.1 SIGNAL I/O 信號之輸入/輸出.....	7-1-1
7.1.1 MAIN OPERATOR'S PANEL PIN ASSIGNMENT 主操作面板腳位之分配.....	7-1-1
7.1.1.1 刀庫操作面板配線，30/40 刀機種.....	7-1-2
7.1.2 I/O MOUDLE <-> OPERATOR PANEL I/O PCB (CE53)	
I/O 模組到操作面盤電路(CE53).....	7-1-3
7.1.3 I/O MOUDLE <-> OPERATOR PANEL I/O PCB (CE54)	
I/O 模組到操作面盤電路(CE54).....	7-1-4
7.1.4 I/O MOUDLE <-> OPERATOR PANEL I/O BOARD (JA3)	
I/O 模組到操作面盤電路(JA3).....	7-1-5
7.1.5 OPERATOR PANEL I/O DISTRIBUTION BOARD <->MPG (P17)	
操作面盤電路到手輪(P17).....	7-1-5
7.1.6 I/O MOUDLE <-> OPERATOR PANEL I/O BOARD (JA3-P)	

I/O 模組到操作面盤(JA3-P).....	7-1-5
7.1.7 I/O MOUDLE <-> OPERATOR PANEL I/O BOARD(P21)	
I/O 模組到操作面盤電路(P21).....	7-1-6
7.1.8 OPERATOR PANEL I/O DISTRIBUTION BOARD (POWER)	
操作面盤轉播站(POWER) .....	7-1-6
7.1.9 OPERATOR PANEL I/O DISTRIBUTION BOARD (LIGHT)	
操作面盤轉播站(POWER) .....	7-1-6
7.2 MS I/O DISTRIBUTION BOARD<-> SIGNAL I/O	
MS 板信號之輸入/輸出 .....	7-2-1
7.2.1 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS1)	
I/O 模組到 MS 盤轉播站(MS1) .....	7-2-1
7.2.2 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS2)	
I/O 模組到 MS 盤轉播站(MS2) .....	7-2-3
7.2.3 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS3)	
I/O 模組到 MS 盤轉播站(MS3) .....	7-2-5
7.2.4 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(MS4)	
I/O 模組到 MS 盤轉播站(MS4) .....	7-2-7
7.2.5 I/O MOUDLE <-> MS I/O DISTRIBUTION BOARD(CHE2)	
I/O 模組到 MS 盤轉播站(CHE2) .....	7-2-9
7.3 TERMINAL I/O PCB CONNECTOR PIN ASSIGNMENT	
輸入/輸出 PCB 板接頭端子腳位分配.....	7-3-1
7.3.1 CONNECTOR I1 I1 接頭.....	7-3-1
7.3.2 CONNECTOR I2 I2 接頭.....	7-3-1
7.3.3 CONNECTOR O1 O1 接頭.....	7-3-2
7.3.4 CONNECTOR O2 O2 接頭.....	7-3-2
7.3.5 CONNECTOR O3 O3 接頭.....	7-3-3
7.3.6 CONNECTOR O4(#2 POT ROTATION MOTOR) O4 接頭.....	7-3-4
7.3.7 CONNECTOR O4(#6 MAGZINE MOTOR) O4 接頭 .....	7-3-5
7.3.8 CONNECTOR EMG EMG 接頭.....	7-3-6
7.3.9 CONNECTOR Z-BRAKE Z-BRAKE 接頭.....	7-3-7
7.3.10 CONNECTOR POWER POWER 接頭.....	7-3-7
7.3.11 CONNECTOR LUBE LUBE 接頭.....	7-3-8
7.3.12 CONNECTOR ATC ATC 接頭 .....	7-3-8
7.3.13 CONNECTOR CHE3 CHE3 接頭.....	7-3-8
7.3.14 CONNECTOR CHE4 CHE4 接頭.....	7-3-8
7.3.15 CONNECTOR SPARE O SPARE O 接頭.....	7-3-9
7.3.16 CONNECTOR SPARE I SPARE I 接頭 .....	7-3-9
7.3.17 MS PLATE<->EXTERNAL I/O PCB(APC1)	
MS 板<->外部 I/O 板(APC1).....	7-3-10

7.3.18 MS PLATE<->EXTERNAL I/O PCB(APC2)	
MS 板<->外部 I/O 板(APC2).....	7-3-10
7.3.19 MS PLATE<->EXTERNAL I/O PCB(APC3)	
MS 板<->外部 I/O 板(APC3).....	7-3-11
7.3.20 MS PLATE<->EXTERNAL I/O PCB(P13X,P13Y,P13Z)	
MS 板<->軸向極限開關(P13X,P13Y,P13Z).....	7-3-12
7.3.21 HEAD LIMIT  頭部檢出.....	7-3-15
7.3.22 MAGAZINE LIMIT  刀庫檢出.....	7-3-15
7.4 AXIS SERVO MOTOR  軸向伺服馬達.....	7-4-1
7.4.1 FEEDBACK CONTROL(JF1,JF2,JF3<->MOTOR)  回授控制.....	7-4-1
7.4.2 VELOCITY CONTROL(JS1A,JS2A,JS3A,JS4A<->AMP)  速度控制 ...	7-4-2
7.4.3 A AXIS POWER CONTROL CONNECTOR  A 軸電樞控制接頭.....	7-4-3
7.4.4 A AXIS FEEDBACK CONTROL CONNECTOR A 軸回授控制接頭.....	7-4-4
7.4.5 CONNECTION PIN ASSIGNMENT(FOR β6 SERVO MOTOR	
TYPE APC)  連接腳位置圖(β6 馬達 APC) .....	7-4-5
7.4.6 SPINDLE POSITION CODER  主軸位置檢出器 .....	7-4-6
7.4.7 CNC JA41<->SPM JA7B  CNC JA41<->主軸驅動器 JA7B .....	7-4-7
7.4.8 DATA INPUT/OUTPUT  資料之輸入／輸出 .....	7-4-8
7.4.9 SERVO MAGAZINEβ(SERIES)  伺服刀庫(β 系列)	7-4-9
7.4.10 CONNECTING THE HIGH-SPEED SKIP  (HDI)	7-4-10

## A.APENDIX  附錄

A.1 THE FLOW CHART OF SAFETY DOOR FUNCTION	
安全門功能使用流程圖 .....	A-1
A.2 THE SERVICE M-CODE OF ATC STEP BY STEP	
供服務人員使用之 M-CODE 換刀步驟.....	A-4
A.3 HOW TO USE PROGARE COOLANT NOZZLE FUNCTION	
如何使用可程式噴嘴功能 .....	A-7
A.4 β6 SERVO MOTOR PARAMETER SETTING(TP4)	
β6 伺服馬達參數設定(TP4) .....	A-9
A.5 ATC TYPE 7 SETTING ATC 7 設定.....	A-13
A.6 ALARM DISPLAY AND CORRESPONDING COUNTERMEASURES	
(WITH PMM SERVO UNIT)  PMM 伺服器警報表 .....	A-17
A.7 PMM β6 SERVO MOTOR (WITH APC TYPE) OPERATION	
操作 PMM 伺服器(用與交換床台) .....	A-29
A.8 N2 SERIES INVERTER DRIVE PARAMETER SETTING	
N2 系列變頻器參數設定 .....	A-33
A.9 DIGITAL PRESSURE SWITCH SETTING	

壓力檢出器設定 .....	A-34
A.10 SPINDLE WARM UP SETTING	
主軸暖機設定 .....	A-36
A.11 SKF OIL AIR UNIT (SKF TOS-EX2 CONTROLLER DC24V-TYPE	
SKF 油氣潤滑單元(SKF TOS-EX2 控制盒 DC24V-型式 .....	A-37
A.12 ATC TYPE 9 SETTING ATC#9 設定 .....	A-38
A.13 CTS ALARM MESSAGE CTS 警報訊息.....	A-41
2020 BASE LIQUID OVERFLOW! 主油槽(底座)水位過高.....	A-41
2021 FILTER OBSTRUCTION B1-B2 ! 過濾器堵塞 .....	A-42
2022 CTS OUT PRESSURE SWITCH! CTS 壓力檢出開關堵塞 .....	A-43
2023 OUT FILTER OBSTRUCTION! CTS 過濾器堵塞.....	A-44
2024 CTS AUXILIARY LEVEL LOW! 副水箱(底座)水位過低.....	A-45

YCM  
PLC MANUAL  
**MV66A**

PLC:MBE3 R09  
(FANUC MXP100i / MXP200i / 18iMB)

VERTICAL MACHINING CENTER  
(FOR SHANK 30/40/50 MACHINE ONLY)

VMCPLCE196  
R009