


Operating Instructions

JF420

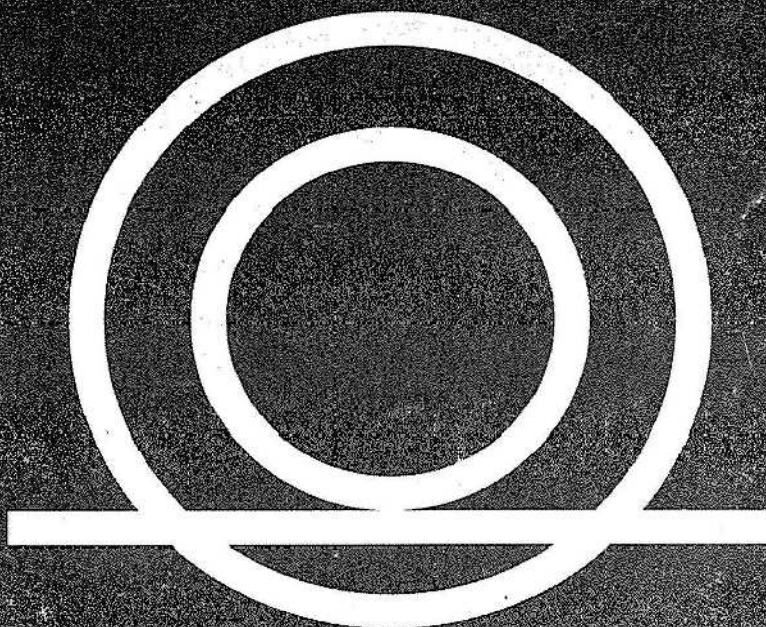

JUNG
Profiltechnik

Table of contents

0. Introduction	1
0.1 Contents.....	1
0.2 Safety of the machine.....	2
0.3 Measures to be taken in the event of damage incurred during transit.....	3
0.4 General Terms of Delivery.....	4
0.5 Warranty terms and conditions for JUNG Grinding Machines.....	5
0.6 Symbols used in this Operating Manual	6
1. Safety	1
1.0 Contents.....	1
1.1 Use for the intended purpose	2
1.2 Safety regulations.....	3
1.2.1 General safety instructions.....	3
1.2.2 Operator qualifications	9
2. Technical data / transportation / commissioning.....	1
2.0 Contents.....	1
2.1 Technical data.....	2
2.2 Noise measurement	4
2.3 Floor space drawing	5
2.4 Transport dimensions.....	6
2.5 Transport instructions.....	7
2.5.1 Transport by crane	8
2.5.2 Transport by fork-lift truck.....	10
2.6 Preparation for commissioning	11
2.7 Storage	13
Temporary storage	13
Installation	13
2.8 Electrical connections.....	14
2.8.1 Connection to power systems with r.c.c.b. circuit-breaker.....	15
2.9 Definition of machine axes	16

3.	Machine control unit with numerical position display.....	1
3.0	Contents.....	1
3.1	Overview of the machine control unit with numerical position display.....	2
3.2	Functional blocks on the machine control unit.....	3
3.2.1	Display functions.....	3
3.2.2	Dresser functions (optional).....	5
3.2.3	Program functions.....	6
3.2.4	Grinding programs.....	7
3.2.5	General machine functions.....	8
3.3	Numerical position display.....	10
3.3.1	General description.....	10
3.3.2	Traversing to the reference point (with or without).....	11
3.3.3	Setting actual values.....	12
3.3.4	Dimensional compensation between the V and Y-axes (optional).....	13
3.3.5	Setting or changing the roughing/finishing transition.....	13
3.3.6	Setting or changing the deceleration point for the grinding head infeed.....	14
3.3.7	Absolute dimension systems 1 - 7.....	15
3.3.8	Residual distance function (delta key) 	16
3.3.9	Selecting the unit of measurement (millimetres or inches) 	16
4.	Functions of the machine.....	1
4.0	Contents.....	1
4.1	Grinding spindle drive.....	2
4.1.1	Automatic "Spindle OFF" function (optional).....	3
4.2	Grinding table drive, X-axis (longitudinal motion).....	4
4.2.1	Manual adjustment.....	4
4.2.2	Hydraulic drive.....	5
4.2.3	Short-stroke function (throttle valve for hydraulic table reversal).....	7
4.2.4	Throttle valve for the table limit position.....	8
4.3	Grinding table drive, Z-axis (cross motion).....	9
4.3.1	Manual adjustment.....	9
4.3.2	Electronic drive.....	10
4.4	Grinding head drive (Y-axis).....	12
4.4.1	Manual adjustment.....	12
4.4.2	Rapid adjustment.....	12
4.4.3	Safety shutdown.....	13
4.4.4	Manual jogging infeed / manual jogging retraction.....	14
4.4.5	Automatic infeed in the grinding programs.....	14
4.4.6	Automatic retraction in the grinding programs.....	15

5.	Grinding programs	1
5.0	Contents	1
5.1	Reciprocating surface grinding	2
5.2	Reciprocating plunge grinding	5
5.3	Plunge grinding with a stationary table (automatic clocked infeed with $X = 0$) (optional)	7
5.4	Creep-feed grinding	9
5.4.1	Creep-feed grinding in down-cut mode	9
5.4.2	Creep-feed grinding in up-cut mode	17
6.	Dressers	1
6.0	Contents	1
	Overview of dressers	2
	General rules for using dressers	3
6.1	Single diamond (optional)	4
6.2	MA65 (optional)	5
6.3	Diaform grinding-wheel profiling tool DG5/1 (optional)	6
6.4	Optidress-E optical profile dressing system (optional)	7
6.5	AF65 (optional)	8
6.6	PA 30K (optional)	10
6.6.1	Adjusting the height of the dressing diamond	12
6.6.2	Adjusting the concentricity of the diamond	13
6.6.3	Procedure for starting the dressing program manually	14
7.	Accessories	1
7.0	Contents	1
7.1	Permanent electromagnetic chucks	2
7.2	Coolant cleaning systems (optional)	4
7.2.1	Connection to the central coolant cleaning system for the optional NS - ZS3	6
7.3	Coolants	7
7.4	Hydraulic-fluid cooler (optional)	11
7.5	Grinding mist extractors (optional)	12
7.6	Grinding wheel flange (optional)	15
7.6.1	Flanging and balancing a grinding wheel	16
7.8	Grinding wheel flange in conjunction with a manual HSK tool-holder (optional)	19

8. Error and status messages.....	1
8.1 Error messages.....	1
9. Maintenance / servicing / disposal.....	1
9.0 Contents.....	1
9.1 Maintenance and servicing instructions	2
<i>Maintenance and service list</i>	<i>3</i>
<i>Maintenance and servicing instructions.....</i>	<i>4</i>
<i>Regular maintenance of the coolant system.....</i>	<i>5</i>
9.2 Lubrication plan.....	6
* Recommended lubricating oils.....	7
** Recommended hydraulic oils	7
Maintenance unit for optional equipment.....	9
Hydraulic plan.....	10
Charging/extracting the hydraulic oil.....	12
9.3 Grinding spindle	14
9.3.1 Eliminating radial runout and releasing tension	14
9.3.2 Removing and installing the grinding spindle.....	15
9.4 Replacing the battery (control unit).....	17
9.5 General troubleshooting	19
9.5.1 Fault list.....	19
9.6 Disposal	20
Disposal of the machine	20
10. Appendixes	1
10.0 Contents.....	1
10.1 We want to know what you think	2
10.2 Form for signatures	3
10.3 Inspection protocol for coolants that can be mixed with water	4