

AIDA

CRANK MOTION 2 POINTS PRESS

FT

INSTRUCTION MANUAL

AIDA ENGINEERING, LTD.

520-02900

CONTENTS

A SPECIFICATION

1. General.....	A1- 1
2. Specification.....	A2- 1
General view.....	3
3. Diagram.....	A3- 1
Tonnage curve.....	1
Timing diagram.....	2

B OPERATION

1. Safety operation.....	B1- 1
2. Working capacity.....	B2- 1
3. Daily and weekly inspection.....	B3- 1
4. Lubrication.....	B4- 1
Outline of lubrication.....	1
Lubrication table.....	2
Comparison table of lubricants.....	4
Die cooling oil.....	8
5. Pneumatic system.....	B5- 1

CONTENTS

B. OPERATION

6. Operating procedure.....	B1- 1
1 Control panel and operating panel.....	1
2 Electric power source.....	2
Starting procedure.....	3
3 Lubrication and air supply.....	4
4 Main motor.....	6
Main Motor Starting Procedure.....	8
5 Press operation.....	9
Press operation procedure.....	13
Clutch and brake solenoid valve test procedure...	15
Procedure for halting or finishing	
Press operation.....	16
6 Missing	
7 Counter.....	17
8 Missing	
9 Safety device.....	18
10 Missing	
11 Feeding equipment.....	19
Feed bar CLAMP ⇌ UNCLAMP procedure.....	23
Operation panel.....	25
7. Adjusting procedure.....	B7- 1
Adjusting upper die holder.....	1
Knockout.....	2
Rotary cam limit switch.....	4
Normal position stopper.....	6
8. Adjusting procedure for automatic machinery.....	B8- 1
Transfer feeder.....	1
Safety coupling.....	2
Feed bar check.....	4
Pusher.....	6
Zigzag unit.....	8

CONTENTS

C MAINTENANCE

1. Installation.....	C1- 1
2. Preparation prior to operation.....	C2- 1
3. Check points at trial run.....	C3- 1
4. Periodical inspection.....	C4- 1
5. Construction and maintenance.....	C5- 1
Replacement of V belt.....	1
Clutch & brake.....	2
Balancer.....	10
Slide gib.....	15
Die cushion.....	17
Transfer feeder.....	20
6. Maintenance of air pressure and oil pressure appliance.....	C6- 1
7. Maintenance of electric devices.....	C7- 1
8. Trouble causes and corrections.....	C8- 1
9. Missing	
10. Parts list.....	C10-1
11. Spare parts list.....	C11-1

CONTENTS

DRAWINGS

1. DIE SPACE	1
2. FOUNDATION	2
3. FOUNDATION (COIL FEEDER LINE)	3
4. DIMENSIONS REQUIRED FOR DISASSY	4
5. PNEUMATIC DIAGRAM	5
6. LUBRICATION DIAGRAM	8
7. ELECTRIC DIAGRAM	11

CONTENTS

D OTHERS INSTRUCTION MANUAL

1. COIL CRADLE... (LM-2532)
2. AIR FEEDER.... (AF-6D)
3. SCRAP CUTTER.. (MSC)
4. PROGRAMMABLE CONTROLLER... (μ T min)
5. MAIN MOTOR.... (VS)