

INSTRUCTION MANUAL

WIRE ELECTRICAL DISCHARGE MACHINE

MGW-G
MGW-H

ALARM MESSAGE
(ALARM, MESSAGE, GUIDE)

MAKINO MILLING MACHINE CO., LTD.

5WC1-ND02-9407(E)

TABLE OF CONTENTS

	Page
1. HOW TO SEE THE ALARM MESSAGE MANUAL	1
1.1 Trouble Remedy List	2
1.2 Resetting Method	2
1.3 Classification of Message Numbers	3
1.4 Confirming Contents of Alarm	3
1.5 Confirming Conditions in Which Alarm Occurs	4
2. DESCRIPTION OF ALARMS	5
3. SYSTEM DOWN	253
3.1 System Down Code List	253
4. MEMORY DUMP PROCEDURE (OCC, OCC2, OCC3)	258
4.1 Memory Dump Procedure (OCC, OCC2: Machine without Automatic Programming Function)	258
4.2 Memory Dump Procedure (OCC3: Machine with Automatic Programming Function)	260