



**MAKINO**

---

---

KE55(Professional EN)  
Electrical Maintenance Manual

MEM-KE55P01/00

---

---

**KE55**

---

## CONTENTS

Chapter 1	Safety .....	Tab 1
Chapter 2	Specifications .....	Tab 2
Chapter 3	Maintenance .....	Tab 3
Chapter 4	Trouble Shooting .....	Tab 4
Appendix A	NC Alarm List .....	Tab A
Appendix B	Maintenance Parts .....	Tab B
Appendix C	Boot System .....	Tab C

# Chapter 1      **Safety**

Introduction, Purpose, Safety Precaution

KE55(Professional EN)  
Electrical Maintenance Manual



Chapter 1  
Safety

Contents

1.1 Safety Precaution ..... 1 - 1  
1.2 Purpose ..... 1 - 4

## Chapter 2 Specifications

Unit Identification, Machine  
Specifications, Electrical Specification,  
CNC Control Specifications

KE55(Professional EN)  
Electrical Maintenance Manual



# Chapter 2 Specifications

## Contents

2.1 Unit Identification .....	2 - 1
2.1.1 CNC Unit .....	2 - 2
2.2 Machine Specifications .....	2 - 4
2.3 Electrical Specifications .....	2 - 6
2.4 CNC Control Specifications .....	2 - 9

## **Chapter 3 Maintenance**

Preventive Maintenance, Replacement  
of NC components

KE55(Professional EN)  
Electrical Maintenance Manual



## Chapter 3 Maintenance

### Contents

3.1 Preventive Maintenance .....	3 - 1
3.2 Replacing Motherboard .....	3 - 2
3.3 Mounting and Demounting Card PCB .....	3 - 3
3.3.1 Demounting a Card PCB .....	3 - 3
3.3.2 Mounting a Card PCB .....	3 - 4
3.4 Mounting and Demounting DIMM Modules .....	3 - 5
3.4.1 Demounting a DIMM module .....	3 - 5
3.4.2 Mounting a DIMM Module .....	3 - 5
3.5 Fuse Replacement .....	3 - 6
3.5.1 Replacing Fuses in Control Unit .....	3 - 6
3.5.2 Replacing Fuse in the Power Supply Module for Drives .....	3 - 7
3.5.3 Replacing Fuse in the Servo Amplifier Module .....	3 - 7
3.5.4 Replacing fuse in I/O modules .....	3 - 8
3.6 Batteries Replacement .....	3 - 11
3.6.1 Replacing Battery for CNC Unit .....	3 - 11
3.7 Replacing Fan Motors in CNC Unit .....	3 - 13

## Chapter 4      **Trouble Shooting**

Trouble shooting the machine, power supply module, servo amplifier module and spindle amplifier module

KE55(Professional EN)  
Electrical Maintenance Manual



## Chapter 4 Trouble Shooting

### Contents

4.1 Overview .....	4 - 1
4.1.1 The PMC Address .....	4 - 1
4.1.2 PMC Address and the Schematics .....	4 - 2
4.1.3 PMC Address and the PMC DI/DO Table .....	4 - 3
4.1.4 Diagnostic Display .....	4 - 3
4.2 Troubleshooting the Machine .....	4 - 4
4.2.1 Alarm Displayed on PMC .....	4 - 4
4.2.2 No Alarm Displayed on Machine Fault .....	4 - 4
4.3 Troubleshooting the Servo System .....	4 - 5
4.3.1 Servo Alarm List .....	4 - 6
4.3.2 Spindle Alarm List .....	4 - 8
4.4 Troubleshooting the Power Supply Module .....	4 - 11
4.4.1 Alarm Code 01 .....	4 - 11
4.4.2 Alarm Code 02 .....	4 - 11
4.4.3 Alarm Code 03 .....	4 - 12
4.4.4 Alarm Code 04 .....	4 - 12
4.4.5 Alarm Code 05 .....	4 - 12
4.4.6 Alarm Code 06 .....	4 - 13
4.4.7 Alarm Code 07 .....	4 - 13
4.5 Troubleshooting the Servo Amplifier Module .....	4 - 14
4.5.1 Abnormal Current Alarms (8,9,A,b,C,d,E) .....	4 - 14
4.5.2 IPM Alarms (8.,9.,A.,b.,C.,d. and E.) .....	4 - 15
4.5.3 Control Power Supply Under Voltage Alarm (2 in LED Display) .....	4 - 16
4.5.4 DC Link Under Voltage Alarm (5 in the LED Display) .....	4 - 16

4.5.5 Fan Stopped Alarm (1 in the LED Display) . . . . . 4 - 16

4.5.6 Current Conversion Error Alarm . . . . . 4 - 16

4.5.7 Overload Alarm . . . . . 4 - 17

4.5.8 Feedback Disconnected Alarm . . . . . 4 - 17

4.5.9 Motor Overheat Alarm . . . . . 4 - 18

4.5.10 Invalid Servo Parameter Setting . . . . . 4 - 18

4.5.11 Pulse Coder Error Alarm . . . . . 4 - 19

4.5.12 Rotation Speed Data Error Alarm . . . . . 4 - 19

4.5.13 Pulse Coder Communication Error Alarm . . . . . 4 - 20

4.5.14 FSSB Alarm . . . . . 4 - 21

4.6 Troubleshooting the Spindle Amplifier Module . . . . . 4 - 21

4.6.1 Alarm A0, A1 . . . . . 4 - 21

4.6.2 Alarm AL-01 . . . . . 4 - 22

4.6.3 Alarm AL-02 . . . . . 4 - 23

4.6.4 Alarm AL-03 . . . . . 4 - 24

4.6.5 Alarm AL-07 . . . . . 4 - 24

4.6.6 Alarm AL-09 . . . . . 4 - 24

4.6.7 Alarm AL-12 . . . . . 4 - 25

4.6.8 Alarm AL-13 . . . . . 4 - 25

4.6.9 Alarm AL-15 . . . . . 4 - 26

4.6.10 Alarm AL-16 . . . . . 4 - 26

4.6.11 Alarm AL-19 . . . . . 4 - 26

4.6.12 Alarm AL-20 . . . . . 4 - 27

4.6.13 Alarm AL-24 . . . . . 4 - 27

4.6.14 Alarm AL-25 . . . . . 4 - 28

4.6.15 Alarm AL-26 . . . . . 4 - 28

4.6.16 Alarm AL-27 . . . . . 4 - 29

4.6.17 Alarm AL-28 . . . . . 4 - 30

4.6.18 Alarm AL-29 . . . . . 4 - 31

4.6.19 Alarm AL-31 . . . . . 4 - 31

4.6.20 Alarm AL-32 . . . . . 4 - 32

4.6.21 Alarm AL-34 .....	4 - 32
4.6.22 Alarm AL-35 .....	4 - 32
4.6.23 Alarm AL-36 .....	4 - 33
4.6.24 Alarm AL-37 .....	4 - 33
4.6.25 Alarm AL-39 .....	4 - 34
4.6.26 Alarm AL-40 .....	4 - 34
4.6.27 Alarm AL-41 .....	4 - 35
4.6.28 Alarm AL-42 .....	4 - 36
4.6.29 Alarm AL-43 .....	4 - 36
4.6.30 Alarm AL-44 .....	4 - 37
4.6.31 Alarm AL-46 .....	4 - 37
4.6.32 Alarm AL-47 .....	4 - 38
4.6.33 Alarm AL-49 .....	4 - 39
4.6.34 Alarm AL-50 .....	4 - 39
4.6.35 Alarm AL-52, AL-53 .....	4 - 39
4.6.36 Alarm AL-54 .....	4 - 40
4.6.37 Alarm AL-55 .....	4 - 40
4.6.38 Alarm AL-56 .....	4 - 41
4.7 PMC Alarm Messages and Remedies .....	4 - 41

## Appendix A NC Alarm List

Program Errors, Background Edit, APC,  
SPC, Servo, Over Travel, Over Heat,  
Rigid Tap, Serial Spindle, System

KE55(Professional EN)  
Electrical Maintenance Manual



## Appendix A NC Alarm List

### Contents

A.1 Program Errors and Operation (P/S) Alarms .....	A - 1
A.2 Background Edit Alarms .....	A - 16
A.3 Absolute Pulse Coder (APC) Alarms .....	A - 16
A.4 Serial Pulse Coder (SPC) Alarms .....	A - 18
A.5 Servo Alarms .....	A - 20
A.6 Over Travel Alarms .....	A - 26
A.7 Overheat Alarms .....	A - 27
A.8 Rigid Tapping Alarms .....	A - 27
A.9 Serial Spindle Alarms .....	A - 28
A.10 System Alarms .....	A - 30

## Appendix B Maintenance Parts

Fanuc Maintenance Parts, Makino  
Maintenance Parts.

KE55(Professional EN)  
Electrical Maintenance Manual



Appendix B  
Maintenance Parts

Contents

B.1 Fanuc Maintenance Parts ..... B - 1  
B.2 Makino Maintenance Parts ..... B - 1

## Appendix C Boot System

Screen Configuration, Operating  
Procedures, Error Messages

KE55(Profesional EN)  
Electrical Maintenance Manual



## Appendix C Boot System

### Contents

C.1 Overview.....	C - 1
C.1.1 Starting the Boot System .....	C - 1
C.1.2 Screen Configuration and Operating Procedure .....	C - 2
C.1.3 System Data Loading Screen .....	C - 4
C.1.4 System Data Check Screen .....	C - 6
C.1.5 System Data Delete Screen .....	C - 8
C.1.6 System Data Save Screen .....	C - 9
C.1.7 SRAM Data Backup Screen .....	C - 11
C.1.8 Memory Card File Delete Screen .....	C - 13
C.1.9 Memory Card Format Function .....	C - 13
C.1.10 Load Basic System Function .....	C - 14
C.2 Error Messages and Required Actions .....	C - 15