

Q16 Metrology Computer

ED50 Optical Edge Detector

ED51 Video Edge Detector

User's Guide

December 21, 1992

MICRO-VU Corporation
7750 Bell Road
Windsor, CA 95492
TEL: (707) 838-6272
FAX: (707) 838-3985

TABLE OF CONTENTS

Foreword	1
Overview	2
Set-Up and Error Correction	3
Operational Key Sequences	5
A. Power On and Zero Reset	5
B. Cartesian X and Y Absolute Measurement	5
C. Polar Conversion	6
D. Metric Conversion	6
E. Incremental Measurement	7
F. Preset	8
G. Skew Calibration	8
H. Skew Mode	9
I. Scale Mode	10
J. Radius and Center Locations	11
K. Multi-Point Radius	12
L. Angle and Vertex Locations	13
M. Store	16
N. Recall Memory	16
O. Clearing Memory	19
P. Midpoint Origin	20
Q. Reference Index	21
Basic Metrology Concepts and Special Applications	22
Polar/Cartesian Concept	22
True Position	23
Incremental/Absolute Concept	23
Rounded Corner, Intersection of 2 Lines & Perpendicularity	24
Bolt Hole Patterns	24
Preset for Metrology	25
Tracing a Radius	25
RS232 Serial Interface	26
PRINT Port	26
XMIT (Transmit) Port	26
Baud Rate Settings	27
RS-232 Communications Parameter	28
Cable Connections	29

Computer Keyboard Translation for Bi-Directional Handshake	29
Appendix A - Theory of Operations	30
Concept of Toggles	30
Power On and Zero Reset	31
Display Toggles	31
Other Display Toggles	32
Skew Calibration	32
"F" (Function) Mode	32
Radius and Angle Modes	32
Preset	33
Memory Computations	33
Printing, RS232 Transmissions and Memory Dumps	34
Error Message	34
Z/REF. Axis	34
Reference Index (RI)	35
Center Find - Midpoint	35
Appendix B - Error Messages	36
Appendix C - Remote Keyboard	37
Appendix D - Back Panel Pictorial	38
Appendix E - Examples of Printed Messages	39
Appendix F - Changing EPROMs	41
Appendix G - Switching the Power Supply	42
Appendix H - Glossary of Technical Terms	43
Supplement - Model ED50 and ED51 Edge Detectors	45
General	45
Theory of Operations (ED50)	45
Theory of Operations (ED51)	46
Alignment Procedure	46
Hardware (ED50)	47
Normal Installation (ED50)	47
Hardware (ED51)	48
Normal Installation (ED51)	48
Operational Key Sequences	48
Error Messages	50
Remote Keyboard Connector and RS232 Codes	51
Troubleshooting	51

SPECTRA SERIES
Optical Comparators

Installation, Operation & Service
June 1992

TABLE OF CONTENTS

MODEL SPECTRA 14 Floor or Bench

UNPACKING INSTRUCTIONS	1
GENERAL INFORMATION:	2
GLASS SCREENS (Figure 1):	2
STAGING:	2
BENCH VS. FLOOR MODELS:	2
Q-16 METROLOGY COMPUTER:	3
1 MINUTE ELECTRONIC PROTRACTOR (Figure 1):	3
OPERATION	4
GENERAL INFORMATION	4
LENS CALIBRATION	4
CENTERLINE MEASUREMENT	4
SCREEN MEASUREMENT	4
1 MINUTE ELECTRONIC PROTRACTOR (Figure 1)	5
OVERLAY MEASUREMENTS	5
PROFILE LIGHT APERTURE (Figure 10)	5
Q-16 METROLOGY COMPUTER	5
SERVICE & CALIBRATION	6
INTRODUCTION	6
STAGE MAINTENANCE	6
GLASS SCREENS	6
PROJECTION LAMPS	6
SURFACE ILLUMINATION LAMP (Figure 4):	6
SURFACE ILLUMINATOR SPLIT MIRROR (Figure 4)	7
Q16 & 1 MINUTE ELECTRONIC PROTRACTOR	7
LINEAR ENCODER (GLASS SCALES) INSTALLATION	7
GLASS MIRROR	7
VERTICAL LEAD SCREW & GEAR ADJUSTMENTS (Figure 10):	7
SETTING MAGNIFICATION (Figure 4)	7
CALIBRATION	7
ADJUSTMENT	7
STAGE CALIBRATION FOR SPECTRA 14	8
Z (FOCUS) AXIS PERPENDICULARITY (Figure 8)	8
CALIBRATION	8
ADJUSTMENT	8
X & Y AXIS SQUARENESS (Figure 9)	8
CALIBRATION	8
ADJUSTMENT	8

LINEAR ACCURACY	8
CALIBRATION	8
ADJUSTMENT	8
LEAD SCREW LASH (Figure 11)	8
TROUBLESHOOTING	9
FIGURES & ILLUSTRATIONS	10
FIGURE 1 SCREEN INSTALLATION & ADJUSTMENT	10
FIGURE 2 DIAL INDICATOR BRACKETS	11
FIGURE 3 Q16 INSTALLATION	12
FIGURE 4 LENS & SURFACE ILLUMINATOR ADJUSTMENT	13
FIGURE 5 PROFILE LIGHT ADJUSTMENT	14
FIGURE 6 GIB SCREW ADJUSTMENT	15
FIGURE 7 WIRING & CABLING DIAGRAM	16
FIGURE 8 "Z" (FOCUS) AXIS PERPENDICULARITY	17
FIGURE 9 "X" & "Y" AXIS PERPENDICULARITY (VERTICAL DRIFT) ...	18
FIGURE 10 VERTICAL DRIVE GEAR ADJUSTMENT	19
FIGURE 11 LEAD SCREW LASH ADJUSTMENT	20

Q16 Manual Update

August 15, 1990

Revised: November 27, 1990 v3.11

Revised: February 28, 1991 v3.20

Revised: December 21, 1992 v3.41

This addendum explains several features that have been added to the Q16 since it was introduced. These features are not in the Q16 manual.

TABLE OF CONTENTS

Two Point Radius (Midpoint)	1
Calculating a Diameter in the RADIUS MODE	2
Three Point ANGLE Calculation	3
Multi-Point ANGLE Calculation	5
Displaying an Angle in Decimal Degrees	7
Complementary Angle $90^\circ - A$	8
PRESET in ANGLE and RADIUS Modes	9
Clearing Memory	10
RECALL MEMORY with Auto-Increment	11
RECALL MEMORY in ANGLE and RADIUS Modes	12
Setting the Origin to an Angle Vertex or Radius Center	13
Zeroing X and Y with a Foot Switch	14
SKEW CAL / SKEW MODE Feature	15
Automatic Skew Axis Selection	16
Multi-Point SKEW Calibration	17
PRINT and XMIT protocol	18
PRINT and XMIT Memory	19
Display ROM Information	21
Setting Up a Rotary Encoder	22
Changing the Counting Direction	24

Power On in METRIC mode	25
Power On in Z mode	26
Interface Cables	27
E60, E61, and E62	29
Sending Data to a Computer	31
Using SPC (Statistical Process Control)	33
Calibration of Systems with Edge Detection	36
Changing between Rotary and Linear Display	37
Turning Off RS-232 Handshaking	38
Errors on Radius Measurements	39