

OPERATING MANUAL & MAINTENANCE MANUAL

for

TURNING CENTER M-4N

(MAZATROL FUSION 640T)

MANUAL No. : H114WA0022E

Serial No. :

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical Center or Technology Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical Center or Technology Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical Center or Technology Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical Center or Technology Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

CONTENTS

	Page
1 INTRODUCTION	1-1
1-1 List of Manuals to Be Used.....	1-1
1-2 Numbering System for Pages.....	1-1
1-3 Numbering System for Figures and Tables	1-1
2 SAFETY PRECAUTIONS.....	2-1
2-1 Rule.....	2-1
2-2 Basic Safety Items.....	2-1
2-3 Clothing and Personal Safety	2-3
2-4 Safety Items Related to Operation	2-4
2-5 Safety Items Related to Gripping Workpiece and Tooling	2-6
2-6 Safety Items Related to Maintenance.....	2-7
2-7 Safety Items Related to Workplace	2-8
2-8 Safety Items Related to Chip Conveyor.....	2-9
2-9 Safety Equipment	2-9
2-10 Remarks on the Cutting Conditions Recommended by the NC.....	2-9
2-11 Safety Nameplates	2-9
2-12 Precautions on Chuck Mounting and Replacement.....	2-10
2-13 Precautions on Chuck Pressure and Speed	2-11
2-14 Precautions on Rear Flange	2-11
2-15 Precautions on the T-Groove of the Chuck	2-12
3 SPECIFICATIONS OF MACHINE	3-1

3-1	Specification	3-1
3-2	View of Complete System	3-2
3-3	Spindle Speed - Power Diagram	3-3
4	OPERATION PANEL	4-1
4-1	Disposition of Switches and Indicator Lamps	4-1
4-2	Description of Operational Controls	4-3
4-3	Indicator Lamps on the Operating Panel	4-7
4-4	Menu Key Functions	4-7
4-4-1	Coolant menu keys	4-7
4-4-2	Machine menu keys	4-9
4-5	Data I/O Panel	4-12
5	OPERATING EACH MACHINE COMPONENT	5-1
5-1	Turret	5-1
5-2	Hydraulic Tailstock	5-4
5-3	Pressure Adjustment of Power Chuck and Chuck Jaw Operation Switches	5-7
5-4	Relation between Tool Motion Direction and Coordinate System	5-10
6	MOVABLE Z-AXIS ZERO-POINT	6-1
6-1	Parameters	6-1
6-2	Chart for Parameters Re-Setting due to Moved Zero-Point	6-8
7	M CODES	7-1
8	SEQUENCE PARAMETER	8-1

9	ALARM LIST	9-1
10	OPERATION PROCEDURE.....	10-1
11	DOOR INTERLOCK	11-1
11-1	Chucker Type	11-1
11-1-1	Interlock configuration.....	11-1
11-1-2	Switch names and functions	11-2
11-1-3	MACHINE SET UP switch	11-2
11-1-4	Operations	11-3
11-1-5	Alarm list	11-3
11-2	Universal Type	11-4
11-2-1	Interlock configuration.....	11-4
11-2-2	Adjusting the chuck cover interlock switch	11-4
11-2-3	Switch names and functions	11-6
11-2-4	MACHINE SET UP switch	11-7
11-2-5	Operations	11-7
11-2-6	Alarm list	11-8
11-2-7	Cleaning.....	11-8
12	INSTALLATION	12-1
12-1	Preparation for Installation.....	12-1
12-1-1	Power supply required	12-1
12-1-2	Environment.....	12-2
12-1-3	Air source requirements.....	12-4
12-2	Unpacking	12-4

12-3	Cleaning	12-4
12-4	Transportation and Lifting	12-5
12-5	Foundation	12-6
12-6	Temporary Leveling Adjustments	12-7
12-7	Electrical Connections	12-7
12-8	Start-Up Checkups	12-8
12-9	Precision Leveling	12-8
13	NAME AND CONSTRUCTION OF EACH MACHINE PART	13-1
13-1	General View with Major Component Units Description	13-1
13-2	Headstock	13-2
13-3	Adjustment of the V-Belt Tension	13-10
13-4	Feed Mechanism	13-11
13-5	Turret.....	13-21
13-6	Hydraulic Tailstock	13-44
13-7	Coolant Equipment.....	13-47
13-8	Hydraulic Components and Circuit Diagram of the Hydraulic Power Chuck	13-48
14	PREVENTIVE MAINTENANCE	14-1
14-1	Maintenance after Installation.....	14-1
14-2	Lubrication.....	14-2
14-3	Inspection of Bed Level	14-3
14-4	Inspection of Lubricant and Hydraulic Fluid.....	14-4

14-5	Inspection of Headstock Lubricating System	14-4
14-6	Inspection of Hydraulic Power Unit.....	14-5
14-7	Replacing the Line Filter Element of the Hydraulic Cylinder (for Single Turret).....	14-6
14-8	Replacing the Line Filter Element of the Hydraulic Cylinder (for Dual Turret).....	14-7
14-9	Inspection of Pressure Gauge (Thrust Gauge) and Adjustment of Dampener.....	14-7
14-10	Inspection of V-Belts.....	14-8
14-11	Inspection of Wiper.....	14-9
14-12	Inspection of Coolant Equipment.....	14-9
14-13	Inspection of Hydraulic Power Chuck.....	14-10
14-14	Inspection of Electrical Interconnections	14-11
14-15	Inspection of Control Cabinet	14-11
14-16	Warming-Up	14-12
15	TROUBLESHOOTING.....	15-1
15-1	Troubleshooting Procedures	15-1
15-1-1	If the tool has come into contact with the workpiece, chuck or other sections.....	15-1
15-1-2	If the source of the trouble cannot be located.....	15-1
15-1-3	GRAPHIC MAINTENANCE display	15-2
15-2	Headstock	15-5
15-3	Chuck	15-6
15-4	Turret.....	15-8
15-5	X- and Z-Axis.....	15-8

15-6 Tailstock	15-9
15-7 Oil Pan.....	15-10
15-8 Chip Conveyor.....	15-11
15-9 Hydraulic Unit	15-11
15-10 Coolant System	15-13
15-11 Accuracy.....	15-14
16 INSPECTION AND MAINTENANCE	16-1
16-1 Daily Inspection	16-2
16-2 Periodic Inspection	16-4