

# Sodick

NC POWER SUPPLY UNIT FOR EDM

## OPERATION INSTRUCTIONS

### LQ/LN

Before operating the machine, read this manual carefully and make sure that you fully understand the information it contains.

Appoint someone to be responsible for this manual and keep it in a designated place so that it is accessible at all times.

**Ver.2.0**

# TABLE OF CONTENTS

## TABLE OF CONTENTS

	<u>PAGE</u>
1. SAFETY PRECAUTIONS.....	1-1
1-1. FUNDAMENTALS OF SAFE OPERATION.....	1-1
2. SYSTEM CONFIGURATION.....	2-1
2-1. FEATURES .....	2-1
2-2. BASIC CONFIGURATION.....	2-2
2-2-1. Hardware Configuration .....	2-2
2-2-2. Outline of Mode Configuration .....	2-4
2-2-3. Modes .....	2-5
2-2-4. Restrictions on Functions (Switching between Modes).....	2-7
2-3. CONTROLLED AXES .....	2-8
2-4. CONFIGURATION OF EQUIPMENT USED FOR OPERATION .....	2-9
2-4-1. Operation Panel .....	2-9
3. POWERING UP AND SHUTTING OFF THE POWER SUPPLY.....	3-1
3-1. POWERING UP.....	3-2
3-2. SHUTTING OFF THE POWER SUPPLY .....	3-4
3-3. EMERGENCY STOP.....	3-5
4. FUNDAMENTALS OF OPERATION .....	4-1
4-1. GUIDE TO SCREENS.....	4-1
4-1-1. Fields Common to All Screens.....	4-1
4-1-2. Execution Mode/Executed File Display Field .....	4-2
4-1-3. Comment/CRT Command Message Display Field .....	4-2
4-1-4. Date & Time Display Field.....	4-2
4-1-5. Alarm Display Field .....	4-2
4-1-6. Error/Halt/Comment Display Field.....	4-3
4-1-7. Status Display Field 1 .....	4-4
4-1-8. Status Display Field 2 .....	4-5
4-1-9. Status Display Field .....	4-5
4-1-10. Voltmeter Display .....	4-7
4-1-11. Servo Meter.....	4-7
4-1-12. KEYIN Input Window.....	4-8
4-2. DEFINITIONS OF KEYS, SWITCHES AND BUTTONS .....	4-9
4-3. KEYBOARD.....	4-11
4-4. CURSOR.....	4-12
4-4-1. Moving the Cursor by Touching the Screen.....	4-12
4-4-2. Using the Cursor Control Keys on the Keyboard .....	4-13
4-5. BUTTONS .....	4-14
4-5-1. Button ON/OFF Operation .....	4-14
4-5-2. Mode Buttons .....	4-15
4-5-3. HF Buttons .....	4-15

# TABLE OF CONTENTS

	<u>PAGE</u>
4-5-4. Condition Button.....	4-16
4-5-5. Help Button .....	4-18
4-6. NUMERICAL INPUT.....	4-19
4-6-1. Signed Values with Decimal Point .....	4-19
4-6-2. Unsigned Integral Values (3 Digits).....	4-20
4-6-3. Unsigned Values with Decimal Point .....	4-21
4-6-4. Axis and Direction .....	4-22
4-6-5. Unsigned Integral Values (1 Digit) .....	4-23
4-6-6. Input with Axis, Sign and Decimal Point.....	4-24
4-7. OPERATION FLOW .....	4-25
5. PREPARATION FOR MACHINING (MANUAL MODE).....	5-1
5-1. OUTLINE OF MANUAL MODE .....	5-1
5-1-1. Submodes of the Manual Mode .....	5-1
5-1-2. Screen Display .....	5-2
5-2. COORDINATE SETTING FUNCTION (COORD. SET).....	5-3
5-2-1. Coordinate Set (Coord. Set).....	5-3
5-2-2. Half Coordinate Set (Half Set).....	5-5
5-3. AXIS TRAVEL FUNCTIONS (MOVE) .....	5-7
5-3-1. Types of Travel .....	5-7
5-3-2. Travel (Move).....	5-8
5-3-3. Half Travel (Halfway).....	5-10
5-3-4. Limit Travel (Limit).....	5-11
5-4. COORDINATE MEMORY (COORD. REM.).....	5-12
5-4-1. Saving Coordinate Values.....	5-13
5-4-2. Moving to the Saved Coordinate Values.....	5-14
5-5. ELECTRODE CHANGE (EL. CHA.).....	5-15
5-5-1. Electrode Change (El. Cha.: Normal ATC) .....	5-16
5-5-2. Electrode Change (El. Cha.: Shuttle ATC).....	5-17
5-6. ELECTRODE OFFSET (EL. OFS.) .....	5-18
5-6-1. Reference Registration .....	5-19
5-6-2. Electrode Offset Registration .....	5-20
5-6-3. Editing Electrode Offset .....	5-21
5-7. END FACE (APPR. FACE).....	5-22
5-8. COLUMN CENTER .....	5-24
5-9. CORNER .....	5-26
5-10. HOLE CENTER.....	5-28
5-11. RANDOM THREE POINTS (MANUAL).....	5-32
5-12. RANDOM THREE POINTS (AUTO).....	5-34
5-12-1. Random Three Points (Auto, O.D).....	5-35
5-12-2. Random Three Points (Auto, I.D).....	5-37

# TABLE OF CONTENTS

	<u>PAGE</u>
5-13. DISCHARGE ALIGNMENT (DISCH. ALIGN.).....	5-39
5-14. ELECTRODE PARALLEL ALIGNMENT (EL PARA. ALIGN.).....	5-41
5-15. MACHINE OPERATION (T.M.S).....	5-43
5-15-1. Operation for T Code Input .....	5-44
5-15-2. Operation for M Code Input.....	5-45
5-15-3. Operation for S Code Input .....	5-46
6. EDITING NC PROGRAMS (EDIT MODE).....	6-1
6-1. OUTLINE OF EDIT MODE .....	6-1
6-1-1. Submodes of the Edit Mode.....	6-1
6-1-2. Initial Screen .....	6-2
6-1-3. Description of the Memory (RAM).....	6-3
6-1-4. Notes on the Edit Mode.....	6-3
6-2. FILE EDITING OPERATIONS.....	6-4
6-2-1. Creating a New File.....	6-4
6-2-2. Save.....	6-5
6-2-3. Load .....	6-7
6-2-4. File Selection.....	6-9
6-3. CURSOR OPERATIONS IN THE EDIT MODE.....	6-10
6-4. EDIT OPERATIONS.....	6-11
6-4-1. Delete.....	6-11
6-4-2. Selecting Insert/Overwrite Mode .....	6-12
6-4-3. Range Selection.....	6-13
6-4-4. Move .....	6-14
6-4-5. Copy.....	6-15
6-4-6. Cut.....	6-16
6-4-7. Paste .....	6-17
6-4-8. Undo.....	6-18
6-4-9. Redo.....	6-19
6-4-10. Search.....	6-20
6-4-11. Replace .....	6-22
6-4-12. Split Screen.....	6-24
6-4-13. Call File .....	6-27
6-4-14. Subprogram .....	6-28
6-4-15. Insert File .....	6-29
6-5. COMMUNICATION WITH EXTERNAL DEVICES .....	6-30
6-5-1. Serial Input (Option).....	6-31
6-5-2. Serial Output (Option) .....	6-33
6-5-3. Convert.....	6-36
6-5-4. File Clear.....	6-37

# TABLE OF CONTENTS

	<u>PAGE</u>
6-6. FILE OPERATIONS .....	6-38
6-6-1. Screen Configuration .....	6-38
6-6-2. Selecting Files.....	6-41
6-6-3. Copying Files .....	6-43
6-6-4. Deleting Files .....	6-45
6-6-5. Rename.....	6-47
6-6-6. Memory Clear.....	6-49
6-6-7. Recycle Bin Clear.....	6-50
6-6-8. Read-only Attribute .....	6-53
6-6-9. Data Folder Display.....	6-54
6-6-10. Network Refresh (Option) .....	6-55
6-7. CREATING GRAPHIC FILES.....	6-56
6-7-1. Inputting Graphic Drawing Conditions.....	6-56
6-7-2. Drawing Condition Input.....	6-58
6-7-3. Drawing File Select .....	6-60
6-7-4. Draw Cutting Path .....	6-62
6-7-5. Drawing File Save .....	6-65
6-7-6. Magnify.....	6-67
6-7-7. Initial Screen Display.....	6-69
6-7-8. Drawing File Load .....	6-70
6-7-9. Drawing File Delete.....	6-72
6-8. LN ASSIST .....	6-73
6-8-1. LN Assist.....	6-73
7. MDI OPERATION .....	7-1
7-1. OUTLINE OF MDI OPERATION .....	7-1
7-1-1. Displaying the MDI Screen.....	7-1
7-2. PROCEDURE FOR MDI OPERATION .....	7-2
7-2-1. Backward .....	7-2
7-2-2. Forward.....	7-3
7-2-3. Undo.....	7-3
7-2-4. Redo.....	7-3
7-2-5. Load .....	7-4
7-2-6. Save .....	7-5
7-2-7. Clear.....	7-6
7-2-8. Execution .....	7-7
8. EXECUTING NC PROGRAMS (RUN MODE).....	8-1
8-1. SUBMODES OF THE RUN MODE/METHODS FOR EXECUTING PROGRAMS.....	8-1
8-2. NC RUN.....	8-2
8-2-1. Displaying the Initial Screen.....	8-2
8-2-2. Switching Screens.....	8-4
8-2-3. Calling a File for Execution .....	8-5

# TABLE OF CONTENTS

	<u>PAGE</u>
8-2-4. Using the HF Buttons .....	8-6
8-2-5. Executing NC Programs.....	8-8
8-2-6. Screen Display during NC Program Execution .....	8-9
8-2-7. Functions Available during NC Program Execution .....	8-11
8-3. EXTERNAL DEVICE RUN .....	8-12
8-3-1. Serial Run (Option) .....	8-12
9. DISPLAY MODE.....	9-1
9-1. SUBMODES OF THE DISPLAY MODE.....	9-1
9-2. STATUS DISPLAY SCREEN .....	9-2
9-2-1. Displaying the Status Display Screen .....	9-2
9-2-2. Guide to the Basic Screen Display Fields .....	9-3
9-2-3. Setting Cumulative Time .....	9-5
9-2-4. Discharge Graph .....	9-6
9-3. COORDINATE DISPLAY .....	9-7
9-3-1. Coordinate Display (G54 to G959).....	9-7
9-3-2. Custom Display .....	9-8
9-3-3. Far Screen .....	9-8
9-3-4. Displaying the Far Screen.....	9-9
9-3-5. Displaying the Web Browser on the Far Screen (Option) .....	9-10
9-3-6. Viewing an LQ/LN Power Supply from another LQ/LN Power Supply .....	9-10
9-3-7. Status Display .....	9-12
9-3-8. Graphic Display .....	9-13
9-3-9. Discharge Graph .....	9-14
9-3-10. Maintenance: Consumables.....	9-15
9-3-11. Maintenance: History .....	9-16
9-3-12. Maintenance: Maintenance Watch.....	9-17
9-3-13. Bulletin Display.....	9-18
9-3-14. Connection .....	9-19
9-3-14-1. Sending a Message .....	9-19
9-3-14-2. Receiving a Message .....	9-20
9-3-15. File Operation.....	9-21
9-3-16. Run Operation.....	9-22
9-3-17. Management .....	9-23
9-4. MAINTENANCE DISPLAY SCREEN .....	9-24
9-4-1. Configuration of the Maintenance Screen.....	9-24
9-4-2. Consumables .....	9-25
9-4-3. History (Basic Function) .....	9-27
9-4-4. History (Detail Window).....	9-28
9-4-5. Delete.....	9-29
9-4-6. Delete All.....	9-29
9-4-7. Maintenance Watch .....	9-30

# TABLE OF CONTENTS

	<u>PAGE</u>
10. SETTING MODE .....	10-1
10-1. SUBMODES OF THE SETTING MODE .....	10-1
10-2. OPERATION ON THE SETTING SCREEN .....	10-2
10-2-1. Operation for Setting Data .....	10-3
10-3. SETTINGS.....	10-4
10-3-1. Communication Settings .....	10-4
10-3-2. Operation for Serial Settings .....	10-5
10-3-3. Details of Serial Settings .....	10-5
10-3-4. Calendar Setting .....	10-10
10-3-5. Mouse Setting and Touch Panel Calibration.....	10-12
10-3-6. SEIKAnet Setting .....	10-14
10-3-7. Network Setting.....	10-24
10-4. DISK OPERATIONS.....	10-29
10-4-1. Disk Operation Menu .....	10-29
10-4-2. Operation for Data Backup.....	10-31
10-4-3. Operation for Data Restore .....	10-34
10-4-4. Operation for Disk Format.....	10-36
10-4-5. Operation for User Copy .....	10-39
10-4-6. Operation for Automatic File Loading.....	10-42
10-4-7. Download Libraries .....	10-43
10-5. DATA .....	10-44
11. MANAGE MODE .....	11-1
11-1. SUBMODES OF THE MANAGE MODE .....	11-1
11-2. SYSTEM.....	11-2
11-2-1. Displaying the System Menu Screen .....	11-2
11-2-2. Version Update .....	11-2
11-3. CHECK.....	11-3
11-4. PARAMETER .....	11-4
12. UTY MODE.....	12-1
12-1. CONFIGURATION OF UTY MODE .....	12-1
12-2. LORAN EDITING.....	12-1
12-2-1. Editing Loran Patterns.....	12-2
12-2-2. Changing Loran Titles .....	12-4
12-2-3. Deleting Loran Patterns .....	12-5
13. Q <sup>3</sup> vic MODE (FOR LQ).....	13-1
13-1. CONFIGURATION OF Q <sup>3</sup> vic MODE.....	13-1
13-2. DISPLAY OF THE Q <sup>3</sup> vic MODE SCREEN.....	13-2
13-3. SOLID.....	13-3

# TABLE OF CONTENTS

	<u>PAGE</u>
13-4. Q <sup>3</sup> vic FILE OPERATION .....	13-4
13-4-1. Outline of Q <sup>3</sup> vic File Operation.....	13-4
13-4-2. Screen Configuration .....	13-4
13-4-3. Q <sup>3</sup> vic File Operation between LQ Power Supply Units .....	13-7
13-4-4. Drag & Drop Operation .....	13-7
13-4-5. Copying and Pasting Q <sup>3</sup> vic Files.....	13-8
13-4-6. Creating a Folder .....	13-8
14. SYSTEM FILES .....	14-1
14-1. OUTLINE OF SYSTEM FILES .....	14-1
14-2. STRING FILE .....	14-2
14-2-1. Format of the String File.....	14-3
14-2-2. Conversion Format of String File .....	14-4
14-3. COND (CONDITION) FILE.....	14-5
14-4. OFFSET FILE.....	14-6
14-5. NEW FILE.....	14-9
15. SEIKAnet FUNCTION (OPTION) .....	15-1
15-1. OUTLINE OF SEIKAnet FUNCTION.....	15-1
15-2. NC PROGRAM TRANSMISSION .....	15-1
15-2-1. Connection to a Personal Computer .....	15-2
15-2-2. Connection from a Personal Computer.....	15-2
15-2-3. Connection to a FTP Sever (UNIX Computer) .....	15-3
15-2-4. Connection from a UNIX Computer .....	15-3
15-3. WEB SERVICE.....	15-4
15-3-1. Status Display .....	15-5
15-3-2. Graphics Display .....	15-6
15-3-3. Discharge Graph .....	15-7
15-3-4. Maintenance: Consumables.....	15-8
15-3-5. Maintenance: History .....	15-9
15-3-6. Maintenance: Maintenance Watch.....	15-10
15-3-7. Bulletin Display.....	15-11
15-3-8. Connection .....	15-13
15-3-9. File Operation.....	15-16
15-3-10. Run Operation.....	15-18
15-3-11. Management .....	15-19
15-4. WEB BROWSER.....	15-20
15-4-1. Outline of Web Browser .....	15-20
15-4-2. Operating Procedure.....	15-20
16. NETWORK INTERFACE (OPTION).....	16-1
16-1. OUTLINE OF NETWORK INTERFACE .....	16-1
16-2. PROTOCOL .....	16-1

# TABLE OF CONTENTS

	<u>PAGE</u>
16-3. ETHERNET .....	16-1
16-4. CONNECTORS AND CABLES .....	16-2
16-5. TCP/IP .....	16-3
16-6. HTTP .....	16-3
16-7. FTP (FILE TRANSFER PROTOCOL) .....	16-4
16-8. ESSENTIAL NETWORK SETTING .....	16-5
16-8-1. Machine Name .....	16-5
16-8-2. Workgroup Name .....	16-5
16-8-3. Use of DHCP Server .....	16-6
16-8-4. IP Address.....	16-7
16-8-5. Subnet Mask .....	16-7
16-8-6. Default Gateway.....	16-8
16-8-7. DNS Server Address.....	16-8
16-8-8. DNS Domain Name.....	16-8
16-8-9. DNS Domain Suffix .....	16-8
16-8-10. Wins Server.....	16-8
16-9. INFORMATION ON THE COMPUTER TO CONNECT TO LQ/LN POWER SUPPLY .....	16-9
16-9-1. Network Login Account .....	16-9
16-9-2. Shared Name .....	16-9
16-9-3. FTP Login Account.....	16-9
16-9-4. FTP Home Directory .....	16-9
16-9-5. FTP Virtual Directory (/H_disk) .....	16-9
16-10. REQUIRED COMPUTER CONFIGURATION .....	16-10
16-10-1. Shared Name .....	16-10
16-10-2. FTP Directory .....	16-10
16-11. CONNECTION WITH PERSONAL COMPUTER .....	16-11
16-12. NOTES ON CONNECTION FROM PERSONAL COMPUTER TO LQ/LN POWER SUPPLY .....	16-13
16-13. CONNECTION WITH FTP SERVER (UNIX COMPUTER) .....	16-14
16-14. NOTES ON CONNECTION FROM FTP SERVER TO LQ/LN POWER SUPPLY ..	16-16
16-15. EXAMPLE OF DEVICES NECESSARY FOR CONNECTION.....	16-17
16-16. DISPLAY AT THE CONNECTION TO FTP SERVER (UNIX COMPUTER) .....	16-19
16-17. COMPLEX CONFIGURATION.....	16-20
16-18. CAUTIONS ON CABLES .....	16-20
16-19. GLOSSARY OF TECHNICAL TERMS.....	16-21
17. APPENDIX.....	17-1
17-1. TABLES OF SHORT-CUT KEYS .....	17-1
17-1-1. [Cond] and [Help] Buttons .....	17-1
17-1-2. Main Mode Selection.....	17-1
17-1-3. HF Buttons .....	17-1

# TABLE OF CONTENTS

	<u>PAGE</u>
17-1-4. Submode Selection in Manual Mode .....	17-1
17-1-5. Buttons and Operation in Manual - M.D.I Mode .....	17-2
17-1-6. Submode Selection in Edit Mode .....	17-2
17-1-7. Buttons in Edit Mode Tool Bar .....	17-2
17-1-8. Edit Operation in Edit Mode .....	17-3
17-1-9. Window Operation in Edit Mode.....	17-4
17-1-10. Operation in Edit - File Mode .....	17-4
17-1-11. Submode Selection in Run Mode.....	17-4
17-1-12. Operation in Run Mode .....	17-4
17-1-13. Buttons and Operation in Run Mode.....	17-4
17-1-14. Submode Selection in Display Mode .....	17-4
17-1-15. Maintenance in Display Mode .....	17-4
17-1-16. Consumables in Display Mode (Maintenance).....	17-5
17-1-17. History in Display Mode (Maintenance) .....	17-5
17-1-18. Submode Selection in Setting Mode .....	17-5
17-1-19. Operation in Setting Mode .....	17-5
17-1-20. Submode Selection in Manage Mode .....	17-5
17-1-21. Submode Selection in Q3vic Mode .....	17-5
17-2. SERIAL INTERFACE (OPTION) .....	17-6
17-2-1. Outline of Serial Interface.....	17-6
17-2-2. RS-232C Interface Connector.....	17-6
17-2-3. Pin Assignment .....	17-6
17-2-4. Signal Identification .....	17-7
17-2-5. Transmission Speed .....	17-7
17-2-6. Transmission Method.....	17-7
17-2-7. Usable Codes.....	17-8
17-2-8. Connection between NC and I/O Device .....	17-8
17-2-9. NC Data Send/Receive Timing .....	17-10
17-2-10. Relationship between the Settings for "CHARACTER" and "CODE" .....	17-12
17-2-11. Communications using ACK/NAK (Used only when a dedicated external device for Sodick is used) .....	17-13
17-3. NC CODES AND COMMANDS SUPPORTED BY THE GRAPHIC FUNCTION ....	17-14
17-4. CLEANING THE FLOPPY DISK DRIVE .....	17-18