

KOBELCO

Hand Some

PACKAGE TYPE SCREW COMPRESSOR

HM55. 75A-5/6i	HM55. 75A-5/6iH
HM55. 75AD-5/6i	HM55. 75AD-5/6iH
HM55. 75A-5/6s	HM55. 75A-5/6sH
HM55. 75AD-5/6s	HM55. 75AD-5/6sH

INSTRUCTION MANUAL

 **KOBE STEEL, LTD.**

● CONTENTS

Model code 1
Contents 2

● TRANSPORT

Moving the machine
 using a forklift 3
Moving the machine
 using a crane 3
Confirmation of machine 3

● PART NAMES AND FUNCTION

Exterior 4
Component parts 5

● INSTALLATION

Place not to be installed 7
Installation space for
 safe operation 7
Installation in closed rooms 8
Environments of installation
 to be avoided 9
Attention of piping 10
Power supply connection 11

● ITCS ELECTRONIC MONITOR

ITCS electronic monitor 12

● PREPARATION FOR OPERATION

How to operate 17
Operating mode 19
Emergency operation of
 ITCS electronic monitor 22

● DETECT A TROUBLE

Detect a trouble 23
Check before calling
 any service person 24

● POINT OF INSPECTION

Inspection standard 25
Maintenance standard 26
Item list 27
(part list)

● MAINTENANCE

Lubricating oil supply 28
Control of lubricating oil 29
Suction filter cleaning 31
Dust filter cleaning 31
Pressure control valve
 adjusting 31
Control of drain trap 32
Control of motor grease 32

● SPECIFICATIONS

Specifications 33
External dimensions 35
Foundation drawing 39
Angle for mounting 40
System diagram 41
Wiring diagram 42
Insulation test method of
 compressor unit 45

● LONG SUSPENSION

Steps for long suspension 46
Request servicing 46

● SERVICE

Warranty conditions 47

● MAINTENANCE CHART

Maintenance chart 48

Before using
the compressor,
read this instruction
manual thoroughly.

