

**INSTRUCTION MANUAL**

**WIRE ELECTRICAL DISCHARGE MACHINE**

**MGW-G**  
**MGW-H**

**PROGRAMMING**

**MAKINO MILLING MACHINE CO., LTD.**

**5WC1-NF01-9208(E)**

## TABLE OF CONTENTS

	Page
1. INPUT OF PROGRAMS .....	1-1
1.1 Tape Code .....	1-2
1.2 Characters Used In a Program .....	1-2
2. PROGRAM COMPOSITION .....	2-1
2.1 Leader .....	2-2
2.2 Taper Start .....	2-2
2.3 Program Start Area .....	2-2
2.4 Program Area .....	2-3
2.5 Program End .....	2-3
2.6 Tape End Area .....	2-3
3. PROGRAM AREA COMPOSITION .....	3-1
3.1 Blocks .....	3-1
3.2 Program Number .....	3-2
3.3 Comment Area .....	3-2
3.4 Sequence Number (N) .....	3-3
3.5 Block Skip (r) .....	3-4
4. ADDRESS WORDS .....	4-1
4.1 Kinds of Address Words .....	4-1
4.2 Input Format and Range of Command Values .....	4-2
4.3 Decimal Point Input .....	4-5
5. COORDINATE WORDS AND COMMAND METHODS .....	5-1
5.1 Kinds of Coordinate Words .....	5-1
5.2 Least Input Increment .....	5-2
5.3 Machine Coordinate System and Workpiece Coordinate System .....	5-3
5.4 Absolute and Incremental Commands .....	5-6
6. FEED RATE .....	6-1
6.1 Kinds of Feed Rate .....	6-1
6.2 Rapid Traverse .....	6-1
6.3 Dry Run Feed .....	6-2

6.4	F4 Digit Feed .....	6-2
6.5	Machining Feed .....	6-3
6.6	Touch Sensing Feed .....	6-3
7.	PREPARATORY FUNCTIONS (G CODES) .....	7-1
7.1	Kinds of Preparatory Functions .....	7-1
7.2	Coordinate System Setting (G52) .....	7-6
7.3	Absolute and Incremental Commands (G90 and G91) .....	7-15
7.4	Rapid Traverse Linear Interpolation (G00) .....	7-16
7.5	Machining Linear Interpolation (G01) .....	7-17
7.6	Machining Circular Interpolation (G02, G03) .....	7-18
7.7	Wire Radius Compensation (G40, G41 and G42) .....	7-21
7.8	Taper Machining (G50, G51 and G52) .....	7-37
7.9	Dwell (G04) .....	7-51
7.10	Change of Setting Data (O10) .....	7-52
7.11	Work Limits (G22 and G23) .....	7-57
7.12	Taper Corner Arc Insertion (G24) .....	7-60
7.13	Spiral Interpolation (G25) .....	7-66
7.14	Rotation Copying (G26) .....	7-69
7.15	Automatic Return to and from the Reference Point (G28 and G29) .....	7-78
7.16	Corner Shape Control (G43 and G44) .....	7-81
7.17	Corner Override (G45, G46) .....	7-83
7.18	Scaling (G47 and G48) .....	7-85
7.19	Same radius on the top and the bottom faces (G49) .....	7-89
7.20	Machining Coordinate System (G53) .....	7-81
7.21	Work Coordinate System Selection (G54 - G61) .....	7-92
7.22	Rotation (G68 and G69) .....	7-95
7.23	Mirror Image (G70 and G71) .....	7-100
7.24	X/Y axis change (G72 and G73) .....	7-105
7.25	Workpiece Edge Positioning (G75) .....	7-109
7.26	Hole Centering (G77) .....	7-111
7.27	Wire Vertical Adjustment (G78) .....	7-113
7.28	Corner Edge Positioning (G79) .....	7-115

7.29 Groove Width Centering Positioning (G80).....	7-118
7.30 Plate Width Centering in X axis (G81).....	7-119
7.31 Plate Width Center Positioning on the Y axis (G82).....	7-121
7.32 Cylinder Center Measurement (G83).....	7-122
7.33 Workpiece Parallelism Measurement on the X axis (G84).....	7-125
7.34 Work Parallelism Measurement on the Y axis (G85).....	7-127
7.35 Automatic Measurement Machining (G86, G87).....	7-128
7.36 Automatic Wire (G89) → Automatic Wire Threading.....	7-136
7.37 Z Axis Position Control (G85).....	7-138
7.38 Output to RS232C (G150 ~ G153).....	7-141
7.39 Drawing Restriction (G580 ~ G583).....	7-145
7.40 Inch Mode Diameter Compensation x10 Resolution (G918, G919).....	7-147
<b>8. DIRECTIONS ON A MULTIPLE COMMAND OF G25, G48, G68, G71, G73, ETC. ....</b>	<b>8-1</b>
8.1 Multiple Command Processing Procedures.....	8-1
8.2 Coordinate System Changeover at the Time a Multiple Command is Executed (When mirror axis locking is off).....	8-2
8.3 Coordinate System Setting at the Time a Multiple Command is Executed (Except for coordinate system rotation, mirror axis locking).....	8-5
8.4 Mirror Axis Locking.....	8-5
<b>9. MISCELLANEOUS FUNCTIONS (M CODES).....</b>	<b>9-1</b>
9.1 Kind of Miscellaneous Functions.....	9-1
9.2 Program Stop (M00).....	9-2
9.3 Optional Stop (M01).....	9-4
9.4 End of Program (M02).....	9-5
9.5 Discharge off (M05).....	9-6
9.6 Automatic Wire Loading (M06).....	9-6
9.7 Automatic Wire Threading Position Update (M06L1).....	9-9
9.8 Intermediate Point Programming Function for Wire Break/ Power Failure Recovery (M06P_G_R_).....	9-10
9.9 Automatic Wire Cutoff (M07).....	9-12
9.10 Machining ON/OFF (M17 and M18).....	9-14
9.11 Initial Hole Machining (M20).....	9-15
9.12 Work Tank Filling ON/OFF (M28 and M29).....	9-15

9.13 End of Program and Rewind (M30) .....	9-17
9.14 Water Conductivity Check (M40) .....	9-17
9.15 Water Flow Rate Control (M72) .....	9-20
9.16 Process Skip and Additional Machining (M74) .....	9-21
9.17 Reference Hole Retry (M75) .....	9-25
9.18 Subprograms (M88 and M89) .....	9-26
<b>10. MACHINING CONDITION SELECTION (E NUMBER) .....</b>	<b>10-1</b>
10.1 Machining Condition Selection Method .....	10-1
10.2 Directions on Programming E Numbers .....	10-2
<b>11. OTHER FUNCTIONS .....</b>	<b>11-1</b>
11.1 Vertical Irregular Shape Mode (P0, P1, P2) .....	11-2
<b>12. PREPARATION AND EDITING OF PROGRAMS BY AN AUTOMATIC PROGRAMMING DEVICE .....</b>	<b>12-1</b>
12.1 Classification of Addresses Used by this NC Device .....	12-1
12.2 Preparation of Programs by an Automatic Programming Device .....	12-1
12.3 Program Editing Methods .....	12-2
12.4 Examples of Program Editing .....	12-4
<b>13. METRIC SYSTEM, INCH SYSTEM AND RESOLUTION .....</b>	<b>13-1</b>
<b>14. INQUIRY .....</b>	<b>14-1</b>