


DRIVE UNITS

BL II -D/VAC II /VAC III

MAINTENANCE MANUAL (4th Edition)

Pub.No.3727-E-R3 (SE34-001-R4) June 1995

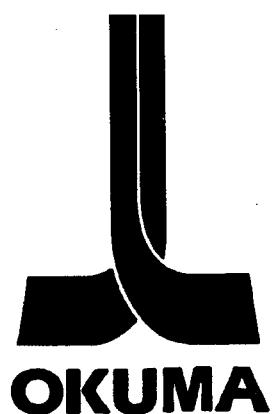

CONTENTS

A; BLII-D TYPE

B; VACIII

**C; SPINDLE DRIVE UNIT FOR VACII MOTOR
(OKUMA MAKE)**

This book contains several instruction manuals. Some instruction manuals might be for those specifications which are not selected by the user.

Refer to the Final Specifications of your machine for details.

TABLE OF CONTENTS

	PAGE
A; BLII-D TYPE A	
SECTION 1 OUTLINE	A1
SECTION 2 CONFIGURATION AND CONNECTION	A2
1. Configuration	A2
1-1. Total System Configuration	A2
1-2. Unit Type	A3
1-3. Unit Configuration	A3
2. Unit Structure	A4
3. Connections	A5
3-1. Connection Diagram	A5
3-2. Screw Size Used on BLII-D Type A Terminal Base	A6
3-3. Connectors	A6
3-4. Connector Pin Layout	A7
SECTION 3 OPERATION STATUS INDICATION	A8
1. Status Indicating Lamps	A8
2. Monitoring Function	A8
3. Servo Reset Function	A9
4. Layout Drawing of Status Indicating Lamps, Check Pins, Reset Switch	A10
5. Abnormality Detecting Function	A11
SECTION 4 TROUBLESHOOTING	A12
1. Trouble and Troubleshooting	A12
1-1. The Indicating Lamp PON Does Not Light Up	A13
The Indicating Lamp LOSS Lights Up	
1-2. The Indicating Lamp OCM Lights Up	A13
1-3. The Indicating Lamp OCS Lights Up	A14
1-4. The Indicating Lamp OV Lights Up	A15
1-5. The Indicating Lamp UV Lights Up	A16
1-6. The Indicating Lamp BOH Lights Up	A16
1-7. The Indicating Lamp ROH Lights Up	A17

	<u>PAGE</u>
1-8. The Circuit Protector Trips	A17
1-9. The WARNING CHARGE Lamp Does Not Go OFF with the Circuit Protector OFF	A17
1-10. The Motor Hunts	A18
SECTION 5 MAINTENANCE AND INSPECTION	A19
1. Maintenance Instruments and Parts	A19
2. Semiconductor Elements Inspection and Replacement Method	A20
2-1. IGBT Module Inspection Procedure	A20
2-2. Diode Module Inspection Procedure	A22
2-3. Procedure for Replacing Semiconductor Elements in Main Circuit	A23
 B; VACIII	
SECTION 1 OUTLINE	B1
SECTION 2 CONFIGURATION AND CONNECTION	B2
1. Configuration	B2
1-1. Total Unit Configuration	B2
1-2. Major Component Parts Arrangement	B3
2. Connections	B10
2-1. Connection Diagrams	B10
2-2. Terminal Block Size on the VACIII Drive Unit	B10
SECTION 3 OPERATION STATUS INDICATION	B19
1. Control PCB Operation Status Indicating Lamps	B19
2. Operation Status Indicating Lamps	B20
2-1. Normal Operation Status Indication	B21
2-1. Failure Operation Status Indication	B22
SECTION 4 TROUBLESHOOTING	B31
1. Confirmation of Power Supply and Connectors	B31
2. Trouble and Troubleshooting	B32

	<u>PAGE</u>
2-1. POWER LED Does Not Light Up LOSS LED Light Up	B33
2-2. LED's Show Failure Occurrence Condition	B34
2-3. Motor Hunts	B46
2-4. Commanded Motor Speed Cannot be Obtained Motor Does Not Rotate	B47
2-5. Low Cutting Performance	B48
2-6. Long Acceleration and Deceleration Time	B48
2-7. Excessive Vibration and Noise While the Motor is Rotating	B49
3. Recovery from Failure Status	B50
SECTION 5 MAINTENANCE AND INSPECTION	B51
1. Instruments and Parts Used for Maintenance	B51
2. Semiconductor Elements Inspection and Replacement Method	B53
2-1. IGBT Module Inspection Procedure	B53
2-2. Gate Circuit Inspection Procedure	B55
2-3. Diode Module Inspection Procedure	B55
2-4. Procedure for Replacing Semiconductor Elements in Main Circuit	B56
3. Fuse Replacement	B57
3-1. Fuse Blown Condition	B57
3-2. Inspection and Replacement Procedure for Fuses	B58
3-3. Fuse Rating	B58
4. Replacing Control PCB and Power Supply Unit	B59
4-1. Control PCB Replacement Procedure	B59
4-2. Power Supply Unit Replacement Procedure	B60
4-3. VACIII Drive Unit Assembly Replacement Procedure	B61
4-4. Trial Operation Procedure	B61
SECTION 6 APPENDIX	B62
1. ROM and File Name for VACIII Drive Unit	B62
1-1. ROM for VACIII Drive Unit	B62
1-2. File in the Control Floppy Disk	B62
2. Check Terminals	B64
3. Method of Inspecting Optical Fiber Cable	B68

C; SPINDLE DRIVE UNIT FOR VAC II MOTOR (OKUMA MAKE)

SECTION 1	OUTLINE	C1	
SECTION 2		CONSTRUCTION AND CONNECTION	C2
1.	Construction	C2	
1-1.	Major Component Parts Arrangement	C2	
2.	Connections	C7	
2-1.	Standard Specification	C7	
2-2.	Winding Changeover Specification VAC Motor	C14	
SECTION 3	OPERATION STATUS INDICATION	C17	
1.	Control PCB Operation Status Indicating Lamps	C17	
2.	Operation Status Indicating Lamps	C18	
2-1.	Normal Operation Status Indication	C18	
2-2.	Failure Operation Status Indication	C19	
SECTION 4	INSPECTION AND MAINTENANCE	C28	
1.	Instruments and Parts Used for Maintenance	C28	
2.	Inspection and Replacement Procedure for Semi-conductor Devices	C30	
2-1.	Transistor Module Inspection Procedure	C30	
2-2.	Base Circuit Transistor Inspection Procedure	C32	
2-3.	Diode Module Inspection Procedure	C32	
2-4.	Procedure to Replace Main Circuit Semi-conductor Devices	C34	
3.	Fuse Replacement	C35	
3-1.	Fuse Blown Condition	C35	
3-2.	Inspection and Replacement Procedure for Fuses	C35	
3-3.	Fuse Rating	C36	
4.	Replacing Control PCB and Power Supply Unit	C37	
4-1.	Control PCB Replacement Procedure	C37	
4-2.	Power Supply Unit Replacement Procedure	C38	
4-3.	VAC Drive Unit Assembly Replacement Procedure	C39	
4-4.	Trial Operation Procedure	C40	

	<u>PAGE</u>
SECTION 5 TROUBLESHOOTING	C41
1. Confirmation of Power Supply and Connectors	C41
2. Trouble and Troubleshooting	C42
3. Recovery from Failure Status	C59
APPENDIX 1 ROM AND FILE NAME FOR HIGH-PRECISION VAC DRIVE UNIT	C60
1. ROM for High-Precision VAC Drive Unit	C60
1-1. Mounting Place	C60
1-2. ROM Name	C60
2. File in the Control Floppy Disk	C60
2-1. Type of File	C60
APPENDIX 2 CHECK TERMINALS	C61