

# **PROGRAMMING MANUAL**

for

**MAZATROL FUSION 640T  
MAZATROL FUSION 640T NEXUS  
MAZATROL FUSION 640TN**

**- MAZATROL PROGRAMMING -  
2-Axis Specification**

**MANUAL No. : H734PA0091E**

**Serial No. :**

***Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.***

## **IMPORTANT NOTICE**

- 1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.**
- 2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.**
- 3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.**
- 4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.**
- 5. Always keep this manual near the machinery for immediate use.**
- 6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.**

**Issued by Manual Publication Section, Yamazaki Mazak Corporation, Japan**

## CONTENTS

	Page
1 MAZATROL PROGRAM CONFIGURATION.....	1-1
1-1 Program Configuration .....	1-1
2 PROGRAM COORDINATE SYSTEM.....	2-1
3 PROGRAM CREATION.....	3-1
3-1 Common Unit .....	3-5
3-1-1 Setting unit data (common data) .....	3-5
3-2 Materials Shape Unit (MTR) .....	3-8
3-2-1 Setting unit data .....	3-8
3-2-2 Setting sequence data.....	3-8
3-3 Bar-Materials Machining Unit (BAR).....	3-11
3-3-1 Setting unit data .....	3-11
3-3-2 Setting sequence data.....	3-15
3-4 Copy-Machining Unit (CPY) .....	3-20
3-4-1 Setting unit data .....	3-20
3-4-2 Setting sequence data.....	3-22
3-5 Corner-Machining Unit (CNR) .....	3-22
3-5-1 Setting unit data .....	3-23
3-5-2 Setting sequence data.....	3-24
3-6 Edge-Machining Unit (EDG) .....	3-25
3-6-1 Setting unit data .....	3-25
3-6-2 Setting sequence data.....	3-26
3-7 Threading Unit (THR) .....	3-28

3-7-1	Setting unit data .....	3-28
3-7-2	Setting sequence data.....	3-32
3-8	Grooving Unit (GRV) .....	3-35
3-8-1	Setting unit data .....	3-35
3-8-2	Setting sequence data.....	3-39
3-9	Drilling Unit (DRL).....	3-43
3-9-1	Setting unit data .....	3-43
3-9-2	Setting sequence data.....	3-47
3-10	Tapping Unit (TAP).....	3-48
3-10-1	Setting unit data .....	3-48
3-10-2	Setting sequence data.....	3-51
3-10-3	New auto-setting scheme for pipe thread tapping.....	3-52
3-11	Manual Program Machining Unit (MNP) .....	3-54
3-11-1	Setting unit data .....	3-54
3-11-2	Setting sequence data.....	3-56
3-12	M-Code Unit (M) .....	3-60
3-12-1	Setting unit data (M-code) .....	3-60
3-12-2	M-code list.....	3-61
3-13	Subprogram Unit (SUB).....	3-68
3-13-1	Setting unit data .....	3-68
3-13-2	Setting sequence data.....	3-68
3-13-3	Help function on macroprograms .....	3-69
3-14	End Unit (END).....	3-73
3-14-1	Setting unit data .....	3-73

3-15 Measurement Unit (MES) .....	3-76
<b>4 TPC DATA SETTING .....</b>	<b>4-1</b>
4-1 Operating Procedure for Setting TPC (Tool-Path Control) Data.....	4-1
4-2 Description of Each TPC Data Item for Turning Units and Measurement Units .....	4-3
<b>5 PROGRAM EDITING .....</b>	<b>5-1</b>
5-1 Unit Search.....	5-2
5-2 Copy.....	5-3
5-2-1 Program copy.....	5-4
5-2-2 Unit copy.....	5-5
5-2-3 Machining-shape copy .....	5-5
5-3 Line Insertion.....	5-6
5-4 Line Deletion .....	5-8
<b>6 PROGRAM CREATING/EDITING FUNCTIONS.....</b>	<b>6-1</b>
6-1 Help Function .....	6-1
6-2 Automatic Crossing-Point Calculation Function in the Turning Unit .....	6-2
6-3 Automatic Cutting-Conditions Setting Function .....	6-9
6-4 Tool Auto-Setting.....	6-12
6-5 Tool Data Window.....	6-14
<b>7 SAMPLE PROGRAMS .....</b>	<b>7-1</b>
<b>8 THREE-DIGIT G-FORMAT.....</b>	<b>8-1</b>
8-1 Outline .....	8-1

8-2      Detailed Description ..... 8-1