

MACHINE TOOLS  
**TAKISAWA**<sup>®</sup>

# TF-2 PARTS LIST

HY04260

CONTENTS

	PAGE
1. HEADSTOCK (HY06001-000, 1/2) .....	1-1, 1-2
HEADSTOCK (HY06001-000, 2/2) .....	1-3, 1-4
2. X-AXIS FEED DEVICE (HR30001C000) .....	2-1, 2-2
X-AXIS FEED DEVICE (HY10003-000) .....	2-3, 2-4
3. LIMIT SWITCH FOR X-AXIS (HR32001A000) .....	3-1, 3-2
LIMIT SWITCH FOR X-AXIS (HY10004-000) .....	3-3, 3-4
4. Z-AXIS FEED DEVICE (HY11003-000) .....	4-1, 4-2
5. LIMIT SWITCH FOR Z-AXIS (HR22001-000) .....	5-1, 5-2
LIMIT SWITCH FOR Z-AXIS (HY11004-000) .....	5-3, 5-4
6. BED (HY15001-000) .....	6-1, 6-2
7. CARRIAGE & CROSS SLIDE (HR21001B000) .....	7-1, 7-2
CARRIAGE & CROSS SLIDE (HY17002-000) .....	7-3, 7-4
8. TURRET (HY20001-000A, 1/2) .....	8-1, 8-2
TURRET (HY20001-000A, 2/2) .....	8-3, 8-4
TURRET (HY20002-000A, 1/2) .....	8-5, 8-6
TURRET (HY20002-000A, 2/2) .....	8-7, 8-8
9. TOOLING (HR42050D000) .....	9-1, 9-2
10. COVER (HY30001-000B, 1/2) .....	10-1, 10-2
COVER (HY30001-000B, 2/2) .....	10-3, 10-4
COVER (HY33002-000A) .....	10-5, 10-6
COVER (HY34001-000A) .....	10-7, 10-8
11. HYDRAURIC (HY40001-000A) .....	11-1, 11-2
12. TAILSTOCK (HY51001-000) .....	12-1, 12-2