

HORIZONTAL MACHINING CENTER

A55

Version D

INSTRUCTION MANUAL



WARNING

- 1. Do not operate, maintain, or inspect the machine before you read intensively and understand this Instruction Manual.**
- 2. Store this Instruction Manual with care so that you can consult it as necessary in performing operation, maintenance or inspection of the machine.**



CONTENTS

SAFETY

- A. SPECIFICATIONS
- B. INSTALLATION
- C. OPERATION: MACHINE PROPER
- D1. OPERATION: SPINDLE HEAD
- E1. OPERATION: ATC (Automatic Tool Changer)
- F1. OPERATION: PALLET CHANGER
- F2. OPERATION: PALLET MAGAZINE
- F3. OPERATION: MULTI-LEVEL PALLET MAGAZINE
- G1. OPERATION: 5°/1° (5 DEGREE/1 DEGREE)
INDEXING TABLE
- G2. OPERATION: NC ROTARY TABLE
- H1. OPERATION: CHIP DISPOSAL DEVICE
(STANDARD TANK)
- H2. OPERATION: CHIP DISPOSAL DEVICE
(LIFT-UP CONVEYOR)
- H3. OPERATION: SECONDARY DISPOSAL DEVICE
- J1. OPERATION: COOLANT SUPPLY DEVICE
- X. DAILY INSPECTION

SAFETY

1.	SAFETY INFORMATION	1.1- 1
1.1	Important Information	1.1- 1
1.1.1	Utilizing safety devices	1.1- 1
1.1.2	General precautions on machine handling	1.1- 2
1.1.3	Precautions on inspection	1.1- 3
2.	WARNING LABELS	2.1- 1
2.1	Location of Warning Labels	2.1- 1
2.1.1	Door on machining chamber	2.1- 1
2.1.2	Inside of machining chamber	2.1- 2
2.1.3	Pallet stocker	2.1- 2
2.1.4	ATC magazine door	2.1- 3
2.1.5	Chip conveyor	2.1- 3
2.1.6	Rear of machine	2.1- 4
2.1.7	Inside covers at machine rear	2.1- 4
2.2	List of warning	2.2- 1



A. SPECIFICATIONS

CONTENTS

1. Outline	A-1
1.1 Machine Appearance and Component Names	A-1
1.2 Outline of Machine and Component Structure	A-3
2. Machine Specifications	A-5
2.1 Machine Proper	A-5
3. Main Dimensions	A-9



B. INSTALLATION

CONTENTS

1. Installation	B-1
1.1 Providing Proper Location	B-1
1.2 Environment	B-3
1.3 Power Source and Air Source	B-4
1.4 Installation of Machine	B-5
1.5 Connection of Power Source and Air Source	B-6
2. Preparations for Operation	B-7
2.1 Wiping Off of Rust Prevention Oil	B-7
2.2 Removal of Clamps	B-7
2.3 Supplying with Oil after Installation	B-8
2.4 Turning On Power	B-8



C. OPERATION: MACHINE PROPER

CONTENTS

1. Outline of Machine	C- 1
1.1 Component Names	C- 1
1.2 Machine Controls	C- 2
2. Safety Precautions	C- 8
3. MAIN CONTROL PANEL	C- 10
3.1 Handling Main Control Panel	C- 11
3.1.1 NC POWER ON/OFF	C- 11
3.1.2 EMERGENCY STOP	C- 11
3.1.3 NC program start and stop	C- 12
3.1.4 Operation mode selecting switches	C- 13
3.1.5 NC function switches	C- 15
3.1.6 Coolant switches.....	C- 17
3.1.7 Machine function switches	C- 18
3.1.8 SPINDLE START/STOP and TOOL UNCLAMP switches	C- 20
3.1.9 Machine status display	C- 21
3.1.10 OT RELEASE and ALARM RESET switches	C- 22
3.1.11 Key switches	C- 22
3.1.12 Single-Touch Function Switches	C- 23
3.1.13 JOG switches.....	C- 26
3.1.14 Rotary switches	C- 26
3.1.15 Flexible switches on main control panel	C- 28
4. Emergency Stop	C- 31
4.1 Emergency Stop Status	C- 31
4.2 Restoring Operation After Emergency Stop.....	C- 31

D1. OPERATION: SPINDLE HEAD

CONTENTS

1. Outline of Spindle Head.....	D1-1
1.1 Part Names	D1-1
1.2 Spindle Head Controls	D1-2
2. Basic Specifications.....	D1-3
2.1 Spindle Speed and Output.....	D1-3
2.2 Types of Tools	D1-3
2.3 Lubrication and Cooling System	D1-3
2.4 Operation Procedure	D1-3
3. Precautions on Operation.....	D1-4
3.1 Precautions when Starting Operation	D1-4
3.2 Precautions when Stopping Operation	D1-4
4. Operation.....	D1-5
4.1 Spindle Status Display.....	D1-5
4.2 Emergency Stop	D1-5
4.3 Tool Clamping/Unclamping	D1-6
4.4 Spindle Speed Commands (S function).....	D1-7
4.5 Torque Changeover	D1-8
4.6 Starting and Stopping Spindle (M3, M4, M5).....	D1-9
4.7 Spindle Orientation (M19).....	D1-9
4.8 Spindle Override (M58, M59).....	D1-10
5. Spindle Lubrication	D1-11
5.1 Under Race Method.....	D1-11

D1. OPERATION: SPINDLE HEAD



6.	Cooling of Spindle	D1-12
6.1	Spindle Cooling Oil Temperature Controller	D1-12
6.2	Cooling Oil	D1-12
7.	Restoring Operation After Trouble	D1-13
7.1	Maintenance Switch Operation	D1-13

E1. OPERATION: ATC (Automatic Tool Changer)

CONTENTS

1. General Description of ATC Unit	E1-1
1.1 Part Names	E1-1
1.2 ATC Controls	E1-4
2. Basic Specifications	E1-6
2.1 Number of Tools	E1-6
2.2 Indexing Method (40 - or 60 - tool magazine)	E1-6
2.3 Indexing Method (128 - or 208 - tool magazine)	E1-6
2.4 Feed Axis Tool Exchange Position	E1-7
2.5 Operation Procedure	E1-7
2.6 Tool Mass and Size Limitations	E1-7
3. Use of ATC Operation Panel	E1-10
3.1 ATC Operation Panel	E1-10
3.2 ATC Operation Panel Switches	E1-10
3.3 Loading Tools on ATC Magazine	E1-12
4. Preparations for Operation and Planning Tool Arrangement	E1-14
4.1 Deciding Tool Numbers	E1-14
4.2 Tool Arrangement on Magazine	E1-14
4.2.1 Large Diameter Tool Arrangement (40- or 60-tool magazine)	E1-15
4.2.2 Large Diameter Tool Arrangement (128 - or 208 - tool magazine)	E1-15
4.3 Tool Number Registration	E1-15

E1. OPERATION: ATC (Automatic Tool Changer)



5. Operation	E1-16
5.1 ATC Status Display	E1-16
5.2 Emergency Stop	E1-17
5.3 T Functions	E1-17
5.3.1 Spindle Tool Verification	E1-17
5.3.2 Tool Number Registration	E1-18
5.3.3 Tool Indexing	E1-19
5.3.4 Tool Return Function (T0)	E1-19
5.3.5 Alarm when T Function is Executed	E1-20
5.3.6 Emergency Stop During Tool Indexing	E1-20
5.4 Automatic Tool Exchange Function (M06)	E1-21
5.4.1 Alarm when M06 is Executed	E1-22
5.4.2 Emergency Stop During Tool Exchange	E1-22

F1. OPERATION: PALLET CHANGER

CONTENTS

1. Outline of Pallet Changer	F1-1
1.1 Part Names	F1-1
2. Basic Specifications	F1-3
2.1 General Specifications	F1-3
2.2 Workpiece Limitations	F1-3
2.3 Pallet Changer Safety Guard	F1-4
3. Use of Pallet Stocker Operation Panel	F1-5
3.1 Emergency Stop Button	F1-5
3.2 Pallet Ready Button	F1-6
3.3 Feed Hold Button	F1-6
4. Pallet Stocker Operation	F1-7
5. Operation	F1-8
5.1 Pallet Change Function (M60)	F1-8
5.2 Alarm when M60 is Executed	F1-9
5.3 Pallet Load Check Function (M84, M95)	F1-9
5.4 Management Program	F1-10

F2. PALLET MAGAZINE OPERATION

CONTENTS

1. Outline of Pallet Magazine	F2-1
1.1 Part Names	F2-1
2. Basic Specifications	F2-2
2.1 General Specifications	F2-2
2.2 Options	F2-3
3. Pallet Magazine Operation Panel	F2-4
3.1 Buttons on Panel	F2-4
4. Preparations for Operation	F2-9
4.1 Pallet Indexing	F2-9
4.2 Pallet Rotation	F2-9
4.3 Pallet Ready Set	F2-10
5. Random Operation	F2-12
5.1 Starting Random Operation	F2-12
5.2 Operation Program	F2-13
5.3 Non-Random Operation	F2-15
5.4 Alarms	F2-16

F3. OPERATION: PALLET CHANGER

CONTENTS

1. Outline of Multi-level Pallet Magazine	F3-1
1.1 Part Names	F3-1
2. Basic Specifications	F3-2
3. Pallet Magazine Operation Panel	F3-3
3.1 Pallet Magazine Operation Panel Buttons	F3-3
4. Preparations for Operation	F3-7
4.1 Pallet Search	F3-7
4.2 Pallet Rotation	F3-7
4.3 Pallet Ready Set	F3-8
5. Operation	F3-8



G1. OPERATION: 5°/1° INDEXING TABLE

CONTENTS

1. Outline of Table.....	G1-1
1.1 Part Names	G1-1
2. Specifications	G1-1
3. Operation.....	G1-2
3.1 Manual Operation Mode (manual zero point return)	G1-2
3.2 Automatic Operation Mode	G1-4



G2. OPERATION: NC ROTARY TABLE

CONTENTS

1. Outline of Table	G2-1
1.1 Part Names	G2-1
2. Specifications	G2-2
3. Operation	G2-3
3.1 Manual Operation Mode (manual zero point return)	G2-4
3.2 Automatic Operation Mode	G2-5

H1. OPERATION: CHIP DISPOSAL DEVICE

CONTENTS

1. Standard Tank	H1- 1
1.1 Part Names	H1- 1
1.2 Standard Tank Structure	H1- 2
1.3 Basic Specifications	H1- 2
2. Precautions On Operation	H1- 3
2.1 Precautions When Starting Machine Operation	H1- 3
2.2 Precautions During Machine Operation	H1- 3
3. Cleaning	H1- 4
3.1 Cleaning Punching Plate	H1- 4
3.2 Cleaning Mesh Filter	H1- 4
3.3 Cleaning Tank	H1- 4

H2. OPERATION: CHIP DISPOSAL DEVICE

CONTENTS

1. Lift-up Conveyor (Option)	H2- 1
1.1 Structure of Lift-up Conveyor (side & diagonal discharge types)	H2- 1
1.2 Structure of Lift-up Conveyor (rear discharge type)	H2- 2
2. Side Discharge Type	H2- 3
2.1 Name of Each Component	H2- 3
2.2 Standard Specifications	H2- 4
2.3 Precautions on Operation	H2- 4
2.3.1 Precaution before starting the machine operation	H2- 6
2.3.2 Precaution during machine operation	H2- 6
3. Diagonal Discharge Type	H2- 7
3.1 Name of Each Component	H2- 7
3.2 Standard Specifications	H2- 7
3.3 Precautions on Operation	H2- 7
4. Rear Discharge Type	H2- 8
4.1 Name of Each Component	H2- 8
4.2 Standard Specifications	H2- 8
4.3 Precautions on Operation	H2- 9
4.3.1 Precaution before starting the machine operation	H2- 9
4.3.2 Precaution during machine operation	H2- 9
4.4 Cleaning Each Component	H2- 9
4.4.1 Cleaning the punched plate (a)	H2- 10
4.4.2 Cleaning the tank and conveyor	H2- 10
4.5 Cleaning the second-stage lift-up conveyor	H2- 10



H3. OPERATION: SECONDARY PROCESSING DEVICE

CONTENTS

1. Secondary Processing Device (Line-Filter Type)	H3- 1
1.1 Part Names	H3- 1
1.2 Basic Specifications	H3- 2
1.3 Cleaning.....	H3- 2
2. Secondary Processing Device (Paper-Bag Filter Type).....	H3- 3
2.1 Part Names	H3- 3
2.2 Basic Specifications	H3- 5
2.3 Precautions During Machine Operation	H3- 5
2.4 Cleaning.....	H3- 6



J1. OPERATION: COOLANT SUPPLY DEVICE

CONTENTS

1. Coolant Supply Device Types/Names	J1-1
2. Basic Specifications	J1-5
3. Precautions on Operation.....	J1-5



X. DAILY INSPECTION

CONTENTS

1. Supply of Oil	X-1
1.1 Lubricating Oil	X-1
1.2 Hydraulic Oil	X-1
1.3 Spindle Cooling Oil	X-1
1.4 Coolant	X-2