

# **mitsubishi**

SINGLE-AXIS AMPLIFIER  
BUILT-IN CONTROLLER

## **MODEL E**

INDEXING FUNCTION  
INSTRUCTION AND MAINTENANCE MANUAL

# CONTENTS

<b>Chapter 1 Handling</b> .....	1
1.1 Inspection at delivery .....	2
1.2 Explanation of controller parts .....	4
1.3 System configuration diagram .....	5
1.4 Precautions for use .....	6
1.5 Installation of controller .....	7
1.6 Installation of servomotor .....	8
<b>Chapter 2 Connections</b> .....	11
2.1 Connection system .....	12
2.2 Connection of power supply .....	13
2.3 Connection of control signal, status signal and emergency stop signal ..	14
2.4 Explanation of emergency stop, control and status signal interfaces .....	15
2.4.1 Emergency stop input (EMG) interface .....	15
2.4.2 Control signal (Input, X0 to X7) interface .....	16
2.4.3 Status output signal (Output, Y0 to Y7) .....	17
2.5 Connection of servomotor and detector .....	18
2.5.1 Precautions regarding connection of servomotor and detector .....	18
2.5.2 Connection of HA-ME series servomotor and detector .....	19
2.5.3 Connection of HA-FE series servomotor and detector .....	20
2.5.4 Connection of HA-FH series servomotor and detector .....	21
2.5.5 Connection of HA-FH-C (cannon) series servomotor and detector ...	22
2.5.6 Connection of HA-SE series servomotor and detector .....	23
2.5.7 Connection of HA-SH series servomotor and detector .....	24
2.6 Connection of regenerative resistor .....	25
2.7 Connection of teaching box CT200 .....	26
2.8 Connection of commercial personal computer (PC98) .....	27
2.9 Connection of remote I/O unit .....	28
2.9.1 Explanation of remote I/O parts .....	28
2.9.2 Connection of Model E and remote I/O unit .....	29
2.9.3 Connection of control signal (input) and status signal (output) .....	30
2.10 Connection of remote I/O unit .....	22
<b>Chapter 3 Methods for Setting Various Data</b> .....	33
<b>(Functions and Handling of Teaching Box)</b>	
3.1 Appearance and explanation of teaching box (FCUA-CT200) .....	34
3.2 Functions of display section .....	35
3.3 Display section functions .....	36

3.4	Types and transition of screen	37
3.5	Detailed explanation of each screen	38
3.5.1	Detailed explanation of monitor screen	38
3.5.2	Detailed explanation of ALM/DGN Screen	40
3.5.3	Explanation of Parameter Setting Screen	45
<b>Chapter 4</b>	<b>Controller Setup</b>	47
4.1	Setting of rotary switches	48
4.2	Initialization of backup data	48
4.3	Setting of parameters required for test operation	49
4.4	Test operation	49
4.4.1	Selection of test mode	49
4.4.2	Selection of operation mode to be tested	50
4.4.3	Starting in the test mode	50
<b>Chapter 5</b>	<b>Operation</b>	51
5.1	Explanation of control input signals and status output signals	52
5.1.1	Explanation of control input signals	54
5.1.2	Explanation of status output signals	64
5.2	Setting of the reference point (machine zero point)	75
5.2.1	Outline of dog-type reference point return	75
5.2.2	Execution of reference point return	76
5.2.3	Adjustment of reference point	78
5.2.4	Memory-type high-speed reference point return	80
5.3	Setting of stations	81
5.3.1	Outline of stations	81
5.3.2	Setting of No. of stations	81
5.3.3	Setting of station offset	81
5.3.4	Determining of station No. automatic sampling direction	81
5.4	Setting of acceleration/deceleration pattern	82
5.5	Setting of operation pattern	82
5.5.1	Change over of operation pattern parameters	83
5.5.2	Setting of control axis feedrate	83
5.5.3	Setting of acceleration/deceleration time constant (acceleration/deceleration time)	84
5.5.4	Setting of current limit	85
5.5.5	Setting of excessive error width	85
5.5.6	Setting of set position output width	85
5.5.7	Setting of near set position width	86

5.6	Automatic operation	87
5.6.1	Outline of automatic operation	87
5.6.2	Selection of automatic operation mode	88
5.6.3	Designation of station No.	88
5.6.4	Designation of rotation direction	88
5.6.5	Designation of short cut control	89
5.6.6	Starting of automatic operation	89
5.7	Manual operation	90
5.7.1	Outline of manual operation mode	90
5.7.2	Selection of manual operation mode	90
5.7.3	Designation of rotation direction	90
5.7.4	Starting of manual operation	91
5.8	Jog operation	91
5.8.1	Outline of jog operation	91
5.8.2	Selection of manual operation mode	91
5.8.3	Designation of rotation direction	92
5.8.4	Starting of jog operation	92
5.9	Emergency stop	93
5.9.1	Emergency stop function	93
5.9.2	Setting of emergency stop function	93
5.10	Machine compensation function	94
5.10.1	Electronic gears	94
5.10.2	Backlash compensation	95
5.11	Interlock function	95
<b>Chapter 6</b>	<b>Absolute Position Detection System</b>	<b>97</b>
6.1	Outline of absolute position system	98
6.2	Using the absolute position detection system	98
6.3	Initialization of absolute position detection system reference point	99
6.3.1	Setting of absolute position detection system reference point	99
6.3.2	Setting of absolute position reference point with reference point alignment	101
6.3.3	Setting of absolute position coordinate zero point with stopper method	103
6.3.4	Reference point setting method for dog-type absolute position	107
<b>Chapter 7</b>	<b>Servo Adjustment</b>	<b>109</b>
7.1	Servo adjustment	110
7.2	Types of servo parameters	110
7.3	Adjustment of servo loop parameter	111
7.3.1	Current loop parameters	111
7.3.2	Speed loop parameters	111
7.3.3	Position loop parameter	112

7.4	Servo adjustment function (Setting of servo adjustment parameters)	112
7.4.1	Machine resonance suppression filter (Setting of parameter #328 (SV.sv029))	112
7.4.2	Speed feedback during stopping ignore function (Setting of #329 (SV.sv030))	112
<b>Chapter 8</b>	<b>Extension of Functions with User PLC Program</b>	<b>113</b>
8.1	Outline and customization of Model E operation control	114
8.2	Flow of control and status signals	115
8.3	Assignment of signals to PLC interface table	116
8.3.1	System control section → PLC (status signal) table	116
8.3.2	PLC → System control section (control command) table	119
8.4	Detailed explanation of PLC signals	122
8.4.1	System control section → PLC	122
8.4.2	PLC → System control section	137
8.5	Creation of user PLC program	147
8.5.1	Setting of Model E unit	147
8.5.2	Setting of MELSEC peripheral device	147
8.5.3	PLC program writing (MELSEC peripheral device → Model E) procedures	147
8.5.4	PLC program reading (Model E → MELSEC peripheral device) procedure	148
8.5.5	Limits for creating PLC program	148
8.5.6	Usable PLC commands	149
8.5.7	Usable devices	153
8.5.8	Parameters usable in PLC program	154
<b>Chapter 9</b>	<b>Maintenance and Inspection</b>	<b>157</b>
9.1	Unit replacement	158
9.1.1	Preparation for unit replacement	158
9.1.2	Unit replacement method	158
9.2	Battery replacement	159
9.3	Troubleshooting	160
9.4	Various alarm displays and measures	161
9.4.1	Alarm class	161
9.4.2	Explanation of alarms	162
<b>Appendix</b>		<b>A-1</b>
	[General Controller Specifications]	A-2
	Appendix 1 Explanation of Parameters	A-6