

OPERATING MANUAL

QT-PRIMOS 50 SG
QT-PRIMOS 100 SG

Manual No.: HB30SA0030E

NC: MAZAK FZ

Serial No.:

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical Center or Technology Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical Center or Technology Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical Center or Technology Center with the manual No. or the machine name, serial No. and manual name.

Issued by Manual Publication Section, YAMAZAKI MAZAK CORPORATION, Japan

04.2017

CONTENTS

1	INTRODUCTION	1-1
1-1	Machine Overview	1-1
1-1-1	Intended use of the machine	1-1
1-1-2	Operating position.....	1-1
1-1-3	Features.....	1-1
1-2	List of Manuals to Be Used.....	1-3
1-3	Numbering System for Pages.....	1-3
1-4	Numbering System for Figures and Tables	1-3
1-5	Distinction between Standard and Optional Specifications.....	1-4
2	SAFETY PRECAUTIONS	2-1
2-1	Rule	2-1
2-2	Residual Risks.....	2-2
2-3	Basic Safety Items.....	2-5
2-4	Clothing and Personal Safety	2-6
2-5	Safety Items Related to Operation.....	2-7
2-6	Safety Items Related to Gripping Workpiece and Tooling	2-9
2-7	Safety Items Related to Maintenance.....	2-10
2-8	Safety Items Related to Workplace	2-11
2-9	Safety Items Related to Chip Conveyor.....	2-12
2-10	Safety Equipment	2-12
2-11	Remarks on the Cutting Conditions Recommended by the NC.....	2-12

2-12	Plates	2-13
2-13	Main Safety Devices	2-17
2-14	Safety Plates	2-19
3	OVERVIEW	3-1
3-1	Overview of Mechanisms	3-1
3-2	Overview of Control System	3-2
3-3	Disposition of Machine Components	3-3
3-4	Definition of Coordinate Axes	3-4
4	OPERATING PANEL AND FUNCTIONS OF SWITCHES	4-1
4-1	Layout of Operating Panels	4-1
4-2	NC Operating Panel and Machine Operating Panel	4-1
4-2-1	Disposition of switches and lamps	4-2
4-2-2	Controls on the NC operating panel	4-3
4-2-3	Indicator lamps on the operating panel	4-5
4-2-4	Status indicator window	4-6
4-3	Machine Operating Panel	4-7
5	PREPARATION FOR OPERATION	5-1
5-1	Inspection at the Start of Operation	5-1
5-2	How to Stop the Machine	5-2
5-2-1	How to stop the machine in emergencies	5-2
5-2-2	Other stopping methods	5-2
5-3	Procedure for Switching the Power ON	5-2

5-4	Inspection after Switching the Power ON	5-4
5-5	Switching the Power OFF	5-5
5-6	Zero-Point Return	5-5
5-6-1	Axis zero point return procedure	5-6
5-7	Warmup Operation	5-7
5-8	Opening the Machine Door	5-7
5-9	Opening/Closing of Chuck	5-8
6	MANUAL OPERATION	6-1
6-1	Manual Operation Modes	6-1
6-1-1	Selecting a manual operation mode	6-1
6-2	Spindle Operation	6-1
6-2-1	Spindle start	6-2
6-2-2	Spindle stop	6-3
6-2-3	Spindle jog	6-3
6-3	X-Axis and Z-Axis Feed Operation	6-4
6-3-1	Rapid feed	6-5
6-3-2	Cutting feed	6-6
6-3-3	Pulse feed	6-7
6-4	Tool Selection	6-8
6-4-1	Rotation of turret	6-8
6-5	Tailstock Operation (Option)	6-9
6-5-1	Construction and operation	6-9
6-5-2	Tailstock forward movement and retraction movement	6-10

6-5-3	Tailstock sleeve forward movement and retraction movement.....	6-10
6-5-4	Tailstock Force Adjustment	6-11
6-6	Manual Operation of Parts Catcher (Option)	6-12
6-7	Operator Door Automatic Opening/Closing Device (Option)	6-14
6-7-1	Outline	6-14
6-7-2	Mechanism	6-15
6-7-3	Zero-point return of operator door	6-15
6-7-4	Safety switch (Contact pressure sensor)	6-16
6-7-5	Door operating procedure	6-17
6-7-6	Operation	6-18
6-7-7	Example of operation	6-18
6-8	Tool Position Offset Measurement Using TOOL EYE (Option)	6-19
6-9	Chuck Air Blast (Option)	6-21
6-10	Other Manual Operations	6-22
6-10-1	Over-travel and cancelling method	6-22
6-10-2	Machine lock.....	6-23
6-10-3	WORK LIGHT and COOLANT MANUAL.....	6-23
6-10-4	Machine set up switch	6-24
6-11	Automatic Power Shut-Off (Option)	6-25
6-12	Various Menu Functions.....	6-26
6-12-1	Machine menu	6-26
6-12-2	Coolant menu	6-28
6-12-3	Program menu	6-29
7	PREPARATION FOR MACHINING	7-1

7-1	Mounting of Tools	7-1
7-1-1	Mounting/removal of tool holder and tools	7-1
7-1-2	Heavy tool layout	7-4
7-2	Preparation for Gripping Workpiece (Soft Jaw Machining)	7-6
7-2-1	In the case of workpiece external gripping	7-6
7-2-2	In the case of workpiece internal gripping	7-8
7-2-3	Setting spindle speed when using special jaw	7-9
7-3	Using the Tailstock	7-12
7-3-1	Method of pressing the workpiece	7-12
7-3-2	Function of checking the tailstock position	7-13
7-3-3	Safety items related to using tailstock	7-14
7-4	Energy Saving Mode	7-15
7-4-1	Reduction in stand-by power consumption	7-15
7-4-2	Setting the timers for the automatic deactivation	7-16
8	AUTOMATIC OPERATION	8-1
8-1	Automatic Operation Execution	8-1
8-1-1	Adjust the cutting conditions	8-2
8-1-2	Calling the starting part of the program	8-3
8-1-3	Starting automatic operation	8-3
8-2	Executing the Program Menu	8-4
8-2-1	Optional stop	8-4
8-2-2	Dry run	8-5
8-2-3	Machine lock	8-6
8-2-4	Block skip	8-7

8-2-5	Restart operation	8-8
8-3	Changing the Cutting Conditions	8-9
8-3-1	Rapid traverse override	8-9
8-3-2	Cutting feed override	8-10
8-3-3	Spindle speed override	8-11
8-4	Stopping Automatic Operation.....	8-12
8-4-1	Emergency stop.....	8-12
8-4-2	Reset	8-13
8-4-3	Feed hold.....	8-13
8-4-4	Single-block stop	8-14
8-4-5	Program stop	8-14
8-4-6	Stopping by turning the power OFF	8-15
8-5	Completion of Operation.....	8-16
8-5-1	Procedure for switching the power OFF	8-16
8-5-2	Cleaning and inspections on completion of operation	8-16
9	STANDARD SPECIFICATION OF THE MACHINE.....	9-1
9-1	Principal Specification	9-1
9-2	Spindle Nose Diagram (Flat $\phi 140$)	9-3
9-3	Characteristic of Spindle Motor	9-4
9-3-1	QTP50 SG (7.5 kW).....	9-4
9-3-2	QTP100 SG (9.0 kW).....	9-4
9-4	Stroke Diagram	9-6
9-5	Tooling Interference Diagram	9-10
9-6	Tooling System Diagram	9-14

9-7	Relation Diagram between Chuck and TOOL EYE	9-16
10	ALARM LIST	10-1
11	M-CODE LIST.....	11-1