
PROFORMA CAD/CAM SYSTEM

PF-CAD IBM-PC V2.0

Operation Manual



TEIJIN SEIKI
PRECISION CO., LTD

CONTENTS

Section 1: Basics of PF-CAD

[1]	PF-CAD settings.....	1
[2]	COMPUTE DEVELOPMENT	3
[3]	BENDING PROCESS.....	4
[4]	DOUBLE DELETE.....	7
[5]	STRIP LAYOUT PROCESS	8
[6]	PLOT CAM	9
[7]	UNIT	17

Section 2: Overview

[1]	Structure of the system.....	18
[2]	Functions of keys.....	19
[3]	PC-CAD/CAM (Format setting)	20

Section 3: Basic Operation

[1]	Explanation of displays.....	21
[2]	About the mouse	26
[3]	About modes	27
[4]	Data selection using the mouse	28

Section 4: PLOT Mode Commands

[1]	LINE.....	30
[2]	ARC	31
[3]	2 POINT.....	32
[4]	3 POINT (Arc).....	33
[5]	CORNER (Tangent).....	34
[6]	DIMENSION	35
[7]	REVISE	38
[8]	VARIABLE	39
[9]	MOVE	40
[10]	COPY	41
[11]	LEFT/RIGHT.....	43
[12]	UP/DOWN	44
[13]	2-LINE	45
[14]	1-STROKE.....	46
[15]	JOB.....	48
[16]	CONDITIONS (NC conditions)	49
[17]	ERASE	52
[18]	COMPOSITE	53
[19]	OUTPUT (Prepare NC data)	55
[20]	REGISTER	58

[21]	CALL.....	59
[22]	CANCEL.....	62
[23]	SWITCH	62

Section 5: JOB Mode Commands

[1]	Basic operation.....	63
[2]	Intersection point computation.....	66

Section 6: Miscellaneous

[1]	Size of drawings	71
------	------------------------	----

	Appendix: Practice problems.....	74
--	----------------------------------	----