

亞特精密放電加工機操作說明書
SPARK EROSION MACHINE
INSTRUCTION MANUAL.

FACILE—A



亞特精密機械股份有限公司
ART PRECISION MACHINERY CO., LTD.

282 CHUNG SHAN 1ST ROAD, LU CHOU TAIPEI HSIEN, TAIWAN P.O.C.
TEL : (02)281-9745 FAX : (02)281-8977
(02)283-6715

MACHINE TOOL

CONTENTS

CHAPTER 1	SPECIFICATIONS	3
1-1	Machine	
1-2	Power supply	
1-3	Dielectric tank	
1-4	Standard accessories	
1-5	Optional accessories	
CHAPTER 2	UNPACKING	5
CHAPTER 3	TRANSPORTATION	7
CHAPTER 4	OPERATION SITE	1 0
4-1	Operating site	
4-2	Machine installation diagram	
4-3	Power required	
4-4	Horizontal adjustment	
4-5	Degreasing	
CHAPTER 5	INSTALLATION	1 2
5-1	Dielectric tank	
5-2	Power supply unit connections	

CHAPTER 6 CHECKING DIELECTRIC CIRCUIT 1 5

CHAPTER 7 DIELECTRIC CIRCULATION INSTRUCTION 1 6

CHAPTER 8 MACHINE OPERATION 1 8

 8-1 Work tank

 8-2 Machine start

 8-3 Closing work tank door

 8-4 Flushing

 8-5 Setting control panel

CHAPTER 9 MAINTENANCE, CLEANING & LUBRICATION 2 4

 9-1 Fluid level check

 9-2 Lubrication

 9-3 Cleaning

CHAPTER 10 M30F,M50F, M75F MECHANICAL ELEMENT CODE 2 7

POWER SUPPLY UNIT

P30

P45 POWER SUPPLY UNIT

P60

CHAPTER 1. ART POWER SUPPLY INTRODUCTION.....	3
CHAPTER 2. EDM PRINCIPLES AND TECHNOLOGY....	4
CHAPTER 3. ELECTRODE MATERIAL.....	6
3-1 ELECTRODE MATERIAL CHARACTERISTICS	
3-2 PRODUCTION METHOD OF ELECTRODE	
CHAPTER 4. EDM APPLICATION.....	9
CHAPTER 5. M30F,M50F CONTROL PANEL.....	12
5-1 "BT" HIGH VOLTAGE CURRENT SETTING	
5-2 "AT" LOW VOLTAGE CURRENT SETTING	
5-3 "PA" SPARK ON SETTING	
5-4 "PB" SPARK OFF SETTING	
5-5 SERVO SENSITIVITY SETTING	
5-6 DISCHARGE GAP SETTING	
5-7 TIME ON, TIME OFF SETTING	
5-8 BUZZER AND DISCHARGE TIMER	
5-9 EMERGENCY SEOP & MAIN SWITCH - SPARK VOLT OPTION SWITCH	
5-10 WORKING LIGHT OPERATION MANUAL LIGHTING EQUIPMENT FOR BOTH NORMAL OPERATION AND FIRE ALARM	
5-11 FIRE ALARM SYSTEM	
CHAPTER 6. SYSTEM INTRODUCTION.....	23
6-1 FACILE-A FUNCTION	
6-2 COORDINATE SYSTEM	
6-3 SYSTEM OPERATION	

CHAPTER 7. SYSTEM OPERATION.....	27
7-1 PANEL INTRODUCTION	
7-2 SCREEN DISPLAY INTRODUCTION	
7-3 KEYBOARD INTRODUCTION	
CHAPTER 8. SYSTEM APPLICATION.....	46
8-1 POWER INPUT	
8-2 FIND REFERENCE	
8-3 FIND CENTER	
8-4 FIND Z SURFACE	
8-5 X,Y,Z WORK REFERENCE MEMORY	
CHAPTER 9. PROGRAMMING.....	54
9-1 PROGRAMMING	
9-2 PROGRAM EXECUTION	
9-3 MODIFICATION	
9-4 OTHER REMARKABLES	
CHAPTER 10. MACHINE PARAMETER.....	61
10-1 CLEAR STORED EDM GENERATOR	
10-2 ARC GUARD HEIGHT	
10-3 FORWARD SAFETY HEIGHT	
10-4 BACKWARD SAFETY HEIGHT	
10-5 Z AXIS ZERO OUT OFFSET ADJUST	
10-6 LOWEST POSITION HOLDING DISTANCE	
CHAPTER 11. GENERATOR SETTING EXAMPLE FOR FINISHING.....	68

P30 P45 P60

APPLICATION NOTE

P30
P45 APPLICATION NOTE
P60

INDEX

CHAPTER 1 SURFACE FINISH IN EDM 2

CHAPTER 2 (80V) ELECTROLYTIC COPPER(+) -
STEEL 3

CHAPTER 3 (100V) GRAPHITE(+) - STEEL . . . 1 3

CHAPTER 4 (260V) ELECTROLYTIC COPPER(-) -
STEEL 1 8

CHAPTER 5 (105V) COPPER TUNGSTEN(-) -
TUNGSTEN CARBIDE 2 0
(Can be refered as copper to tungsten carbide application)

CHAPTER 6 (90V) ELECTROLYTIC COPPER(-) -
COPPER 2 2

CHAPTER 7 (260V,90V) STEEL(+) - STEEL . . . 2 4

CHAPTER 8 (260V,90V) ELECTROLYTIC COPPER(+)
- STEEL 2 6