

LEGACY CNC 88 MAINTENANCE MANUAL



FADAL MACHINING CENTERS, LLC
support@fadal.com
20701 Plummer Street, Chatsworth, California 91311 USA

TABLE OF CONTENTS

1.0 MACHINE MAINTENANCE	1
1.1 LUBRICATION	2
1.1.1 LUBRICATION OF THE WAYS	2
1.1.2 EMC AND TRM WAYS LUBRICATION	3
1.1.3 EMC & TRM BALLSCREWS LUBRICATION	3
1.2 COOLING FANS	4
1.3 COOLANT TRAY	5
1.4 SPINDLE & BALLSCREW COOLING SYSTEM	5
1.4.1 PUMP FILTER	6
1.4.2 TANK RESERVOIR	6
1.5 SPINDLE	7
1.5.1 7.5K & 10K GREASE PACKED SPINDLES	7
1.5.2 15K AIR/OIL SPINDLE	8
1.6 FUSES	9
1.7 CE DOOR	12
2.0 OPTIONS MAINTENANCE	15
2.1 AUGER (3020, 4525 ONLY)	16
2.2 CONVEYOR	18
2.3 CHILLER COOLANT	18
2.3.1 CUTTING FLUID	19
2.4 TOOL CHANGER	19
2.4.1 AUTOMATIC TOOL CHANGER (A.T.C.)	19
2.4.2 DUAL ARM TOOL CHANGER (D.A.T.C) (EXCEPT EMC & TRM)	20
2.5 ROTARY TABLE	21
2.5.1 GEAR OIL	21
2.5.2 REMOVAL AND STORAGE	25
2.6 PROBE	26
2.7 COOLANT THROUGH SPINDLE	27
3.0 GENERAL	29
3.1 MAINTENANCE LABELS	30
3.1.1 ALL VMC MODELS	30
3.1.2 TRM MAINTENANCE LABEL	31
3.1.3 EMC MAINTENANCE LABEL	31
3.2 WARM UP	32

3.3 ROUGH CUT / COOL DOWN / FINISH CUT	32
3.4 MONITORING POSITION CHANGES	32
3.5 FLUIDS	33
4.0 ERROR MESSAGES	35
4.1 TEXT ERROR MESSAGES	36
4.2 TOOL CHANGER ERRORS	68
4.3 AXIS /SPINDLE CONTROLLER ERROR CODES	69
4.4 TROUBLESHOOTING CHECKLIST RS-232 COMMUNICATIONS	73
MAINTENANCE CHART	77