

WIRE-CUT EDM SYSTEMS

H

Series

OPTIONS

3920905780

CONTENTS

1. TAPER CUT DEVICE	1-1
1.1 Functional description.....	1-1
1.1.1 Angle of inclination.....	1-2
1.1.2 Corner interpolation modes.....	1-3
1.1.3 Input cutting-edge height, plate thickness and guide span.....	1-5
1.1.4 Figure check (system incorporated in the machine unit) (option).....	1-7
1.1.5 Taper positioning	1-8
1.2 Method of measuring upper guide span (Z3) and lower guide span (Z4).....	1-14
1.2.1 Position of measurement and formula.....	1-14
1.2.2 How to use automatic taper factor calculation function.....	1-15
1.2.3 Operation procedure.....	1-15
1.3 Setting of various factors before taper machining	1-18
1.3.1 Setting of program dimension height (Z1).....	1-18
1.3.2 Setting feed speed height (Z2)	1-19
1.3.3 Setting upper-guide span (Z3)	1-20
1.3.4 Setting of lower guide span (Z4).....	1-21
1.3.5 Setting height specification (Z5) of arbitrary shapes	1-21
1.4 Procedure for entering taper angle value.....	1-23
1.4.1 Input method from user setting display	1-23
1.4.2 Input method from NC program	1-25
1.5 Procedure for input of taper factors	1-25
1.5.1 Procedure for input from user setting screen.....	1-26
1.6 Graphic check procedure	1-28
1.7 Difference in angle $\pm A$ due to offset direction	1-30
1.8 Machining procedure.....	1-31
1.8.1 Vertical wire feed	1-32
1.8.2 Trial machining at taper angle 0°	1-32
1.8.3 Checking upper and lower dimensions	1-32
1.8.4 Input guide span factors	1-33
1.8.5 Trial machining at specified taper angle.....	1-33
1.8.6 Cutting edge accuracy correction.....	1-33
1.8.7 Change of offset value.....	1-34
1.8.8 Test machining at the specified taper angle	1-34
1.8.9 Checking a 3-D figure by changing factor Z2.....	1-35
1.8.10 Machining of product	1-35
1.8.11 When the product is tapered at a wide angle (min. $\pm 5^\circ$).....	1-35
2. AUTOMATIC WIRE FEEDER.....	2-1
2.1 Operation instructions.....	2-1
2.1.1 General.....	2-1
2.1.2 Specifications for automatic wire feeder.....	2-2
2.1.3 Configuration of automatic wire feeder.....	2-4
2.1.4 Operation panel for automatic wire feeder	2-7
2.1.5 Description of programming.....	2-13
2.1.6 Operation procedures	2-19
2.1.7 Maintenance and inspection	2-41
2.2 Description of programming	2-62
2.2.1 Program preparation.....	2-62
2.2.2 Example of programming applications.....	2-78
2.3 Automatic Wire Feeder Type B (Optional)	2-85
2.3.1 General.....	2-85
2.3.2 Specification.....	2-85
2.3.3 Handling.....	2-86
2.3.4 Use of fine wire (0.1mm and 0.5mm dia. electrode).....	2-89
2.3.5 Maintenance	2-90

3. AUTOMATIC WIRE FEEDER EXPANDED FUNCTION.....	3-1
3.1 General	3-1
3.2 Function and usage.....	3-2
3.2.1 How to use AWF setting screen	3-2
3.2.2 Machining ON/OFF control during breakage recovery (H83, H84)	3-5
3.2.3 Automatic OFF-time control (H85, H86).....	3-7
3.2.4 M01 automatic uncut, scrap removal function (H94, H95, H96).....	3-9
3.2.5 Uncut skip parameter (H97, H98)	3-15
3.2.6 Remachining preparation function (H99).....	3-17
3.3 Other functions.....	3-20
3.3.1 Self cleaning.....	3-20
3.3.2 Wire empty sensor function	3-21
3.3.3 Improved recovery and skip speeds	3-22
3.3.4 Improved uncut skip function.....	3-23
3.4 Application example of expanded AWF function.....	3-24
3.4.1 Machining using machining ON during recovery (H83, H84).....	3-24
3.4.2 Continuous machining for multiple pieces using automatic uncut	3-26
and cut off function	
3.4.3 Post process machining using remachining preparation function.....	3-29
3.5 Cautions	3-30
4. FINE SURFACE MACHINING POWER (FS POWER).....	4-1
4.1 Outline	4-1
4.2 specifications of FS power supply.....	4-1
4.3 How to use special jigs and set a workpiece	4-3
4.3.1 External view of special jigs.....	4-3
4.3.2 Mounting of special jig on table surface.....	4-3
4.3.3 Attachment of workpiece.....	4-5
4.4 How to connect wiring to special jig	4-6
4.4.1 When special jig is used (FS conditions - 3 to 5).....	4-6
4.4.2 When special jig is used (FS conditions - 2)	4-6
4.5 Parameters for FS conditions.....	4-9
4.5.1 FS conditions (1 to 5)	4-9
4.5.2 Voltage conditions Vo (1 to 16)	4-10
4.5.3 Average voltage VG.....	4-10
4.6 Setting FS conditions.....	4-11
4.6.1 Conditional parameters for FS power supply machining.....	4-11
4.6.2 Manual switching of FS conditions.....	4-11
4.6.3 Automatic switching of FS condition.....	4-11
4.7 How to use fine finish machining monitor (FS machining monitor).....	4-13
4.7.1 Appearance.....	4-13
4.7.2 Machining status	4-13
4.8 Other precautionary matters.....	4-14
5. FIVE-AXES CONTROL.....	5-1
5.1 Specifications.....	5-1
5.2 Structure and name of each part.....	5-1
5.3 Z-axis functions.....	5-2
5.3.1 Positioning function	5-2
5.3.2 How to move Z-axis with MDI (Manual Data Input) positioning function.....	5-4
5.3.3 How to move Z-axis by MDI.....	5-5
5.3.4 Z-axis position counter setting function.....	5-6
5.3.5 "Origin preset" function (G92)	5-8
5.3.6 Simultaneous 5-axis control function for linear movement	5-10
5.3.7 Simultaneous 3-axis control unit in circular movement.....	5-12
5.3.8 Zero point return	5-13

5.3.9	Automatic-return function	5-15
5.3.10	Automatic broken wire recovery function	5-17
5.3.11	Other functions contained in Z-axis.....	5-18
5.3.12	Functions which become ineffective with Z-axis.....	5-19
5.3.13	Caution about other points.....	5-20
5.4	Examples of machining using 5-axis	5-21
5.4.1	Preparations and cautions before machining	5-21
5.4.2	When taper cut is carried out, set taper factors (Z parameters Z1 to Z5)	5-23
5.4.3	Wide-angle taper cut ($\pm 5^\circ$ min.).....	5-25
5.5	Maintenance and inspection.....	5-26
5.5.1	Maintenance and inspection	5-26
5.5.2	Accessories.....	5-29
6.	INITIAL HOLE MACHINING DEVICE	6-1
6.1	Outline	6-1
6.2	Structure and name of each part.....	6-2
6.3	Operation	6-3
6.3.1	Installation and removal of initial hole machining device.....	6-3
6.3.2	How to move Z-axis	6-4
6.3.3	How to install electrode	6-9
6.3.4	How to rotate electrode	6-13
6.3.5	How to position workpiece.....	6-14
6.3.6	Machining procedure	6-20
6.4	Machining conditions	6-27
6.5	Maintenance and inspection.....	6-30
6.5.1	How to change feeder brush	6-30
6.5.2	How to change timing belt.....	6-31
7.	THIN-WIRE DRIVING SPECIFICATIONS	7-1
7.1	Introduction	7-1
7.2	Preparation for thin-wire driving	7-1
7.3	Wire guide for thin-wire driving.....	7-2
7.3.1	Configuration	7-2
7.3.2	Operation.....	7-3
7.3.3	Use of wire-electrode with 0.1mm diameter or more	7-5
7.4	Wire setting.....	7-7
7.5	Pretension adjustment.....	7-10
7.5.1	Pretension adjustment for standard wire	7-10
7.5.2	Pretension adjustment when thin-wire is used.....	7-11
7.6	Machining advise.....	7-12
7.7	Machining conditions (for G25).....	7-13
7.8	Accessories.....	7-23
7.9	Spare parts.....	7-24
8.	20KG WIRE SPECIFICATIONS.....	8-1
8.1	Introduction	8-1
8.2	Specifications.....	8-1
8.3	Construction.....	8-2
8.4	Operation procedures.....	8-3
8.4.1	Switch operation	8-3
8.4.2	Attachment of 20kg coiled wire bobbin.....	8-3
8.4.3	How to stretch wire.....	8-4
8.4.4	Disposition of used wire	8-4
8.5	Setting of pretension value	8-5
8.6	How to handle wire when automatic wire feeder is used	8-7
8.7	Troubleshooting	8-9
8.8	Wire electrode.....	8-9

9. DIELECTRIC FLUID TEMPERATURE CONTROL UNIT	9-1
9.1 Introduction	9-1
9.2 Specifications.....	9-1
9.3 Configuration.....	9-1
9.4 Handling	9-3
9.4.1 Dielectric fluid level check.....	9-3
9.4.2 Operation.....	9-3
9.5 Maintenance and inspection.....	9-7
9.6 Troubleshooting	9-8
9.6.1 Protect function and error code display	9-8
9.6.2 Troubleshooting and check contents	9-8
9.7 Performance curve.....	9-11
9.8 Exterior dimension diagrams	9-12
9.9 Installation of unit cooler outside a constant temperature room	9-13
10. FIGURE CHECK DEVICE (PLOTTER).....	10-1
10.1 General	10-1
10.2 Figure check device	10-1
10.3 Operation	10-2
10.4 Accessory	10-2
10.5 Spare.....	10-3