


Data Server Functions

Operation Guide

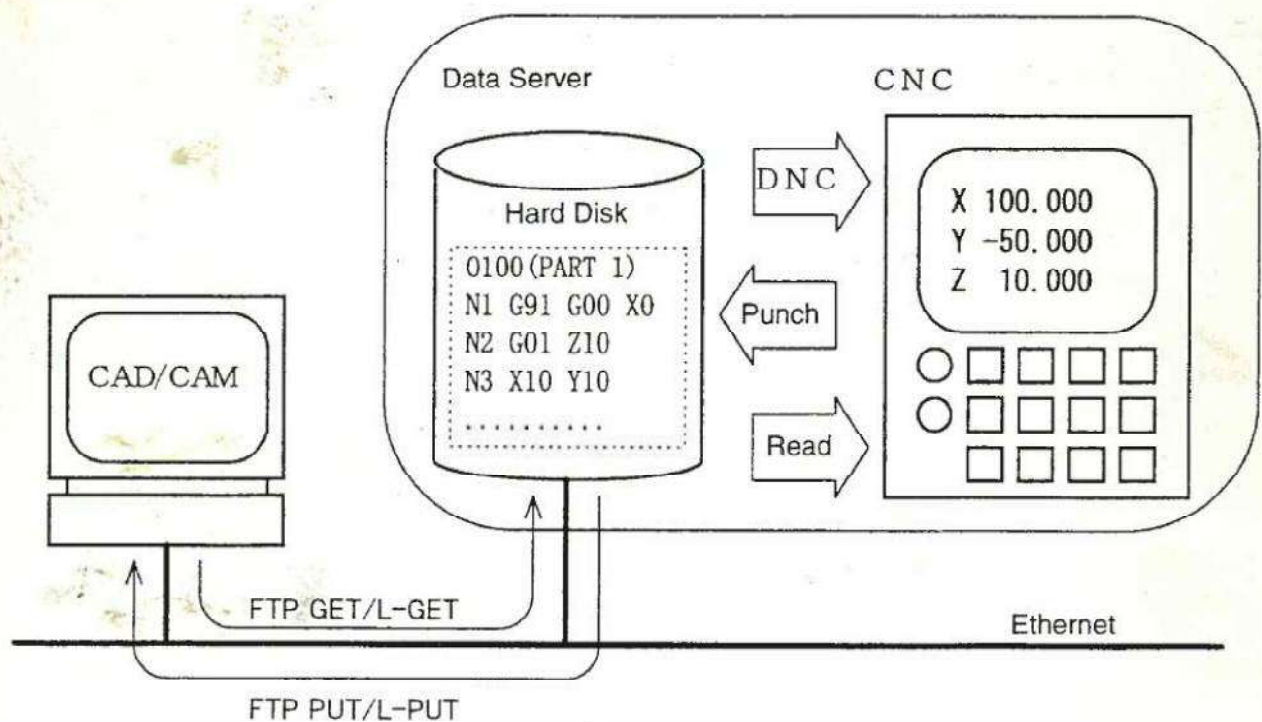

MAKINO MILLING MACHINE CO., LTD.

FMS539D-9706

Contents

1. Outline of Data Server Operation	P. 6
2. Host Computer NC Program Format	P. 6
3. NC Program Transfer with Host Computer	P. 7
3.1 FTP GET	P. 7
3.2 FTP PUT	P. 8
4. List Transfer (FTP, referring to list file)	P. 9
4.1 Outline	P. 9
4.2 List File Format	P. 9
4.3 Displaying List Operation Soft Keys	P. 10
4.4 List Transfer Operation Procedure	P. 11
4.5 List-Get (Get operation, referring to list file)	P. 12
4.6 List-Put (Put operation, referring to list file)	P. 13
5. DNC Operation	P. 15
5.1 NC Program (individual) Recall	P. 15
5.2 Sub-Program Recall	P. 16

6. NC Program Transfer with CNC	P. 18
6.1 Read	P. 18
6.2 Punch	P. 18
7. NC Program Management	P. 19
7.1 Directory	P. 19
7.2 Search	P. 19
7.3 Deletion	P. 20
7.4 List-Delete (deletion, referring to list file)	P. 20
8. Setting Host Information	P. 24
9. Buffer Mode (optional function)	P. 24
9.1 How to Change Modes	P. 24
9.2 Usage	P. 25
9.3 NC Programs	P. 25
9.4 File List	P. 26
9.5 DNC Operation	P. 27
9.6 Operating Procedure	P. 27
9.7 Notes on Buffer Mode	P. 28

10. Maintenance	P. 29
10.1 I/O Data	P. 29
10.2 Checking Hard Disk	P. 29
10.3 Formatting Hard Disk	P. 30
10.4 Alarms	P. 31
11. Alarm Messages	P. 32