

**NUMERICAL CONTROL  
TURRET PUNCH PRESS**

**TOOLING MANUAL**

**AMADA COMPANY, LTD.**

200, Ishida, Isehara, Kanagawa, JAPAN

OCT. 1983

## CONTENTS

### THICK TURRET

#### STATION ARRANGEMENT

|  |     |
|--|-----|
| 72-station turret (COMA only) .....              | 1-1 |
| 56-station turret (COMA, VELA II and PEGA) ..... | 1-2 |
| 52-station turret (COMA only) .....              | 1-3 |
| 48-station turret (COMA only) .....              | 1-4 |
| 32-station turret (COMA only) .....              | 1-5 |
| 46-station turret (COMA only) .....              | 1-6 |
| 44-station turret (COMA only) .....              | 1-7 |

#### TOOL TYPES

|   |      |
|---|------|
| Type A (1/2") .....                                   | 1-8  |
| Type B (1-1/4") .....                                 | 1-9  |
| Types C (2"), D (3-1/2"), E (4-1/2") and F (6") ..... | 1-10 |

#### LOADING AND UNLOADING PUNCHES AND DIES

|   |      |
|---|------|
| Type A (1/2") .....                                   | 1-11 |
| Type B (1-1/4") .....                                 | 1-13 |
| Types C (2"), D (3-1/2"), E (4-1/2") and F (6") ..... | 1-14 |

#### KEYS AND KEYWAYS IN TOOLS AND TURRET STATIONS

|   |      |
|---|------|
| Keys and keyways in tools .....           | 1-15 |
| Keys and keyways in turret stations ..... | 1-16 |

#### MAINTENANCE OF PUNCHES AND DIES

|  |      |
|--|------|
| Disassembly and assembly of punches (Types A and B) .....          | 1-17 |
| Removal and installation of punch tips (Types C, D, E and F) ..... | 1-18 |
| Re-grinding punches and dies .....                                 | 1-19 |
| Adjustment of punch and die height .....                           | 1-19 |
| Lubrication .....  | 1-21 |
| Inspecting punches and dies .....                                  | 1-21 |
| Inspecting worksheets .....  | 1-21 |

|                              |      |
|------------------------------|------|
| PUNCH-TO-DIE CLEARANCE ..... | 1-21 |
|------------------------------|------|

|                      |      |
|----------------------|------|
| PUNCH CAPACITY ..... | 1-22 |
|----------------------|------|

|                             |      |
|-----------------------------|------|
| MINIMUM HOLE DIAMETER ..... | 1-24 |
|-----------------------------|------|

|   |      |
|---|------|
| PRECAUTIONS FOR PUNCHING THICK WORKSHEETS ..... | 1-24 |
|---|------|

### THIN TURRET

#### STATION ARRANGEMENT

|  |     |
|--|-----|
| 40-station turret (VELA II and PEGA) ..... | 2-1 |
|--|-----|

#### TOOL TYPES

|  |     |
|--|-----|
| Small diameter type (1.6 to 31.7 mm dia.) .....  | 2-2 |
| Large diameter type (31.8 to 88.9 mm dia.) ..... | 2-3 |

|  |      |
|--|------|
| <b>LOADING AND UNLOADING PUNCHES AND DIES</b>                  |      |
| Small diameter type .....                                      | 2-4  |
| Large diameter type .....                                      | 2-5  |
| <b>KEYS AND KEYWAYS IN TOOLS AND TURRET STATIONS</b>           |      |
| Keys and keyways in tools .....                                | 2-6  |
| Keys and keyways in turret stations .....                      | 2-7  |
| <b>MAINTENANCE OF PUNCHES AND DIES</b>                         |      |
| Disassembly of punches (Small dia. type) .....                 | 2-8  |
| Removal and installation of punch tips (Large dia. type) ..... | 2-8  |
| Re-grinding punches and dies .....                             | 2-8  |
| Adjustment of punch and die height .....                       | 2-9  |
| Lubrication .....  | 2-10 |
| Inspecting punches and dies .....                              | 2-10 |
| Inspecting worksheets .....                                    | 2-10 |
| PUNCH-TO-DIE CLEARANCE .....                                   | 2-10 |
| PUNCH CAPACITY .....   | 2-11 |
| MINIMUM HOLE DIAMETER .....                                    | 2-12 |
| PRECAUTIONS FOR PUNCHING THICK WORKSHEETS .....                | 2-13 |

## **TURRET WITH AUTO-INDEX DEVICE**

### **STATION ARRANGEMENT**

|  |     |
|--|-----|
| 58-station turret (COMA and VELA II) ..... | 3-1 |
| 44-station turret (COMA and VELA II) ..... | 3-2 |

### **TOOL TYPES**

|   |     |
|---|-----|
| Type A (1/2") .....                           | 3-3 |
| Type B (1-1/4") .....                         | 3-4 |
| Types C (2"), D (3-1/2") and E (4-1/2") ..... | 3-5 |

### **LOADING AND UNLOADING PUNCHES AND DIES**

|   |      |
|---|------|
| Type A (1/2") .....                           | 3-6  |
| Type B (1-1/4") .....                         | 3-8  |
| Types C (2"), D (3-1/2") and E (4-1/2") ..... | 3-10 |

### **KEYS AND KEYWAYS IN TOOLS AND TURRET STATIONS**

|   |      |
|---|------|
| Keys and keyways in tools .....           | 3-11 |
| Keys and keyways in turret stations ..... | 3-12 |

### **MAINTENANCE OF PUNCHES AND DIES**

|   |      |
|---|------|
| Disassembly and assembly of punches (Types A and B) .....       | 3-13 |
| Removal and installation of punch tips (Types C, D and E) ..... | 3-14 |
| Re-grinding punches and dies .....                              | 3-15 |
| Adjustment of punch and die height .....                        | 3-15 |
| Lubrication .....   | 3-17 |
| Inspecting punches and dies .....                               | 3-17 |
| Inspecting worksheets .....                                     | 3-17 |

|   |      |
|---|------|
| PUNCH-TO-DIE CLEARANCE .....                    | 3-17 |
| PUNCH CAPACITY .....                            | 3-18 |
| MINIMUM HOLE DIAMETER .....                     | 3-20 |
| PRECAUTIONS FOR PUNCHING THICK WORKSHEETS ..... | 3-20 |