

Professional 5 Control Operation Manual

Introduction & Basic Operations



MAKINO

CONTENT

Chapter 1 Professional 5 Software Basic Knowledge.....	1
1.1 Outline of Screen Areas	1
1.2 Outline of Operation Screens	4
1.3 Starting Up the Controller.....	6
1.4 Viewing Info Header.....	8
1.5 Viewing NC Status Bar.....	13
1.6 Changing Operation Screens.....	17
1.7 Screen Operation Buttons.....	19
1.8 Floating Function Buttons	19
Chapter 2 Main Screen.....	21
2.1 Outline.....	21
2.2 List of Screen Operation Buttons	22
Chapter 3 Program Edit Screen	24
3.1 Outline.....	24
3.2 Editing Two Programs at Same Time.....	27
3.3 Program List Screen	29
3.4 Creating New NC Programs.....	30
3.5 Changing to BG Edit Display After Program Creation.....	32
3.6 Selecting NC Programs.....	33
3.7 Changing NC Program Numbers	35
3.8 Deleting NC Programs	35
3.9 List of Program Edit Screen Buttons	37

3.10	List of Program List Screen Buttons.....	40
Chapter 4 Makino Data Center Screen.....		42
4.1	Outline.....	42
4.2	Viewing Folder/File Information.....	44
4.3	Viewing Folder Tree.....	46
4.4	Copying & Pasting of Files/Folders.....	48
4.5	Viewing Paste Dialog Box.....	52
4.6	Manipulating Paste Dialog Box.....	53
4.7	Viewing Copy Progress Bar.....	55
Chapter 5 Function Screen.....		56
5.1	Turning Functions On/Off.....	56
5.2	Changing Pages.....	57
5.3	Function Display Settings.....	57
5.4	Changing Function Display Order.....	59
5.5	List of Function List Operation Buttons.....	60
5.6	List of Display Setting Operation Buttons.....	61
Chapter 6 Alarm Screen.....		62
6.1	Outline.....	62
6.2	Viewing Alarm History.....	64
6.3	Confirming Alarm Details.....	65
6.4	Changing Alarm Information Display Settings.....	69
6.5	Resetting Alarms.....	71
6.6	Retrying Alarm Operation.....	72

6.7	List of Alarm List Screen Buttons	74
6.8	List of Alarm Details Screen Buttons.....	75
Chapter 7 Machine Condition Screen		76
7.1	Outline.....	76
7.2	Confirming Cause of Abnormal Condition	76
7.3	Cycle Count Setting	82
7.4	List of Machine Condition Display Screen Buttons.....	83
7.5	List of Grease Lubrication Screen Buttons.....	83
Chapter 8 Input/Output Screen		84
8.1	Outline.....	84
8.2	Display Content.....	86
8.3	Searching for Signals with Address.....	88
8.4	Searching for Signals with Signal Name	88
8.5	Changing Display Mode	89
8.6	Converting Address Data to Value	89
8.7	List of Screen Operation Buttons	91

Chapter 9 Parameter Screen	92
9.1 Outline.....	92
9.2 Parameter List Screen	92
9.3 Parameter Check Screen.....	93
9.4 Confirming Parameter Settings	94
9.5 Filtering Parameter List Display	96
9.6 Changing Parameter Settings	97
9.7 Using Function Number Help	100
9.8 Displaying Parameter Check Screen	101
9.9 Confirming Parameter Check Content	103
9.10 Displaying Parameter List Screen	105
9.11 Saving Original Parameters	105
9.12 Returning to Original Value	106
9.13 Parameter List Screen Buttons	108
9.14 Parameter Check Screen Buttons.....	109