

Precision Surface Grinding Machine

ST MODEL

INSTRUCTION MANUAL

PSG – 52ST

Okamoto

PART I
OPERATION MANUAL

PART II
TROUBLE-SHOOTING

PART III
PART-LIST

CONTENTS

	Page
SPECIFICATIONS	1
SIZE OF THE MACHINE	
a. Floor space for the machine	2
b. Size (1) Front view	3
(2) Side view	4
c. Grinding range	5
PRINCIPAL PARTS OF THE MACHINE	
a. Front view	6
b. Rear view	7
INSTALLATION	
a. Lifting of the machine	8
b. Shipping clamps	9
c. Cleaning of the machine	10
d. Levelling of the machine	10
e. Connection to power supply	11-12
LUBRICATION → use mobil 1405	
a. Filling of hydraulic and lubrication oil	13
b. Lubrication of the spindle bearing and cross feed ballscrew	13
c. Lubrication system of slideways	13
d. Schematic diagram of lubrication system	14
OPERATING INSTRUCTIONS	
a. Functions of switches on the operation control panel	15-17
b. Table longitudinal movement	18
c. Saddle cross movement	19-20
d. Vertical feed of wheel head	20
e. Mounting of the grinding wheel	21-22
f. Balancing of the grinding wheel	23-24
g. Dressing operation of the grinding wheel	25
h. Checking before grinding operation	26-27
i. Trial running of the machine	28-29
j. Traverse automatic grinding I (step grinding)	30-33
k. Traverse automatic grinding II (crisscross grinding)	34
l. Plunge automatic grinding	35
m. Grinding faults and their corrections	36-37
MAINTENANCE	
a. Hydraulic circuit diagram	38
b. Hydraulic pressure adjustment	39
c. Adjustment of lubrication oil to slideways	40
d. Adjustment of table reversing motion	40
REFERENCE DRAWINGS	
a. Diamond tool	41
b. Balancing arbor (for ACC-52ST)	42
c. Wheel flange (for ACC-52ST)	43
d. Piece holder (for ACC-52ST)	44
e. Adjustable balancing weight (for ACC-52ST)	45
f. Nut (for ACC-52ST)	46
g. Balancing arbor (for ACC-8·20ST)	47
h. Wheel flange (for ACC-8·20ST)	48
i. Adjustable balancing weight (for ACC-8·20ST)	49
j. Nut (for ACC-8·20ST)	50

CONTENTS

	PAGE
1 DEFINITION OF SYMBOLS USED FLOW CHARTS	1
2 REPLACEMENT OF PARTS	
2.1 Replacement of printed circuit board	2
2.2 Handling of printed circuit board	2
2.3 Checking the printed circuit board	3
2.4 Output checks of transistors for solenoid valves	4
2.5 Replacement of solenoid valve	5
3 TROUBLE-SHOOTING PROCEDURES	
3.1 Trouble-shooting	6
3.2 Trouble-shooting relating to table start & stop	7
3.2.1 Table does not start	7-8
3.2.2 Table does not stop when table stop button (SB8) is pressed	9-10
3.2.3 Table does not stop when the sparkout has completed	11-12
3.3 Trouble-shooting of table longitudinal movements	13
3.3.1 Table does not move lefthand	13-15
3.3.2 Table does not move righthand	16-18
3.4 Trouble-shooting relating to electric motor	19
3.5 Trouble-shooting relating to automatic downfeed	20
3.5.1 Automatic downfeed is not operated	20-21
3.5.2 Automatic downfeed is still operated even after the dial reached to automatic sizing position	22-23
3.6 Trouble-shooting relating to saddle cross feed	24
3.6.1 Saddle is not moved to forward direction	24-26
3.6.2 Saddle is not moved to backward direction	27-29
3.7 Trouble-shooting for the faults of electromagnetic chuck	30-31
4 REFERENCE DRAWINGS	
4.1 Electrical diagrams	32-38
4.2 Electrical connections of the operation control panel	39
4.3 Description for the connector pins No. 1	40
4.4 Power box components layout	41
4.5 Interconnection diagram	42
4.6 Electrical components layout on the machine	43
4.7 Specifications of the automatic demagnetizing controller MA-3A	44-45
5 SUPPLEMENT	
5.1 Definition of electrical component symbols	46-48

CONTENTS

	PAGE
HOW TO ORDER REPLACEMENT PARTS	1
FRONT VIEW	2
REAR VIEW	3
COLUMN ASSEMBLY	4-5
VERTICAL FEED ASSEMBLY	6-7
WHEEL SPINDLE UNIT ASSEMBLY (52ST)	8-9
WHEEL SPINDLE UNIT ASSEMBLY (8.20ST)	10-11
WHEEL GUARD ASSEMBLY	12-13
TABLE SPLASH GUARD ASSEMBLY	14-15
SADDLE PARTS ASSEMBLY	16-17
REAR SPLASH GUARD ASSEMBLY (OPTION)	18-19
CROSS FEED UNIT ASSEMBLY	20-21
HYDRAULIC VALVE BODY ASSEMBLY	22-23
HYDRAULIC OIL TANK SASSEMBLY	24-25
MACHINE BASE ASSEMBLY	26-27