

NC TURRET PUNCH PRESS

ARIES-245 

OPERATOR'S MANUAL

 **AMADA**

ARIES245 OPE-E04-199209

I

Description

Locations of components	2
Punching mechanism	3
Punch and die turrets	4
Table and carriage	5
Controls	6
Safety functions	6

III

Controls

Electrical control unit	2
Main control panel	3
— Programming keys, etc.	4
— Machine and NC function control keys, etc.	7
— Indicator lights	13
— Floppy disk drive	15
— Turret control buttons	15
— Auxiliary turret jog button	15
Auxiliary machine control buttons	16
Auxiliary machine control stand (option)	17
"EMERGENCY STOP" button (option)	19

III

Operation

Preparing for operation	2
Mounting tools	5
— Non-auto-index turret stations	5
— Auto-index turret stations	7
Dismounting tools	8
Mounting worksheet	9
Punching	10
— Safety precautions	10
— AUTO-mode punching	11
— MDI-mode punching	12
Operation interruptions and restarting	14

IV

Program

Program in disk	2
Program in tape	3
Programming	4
— Registering program name	4
— Entering program data	5
Verifying completed program	8
— Verification without plotting	8
— Verification with plotting	8
Modifying program data	12
— Searching for program or data word	12
— Changing data word	12
— Deleting data word	12
— Inserting data word	12
Program management	13
— Saving program in data disk or tape	13
— Listing program names	14
— Changing program name	14
— Deleting program	15
— Deleting all programs	15
— Error messages	16
Disk drive head cleaning	17
Parameter loading & saving	18

V

Alarms

Alarm numbers	2
Program alarms (001-197, 303-363)	3
Overtravel alarms (210-223)	7
Servosystem alarms (400-534, 541-544)	8
Hardware alarms (540, 550-581, 700-777)	16
Auto-index alarms (600-603)	17
Hydraulic unit alarms (800-801)	17
Sequence alarms (900-906)	18

VI

Maintenance

Daily maintenance	2
Monthly maintenance	3
Quarterly maintenance	3
Lubrication	4
Hydraulic oil	5
Press motor V-belts	6
Control cabinet ventilation fans	7
DC servomotors	8
Automatic lubricator	9
Striker shear plate	10
Punches and dies	11
Self-diagnosis	16