


FUJI Programmable Controllers
MICREX-F SERIES
F60

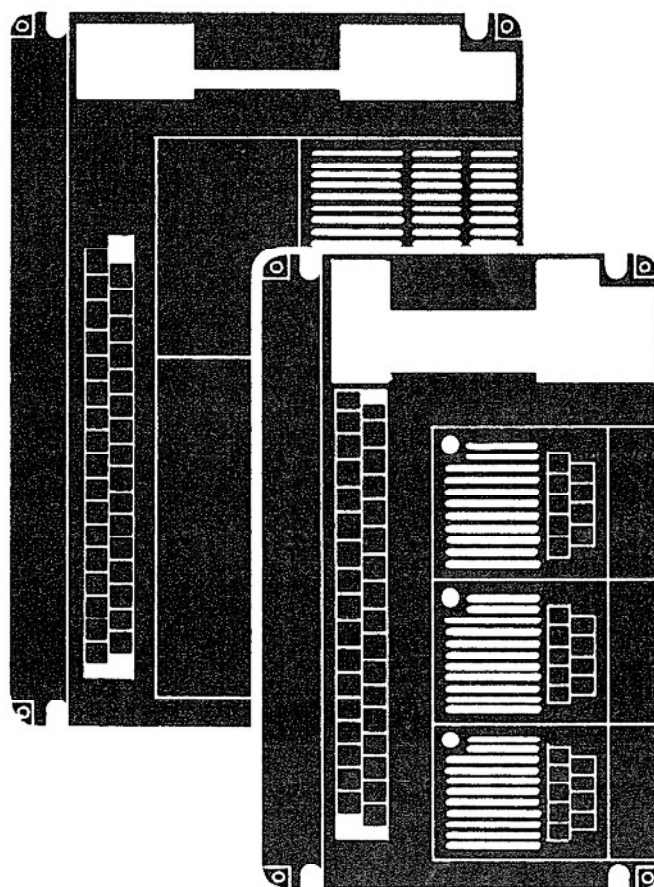

User's Manual **HARDWARE**

CONTENTS

		Page
Section 1	1-1	Important Notes 1-2
Important Notes		
Section 2	2-1	Introducing the MICREX-F Series 2-2
System Configuration	2-2	System Configuration 2-5
	2-3	System Configuration and Components 2-7
	2-4	Programming Tools 2-14
Section 3	3-1	Names of Parts 3-2
Component Names and Functions	3-2	Functions of Parts 3-5
Section 4	4-1	Types 4-2
Specifications	4-2	General Specifications 4-5
	4-3	Processor Specifications 4-6
	4-4	List of F60 Series Instructions 4-22
	4-5	I/O Specifications 4-27
	4-6	Wiring Diagrams 4-45
	4-7	Dimensions 4-55
Section 5	5-1	Checking the PC Before Installation 5-2
Installation and Wiring	5-2	Mounting the PC on Control Panel 5-4
	5-3	Wiring 5-10
Section 6	6-1	Preliminary Check 6-2
Test Operation	6-2	Test Operation 6-3
Section 7	7-1	Troubleshooting 7-2
Troubleshooting	7-2	Diagnosing and Recovering Fatal Faults Indicated by ALARM1 7-5
	7-3	Diagnosing and Recovering Nonfatal Faults Indicated by ALARM2 7-15
	7-4	RAS Data 7-22
	7-5	Troubleshooting During Programming 7-24
	7-6	Program and Data Monitoring 7-31
Section 8	8-1	General Inspection Items 8-2
Maintenance and Inspection		
Appendix		