

QM-Data 200

2D Data Processing Unit

User's Manual

Read this User's Manual thoroughly
before operating the instrument. After reading,
retain it close at hand for future reference.

Mitutoyo

QM-Data 200

2D Data Processing Unit Operation Guide

Mitutoyo

Table of Contents

CONVENTIONS USED IN THIS MANUAL.....	i
Introduction	ii
Model Workpiece.....	ii
1 Before Starting Measurements	1-1
1.1 Outline of Data Processing Unit.....	1-1
1.1.1 Appearance	1-1
1.1.2 Key Panel Layout.....	1-2
1.1.3 Elements of LCD Screen.....	1-3
1.1.4 Measurement Screen	1-4
1.2 Preparing for Measurement.....	1-5
1.2.1 Turning On the Power	1-5
1.2.2 Setting Printer Output to ON (when printer is connected).....	1-6
2 Basic Measurements	2-1
2.1 Measuring a Circle.....	2-1
2.2 Measuring Angle Between Two Edges	2-3
2.3 Measuring a Width.....	2-5
2.4 Measuring Distance Between Two Circles.....	2-7
3 Aligning Part Coordinate System.....	3-1
3.1 Aligning Part Coordinate System.....	3-1
3.2 Aligning Part Coordinate System Using Edges as Reference	3-2
3.3 Aligning Part Coordinate System Using Circle Centers as Reference.....	3-4
4 Applied Measurements	4-1
4.1 Multi-point Measurement	4-1
4.2 Selecting and Outputting Required Measurement Items Only.....	4-4
4.3 Recalling Measured Features to Construct a New Feature	4-6
4.4 Performing Tolerance Judgment	4-9
5 AI Measurement	5-1
5.1 AI Measurement Function	5-1
5.2 Performing AI Measurement.....	5-2

QM-Data 200

2D Data Processing Unit Hardware Guide

Mitutoyo

CONTENTS

CONVENTIONS USED IN THIS MANUAL	i
WARRANTY	iii
PRECAUTIONS FOR USE	iv
1 Introduction	1-1
1.1 Outline	1-1
1.2 Component Names and Functions	1-3
2 Setting Up	2-1
2.1 Required Environment for Installation	2-1
2.2 Assembling the Data Processing Unit and Mounting It on Profile Projector	2-2
2.2.1 Assembling the Data Processing Unit (When the Unit Is Attached to the Base)	2-2
2.2.2 Mounting the Data Processing Unit on Profile Projector (When the Unit Is Attached to the Arm)	2-4
2.3 Connection to the Main Unit of the Measuring Instrument	2-5
2.4 Setting the Data Processing Unit	2-7
2.4.1 Counter Settings	2-7
2.4.2 Checking and Setting the Counting Direction	2-9
2.4.3 Function of Setting Reference Origin at Start-up	2-10
2.5 Sequence of Turning on Power	2-11
3 Mounting Optional Accessories	3-1
3.1 Printer	3-1
3.1.1 Receipt Printer	3-1
3.1.2 ESC/P Printer	3-2
3.2 Floppy Disk Drive	3-3
3.3 Foot Switch	3-4
4 Maintenance and Troubleshooting	4-1
4.1 Daily Care	4-1
4.2 Troubleshooting	4-2
5 Specifications	5-1
5.1 Basic Specifications	5-1
5.2 Power Supply Specifications	5-2
5.3 Input and Output Specifications for the Data Processing Unit	5-3
5.3.1 Output to Printer (Centronics; 8-bit parallel)	5-3
5.3.2 RS-232C Input and Output	5-4
5.4 Standard Accessories	5-5

5.5	Optional Accessories	5-6
5.5.1	List of Optional Accessories	5-6
5.5.2	Floppy Disk Drive	5-6
5.5.3	Foot Switch	5-6

QM-Data 200

2D Data Processing Unit Software Guide

Mitutoyo

Table of Contents

CONVENTIONS USED IN THIS MANUAL	i
Table of Contents.....	ii
1 Basic Knowledge	1-1
1.1 Key Panel	1-1
1.1.1 Key Panel Layout	1-1
1.1.2 Key Functions	1-2
1.2 Screen Displays.....	1-7
1.2.1 Elements of Basic Screen	1-7
1.2.2 Icons in Status Display Area.....	1-8
1.2.3 Types of Measurement Screen	1-9
1.2.3.1 Measuring Procedure's Navigation Screen	1-9
1.2.3.2 Enlarged Counter Screen	1-10
1.2.3.3 Measurement Result Screen	1-10
1.2.3.4 Measurement Result Screen with Graphic Display.....	1-11
1.2.3.5 Measuring Position's Navigation Screen.....	1-11
1.3 Coordinate Systems.....	1-12
1.3.1 Machine Coordinate System and Part Coordinate System.....	1-12
1.3.2 Cartesian Coordinate System and Polar Coordinate System.....	1-12
2 Basic Operations.....	2-1
2.1 Start-up and Shutdown.....	2-1
2.2 How to Change Measurement Screen Types	2-2
2.3 How to Use Function Keys	2-3
2.4 How to Select the Icon Menu Item	2-4
2.5 How to Select the Non-icon Menu Item.....	2-5
2.6 How to Select List Item	2-6
2.7 How to Select Parameter	2-6
2.8 How to Enter Text and Numerical Value	2-7
3 Basic Measurement Functions	3-1
3.1 Basic Operations in Measurement	3-1
3.2 Basic Feature Measurement Function	3-2
3.2.1 Point Measurement.....	3-3
3.2.2 Line Measurement.....	3-3
3.2.3 Circle Measurement.....	3-4
3.2.4 Distance Measurement.....	3-4
3.2.5 Ellipse Measurement	3-5
3.2.6 Rectangular Hole Measurement	3-5
3.2.7 Slot Measurement	3-6
3.2.8 Point & Angle Measurement	3-7

3.3	Measurement Macro Function	3-8
3.3.1	Pitch Measurement	3-9
3.3.2	Line-Point Distance Measurement	3-9
3.3.3	Line-Circle Distance Measurement	3-10
3.3.4	Circle-Circle Distance Measurement	3-10
3.3.5	Line-Circle Intersection Measurement	3-11
3.3.6	Circle-Circle Intersection Measurement	3-11
3.3.7	Point-Point Midpoint Measurement	3-12
3.3.8	Line-Point Midpoint Measurement	3-12
3.3.9	Line-Line Midline Measurement	3-13
3.3.10	Perpendicularity Measurement	3-13
3.3.11	Parallelism Measurement	3-14
3.3.12	Height Measurement	3-14
3.3.13	Circle-Point Distance Measurement	3-15
3.3.14	Circle-Circle Midpoint Measurement	3-15
3.3.15	Projected Point Measurement	3-16
3.3.16	Circle-Point Tangency Measurement	3-16
3.3.17	Circle-Circle Tangency Measurement	3-17
3.3.18	Corner Circle Measurement	3-17
3.3.19	Plane-plane Distance Measurement	3-18
3.4	Function of Constructing and Keying in Features	3-19
3.4.1	Outline of Constructing and Keying in Features	3-19
3.4.2	List of Functions of Constructing and Keying in Features	3-20
3.4.3	How to Select Basis Features for Feature Construction	3-27
3.4.4	How to Select Result Feature	3-28
3.5	Feature Construction Using Feature's Point Recall	3-30
3.5.1	Feature's Point Recall	3-30
3.5.2	How to Select Features to Be Recalled	3-31
3.6	Convenient Functions	3-33
3.6.1	Modifying Measurement Result Output Items	3-33
3.6.2	Setting the Automatic Measuring Completion Function ON and OFF	3-33
3.6.3	Setting Edge Detection Function ON and OFF	3-33
4	Simplified Measurement Functions	4-1
4.1	AI Measurement Function	4-1
4.1.1	Outline of AI Measurement Function	4-1
4.1.2	Operation in AI Measurement Mode	4-2
4.2	Function of Setting the Coordinate Data Input Style	4-3
4.2.1	Outline of the Coordinate Data Input Style	4-3
4.2.2	How to Set the Coordinate Data Input Style	4-5
5	Coordinate System Alignment Functions	5-1
5.1	Aligning Origin	5-1
5.2	Translating Coordinate System	5-2
5.3	Aligning Reference Axis	5-3

5.3.1	Aligning Reference Axis by a Point.....	5-3
5.3.2	Aligning Reference Axis by a Line	5-4
5.4	Rotating Coordinate System	5-5
5.5	Aligning Reference Axis with Offset Value.....	5-6
5.6	Storing Coordinate System	5-7
5.7	Recalling Coordinate System.....	5-7
5.8	Resetting Coordinate System	5-8
5.9	Plane Alignment.....	5-9
5.10	Coordinate System Alignment Macro Commands.....	5-10
5.11	Aligning Coordinate System Using Coordinate Data Input Style	5-11
6	Measurement Assist Functions	6-1
6.1	Tolerance Judgment Function	6-1
6.1.1	Setting Tolerance Judgment Function ON and OFF	6-1
6.1.2	How to Input Tolerance Data	6-2
6.2	Printing Function.....	6-3
6.2.1	Manual Printing of Measurement Result	6-3
6.2.2	Automatic Printing of Measurement Result	6-3
6.2.3	Page Feed at Printer	6-4
6.3	Displaying Comment and Date & Time	6-5
6.4	Setting Units and Decimal Places.....	6-6
6.5	Setting Scale Factor	6-7
6.6	Gauge Block Offset.....	6-8
6.7	Resetting Measurement Parameters	6-9
7	External Output Functions of Measurement Results	7-1
7.1	Starting File Output of Measured Data.....	7-1
7.2	Starting RS-232C Output of Measured Data	7-2
7.3	Outputting Comment, Date and Time.....	7-3
7.4	Terminating Measured Data Output	7-4
8	Part Program Functions	8-1
8.1	Learn Mode	8-1
8.1.1	Starting Creation of Part Program.....	8-1
8.1.2	Terminating Creation of Part Program.....	8-2
8.2	Repeat Mode	8-2
8.3	Edit Mode	8-3
8.3.1	Activating Part Program Editor.....	8-3
8.3.2	Editing Part Program	8-3
8.3.3	Terminating Part Program Editor	8-4
9	Simple Statistical Processing Functions	9-1
9.1	Starting Statistical Data Collection.....	9-1
9.2	Terminating Statistical Data Collection	9-2
9.3	Outputting Statistically Processed Results.....	9-3

10	User Customization Function	10-1
10.1	Outline of User Customization Function	10-1
10.2	Management Function for User-defined Menu	10-2
10.2.1	Selecting One of the User-defined Menus	10-2
10.2.2	Registering Command to User-defined Menu	10-3
10.2.2.1	Registering Standard Command	10-3
10.2.2.2	Registering Part Program	10-4
10.2.2.3	Registering User-defined Macro Command	10-5
10.2.3	Deleting User-defined Menu Item	10-5
10.2.4	Modifying User-defined Menu Item	10-6
10.2.5	Backing Up and Restoring User-defined Menu	10-6
10.2.6	Terminating User-defined Menu Management	10-7
10.3	Management Function for User-defined Macro Commands	10-7
10.3.1	List Display of User-defined Macro Commands	10-8
10.3.2	Registration to User-defined Macro Command	10-9
10.3.3	Deleting User-defined Macro Command	10-11
10.3.4	Backing Up and Restoring User-defined Macro Commands	10-12
10.3.5	Terminating User-defined Macro Command Management	10-12
11	File Management Functions	11-1
12	System Configuration Functions	12-1
12.1	Measurement Conditions Setting	12-2
12.1.1	Setting the Automatic Measuring Completion Function	12-2
12.1.2	Output Items Setting	12-2
12.1.3	Measuring Points Setting	12-2
12.1.4	Setting the Threshold of Movement Detection	12-3
12.1.5	Setting the Control Method of Edge Detection	12-3
12.2	User Customization Function	12-4
12.2.1	User-defined Macro Command	12-4
12.2.2	User-defined Menu	12-4
12.3	Devices Setting	12-5
12.3.1	LCD Contrast	12-5
12.3.2	LCD Light Off	12-5
12.3.3	Buzzer Volume	12-5
12.3.4	Clicking Sound	12-5
12.3.5	Printer	12-5
12.3.6	RS-232C (1) Baud Rate	12-6
12.3.7	RS-232C (1) Communication Condition	12-6
12.3.8	RS-232C (1) Flow Control	12-6
12.4	System Setting	12-7
12.4.1	Language	12-7
12.4.2	Date Format	12-7

12.4.3	Date	12-7
12.4.4	Time.....	12-7
12.4.5	Password	12-8
12.5	Measuring Instrument Settings	12-8
12.6	Error Correction Settings	12-8
12.7	Maintenance.....	12-8
13	Help Topics	13-1
13.1	How to Increase Number of Measurement Points during Measurement.....	13-1
13.2	How to Finish Measurement during the Measurement to Obtain Results Immediately.....	13-2
13.3	How to Cancel Incorrect Measured Point Data	13-2
13.4	How to Cancel Measurement during the Measurement	13-3
13.5	How to Use the Data Processing Unit as a Counter	13-4
14	Appendix	14-1
14.1	List of Output Symbols	14-1
14.2	Data Output Format.....	14-5
14.3	Printer Output Format.....	14-7
14.4	Installing Software	14-8

SERVICE NETWORK