

BOSTOMATIC ™

**3200X Control
Operating Manual**



Part Number 15A742

Revision 1

Contents

Manual Layout

Chapter 1 Operating Environment

Introduction	1-1
3200X Control	1-2
Control Components	1-2
Touch Screen	1-3
Operator Controls	1-5
Spindle Controls	1-6
Hard Disk Drive	1-10
Floppy Disk Drive	1-10
CRT Adjustments	1-11
Keylock Switch	1-11
Speaker	1-11
Reset Switch	1-11
Keyboard	1-12
Controller Boards	1-12
Rear Panel Components	1-13
Exhaust Fan	1-13
Filter	1-13
Latch	1-14
Key Lock	1-14
Interlock Switch	1-14
Cooling Fan	1-14
Serial Ports	1-15

Chapter 2 Getting Started

Introduction	2-1
Powering the System On.....	2-1
Main Screen	2-3
How to Access the Machining Screen.....	2-4
How to Access File Management.....	2-5
How to Access Configuration	2-6
Mill Power	2-7
Status Displays	2-8
Message Display Areas.....	2-10
System Messages.....	2-11
Powering the System OFF	2-13

Chapter 3 File Management

Introduction	3-1
File Structure and Organization.....	3-3
Definition of a File	3-3
File Specification.....	3-5
Using Filters to Sort Files	3-6
Managing Devices.....	3-7
How to Access Device Mgmt	3-7
How to Access Select Device.....	3-8
Disk Formatting	3-9
Managing Directories.....	3-11
How to Select a Directory	3-11
How to Remove a Directory	3-13
How to Access Make Dir.....	3-14
Sorting Files.....	3-16
Sort Functions.....	3-16

File Functions	3-18
File Function Procedures	3-18
How to Move a File	3-19
How to Copy a File	3-21
How to Delete a File	3-23
How to Rename a File	3-24
File Options	3-25
Archive (PAX)	3-27
Archive PAX Functions	3-29
Backup Files	3-31
Creating a PAX Directory	3-33
Copying a PAX File	3-34
Command Line Switches	3-35
Optional Switches	3-36
Advanced Options for UNIX Users	3-38
Operands	3-38
Command Line Examples	3-39
Exit Codes	3-39

Chapter 4 Editor

Introduction	4-1
How to Access the Editor	4-1
Basic Keystrokes	4-4
File Operations	4-5
Opening/Closing a File	4-5
Windows	4-6
Sequence Numbers	4-6
Multiple File Loading	4-7
Text Line Operations	4-7

Text Manipulation	4-9
Marking Text	4-9
Copying and Moving Text	4-10
Buffer Commands	4-10
Deleting Text	4-11
Restoring Text	4-11
Program Block Operations	4-12
Keystroke Recording	4-12
String Commands	4-13

Chapter 5 Ethernet

Introduction	5-1
Installation	5-1
Configuration	5-1
Configuring the Internet Address	5-1
How to Create a Host File	5-3
Verification	5-3
Guidelines	5-4
Checking ftp Status	5-5
Sending a File via ftp	5-7
Receiving a File via ftp	5-9
FTP Auto-login	5-11
Default FTP Server	5-12
Using File Management to FTP Files	5-13
Restrictions	5-13
Directory Displays	5-14

Chapter 6 Direct Numeric Control (DNC)

Introduction 6-1

 Installation 6-1

 Connecting to the dnc Port 6-1

 Electric’s Cabinet RS232C Serial Port 6-2

 Software Installation at Start up 6-2

 DNC Screens 6-3

 How to Access Select Device 6-3

 How to Access Device Mgmt 6-5

 How to Access the Configuration Screen 6-6

 Sending a File via dnc 6-10

 Receiving a file via dnc 6-13

 Machining Procedure 6-15

 Considerations when Machining from dnc 6-15

 Machining Directly from dnc 6-16

 Terminal Mode 6-17

 ANSI Character Compatibility 6-18

 Multiple File Transfers 6-21

Chapter 7 Machining Screen

Introduction 7-1

 Accessing the Machining Screen 7-1

 Axes Positions 7-2

 Program Display 7-3

 Keyboard Display 7-3

 Program Options 7-4

 Manual Positioning 7-6

 Accessing the Jog Screen 7-6

 Jogging Methods. 7-7

Enable Start Button	7-7
Jog Modes	7-8
Axis Selector Switch	7-9
Handwheel	7-10
Manual Data Input	7-12
Close and Save	7-14
Exit MDI and Save	7-14
Accessing Set User Value	7-16
B Axis Jogging	7-18
How to Clear On-Line Jogs	7-19
Captured Value Register	7-19
Machine Status Screen	7-20
Program Information	7-22
Machine Timers	7-23
Thermatrol Information	7-24
Main/Auxiliary Spindle	7-24
A Axis Diameter	7-26
Machining Allowance	7-28
Contour Deviation	7-30
Performance Switching	7-32
Flood Mist Selection	7-34
Inch / Metric Units	7-37
Reset Cycle Done Alarm (optional)	7-39
Machine Setup	7-40
Accessing Machine Setup	7-40
Machine Coordinates	7-40
Accessing Machine Coordinates	7-41
Accessing Part Zero	7-41
Establishing Part Zero	7-42
Establish Part Zero	7-42

Execute G26	7-43
Capturing Part Offset	7-44
Program Execution Overrides	7-48
Inh Feed	7-48
Inh Speed	7-48
Block Delete	7-49
Dry Run	7-50
Accessing Dry Run	7-50
Check Mode	7-51
Single Block	7-51
Syntax Error	7-52
Inhibit Functions	7-52
Check Mode Only	7-52
Tool Path Plotting	7-53
Assigning the Plot Plane	7-53
Single Block	7-55
How to Exit	7-56
Run Menu	7-57
Accessing Run Menu	7-57
Machining Options	7-61
Opt Stop	7-62
Create Setpnt	7-63
How to Create Setpnt	7-63
Execute Setpnt Parameters	7-67
Tool Changer	7-68
Accessing the Tool Changer	7-68
Automatic Tool Changer	7-69
Dual Tool Changers	7-69
Tool Table and Variable Table	7-70
Tool Table	7-71
Variable Table	7-73

Chapter 8 Configuration Screen

Introduction	8-1
Accessing the Configuration Screen	8-1
Set Password	8-2
Set Clock	8-3
Calibrating the Touch Screen	8-3
Calibrating with the Keyboard	8-3
Saving the Configuration	8-3
Change Screen	8-3
How to Change a Parameter Setting	8-4
Inch vs Metric	8-5
Touch Screen Functions	8-6
5 AXIS TLC Prg Coord. (5 axis machines only)	8-6
A_OR_C_AXIS	8-6
ACTIVATE_LEAD_COMP	8-7
A_DIAMETER	8-7
A_DIA_ORIGIN_DEFAULT	8-7
ALARM_WARNING_TIME	8-8
ALLOW_DUPLICATE_CS	8-8
ATC_FEED_POT_OVERRIDE	8-8
AUTO_SAVE_TABLES	8-9
BACKLASH_X	8-10
BACKLASH_Y	8-10
BACKLASH_Z	8-10
BACKLASH_A	8-10
BACKLASH_B	8-10
BACKLASH_C	8-10
BIG_TOOL_OVERRIDE	8-11
BLEND_JOG	8-11
CHECK_MODE_ONLY	8-12

CHECK_MODE_RESTORE	8-12
C_DIAMETER	8-13
C_DIA_ORIGIN_DEFAULT	8-13
CIRCLE_ACCURACY	8-14
CIRCLE_CHECK	8-14
CNR_RAMP_CLEARANCE (Auto Cornering option)	8-14
CNR_RAMP_HEIGHT_MODE (Auto Cornering option)	8-15
CNR_RAMP_MINIMUM_ANGLE (Auto Cornering option)	8-15
CNR_RAMP_MINIMUM_INCR (Auto Cornering option)	8-16
CNR_RAMP_PLUNGE_MODE	8-16
CNR_RAMP_FEED_RATIO (Auto Cornering option)	8-16
COM1_BAUDRATE	8-17
COM1_DATA_BITS	8-17
COM1_EOL	8-17
COM1_FLUSH_INPUT	8-18
COM1_NULL_LINE	8-18
COM1_PARITY	8-19
COM1_STOP_BITS	8-19
CONTOUR_OPT_MIN_FEED (Contour Optimization option)	8-19
COOLANT_CLEAN	8-20
CYCLE_DONE_ALARM	8-20
DISABLE_TOOL_CHANGER	8-20
DISABLE_TOOL_CHANGERS	8-21
FREE_CPU	8-21
FTP_DIR_TYPE	8-21
HW_X_AXIS	8-21
HW_Y_AXIS	8-21
INH_FEEDRATE	8-22
INH_SPEED	8-22
JOG_FEEDRATE	8-22
LANGUAGE (Translation option)	8-23

LOAD_METER_ENABLE	8-23
LOG_BUTTONS	8-24
METHOD_FEEDRS	8-24
METRIC_FEED_MMPM	8-24
MILL_TIMEOUT (Automatic Power On/Off option)	8-24
MILL_OFF_TIME (Automatic Power On/Off option)	8-25
MILL_ON_TIME (Automatic Power On/Off option)	8-25
SPINDLE_ON_DELAY	8-25
MMS_SIZE	8-26
PART_HEIGHT Prg Coord (Part Height Compensation option)	8-26
PGM_WAIT_FOR_START	8-26
PROBE_OFF_FEEDRATE (Part Probing option)	8-26
PROBE_ON_FEEDRATE (Part Probing option)	8-27
RAPID_ACCURACY	8-27
RAPID_FEEDRATE	8-27
REPEAT_PROGRAM	8-27
ROTATE_SCALE_STYLE	8-28
SCREEN_SAVER	8-28
SPINDLE_AUX_MAX_RPM	8-28
SPINDLE_MAIN_MAX_RPM	8-28
SPINDLE_ON (Automatic Power On/Off option)	8-29
SPINDLES	8-29
THERM_A_TROL ON	8-29
THERM_A_TROL FILE	8-30
TL_BALL_OFFSET	8-31
TL_LASER_MAX_TOOL_DIAM	8-31
TL_LASER_ORIENTATION	8-31
TL_LASER_CALIB_DIAM	8-31
TL_SETR_OFF_FEEDRATE (option)	8-31
TL_SETR_ON_FEEDRATE (option)	8-32
VARIABLE_WINDOW	8-32

VERIFY_TOOL_AT_ORIGIN 8-32
 Z_ALWAYS_LAST_MOVE 8-33

Appendix A The Calculator

Introduction A-1
 Performing Calculations A-4
 Allocating Memory..... A-8
 Cartesian and Polar Coordinate Conversions..... A-10

Appendix B Options

Introduction B-1
 Advanced Interlock System..... B-2
 Hardware Interlocks B-2
 Door/Window B-2
 Key Switch Position B-3
 System Message Area B-4
 Laser Tool Setter..... B-5
 Operating Environment..... B-5
 Work Table Application..... B-6
 Auxiliary Spindle B-7
 Hardware Orientation B-8
 Main Spindle Calibration..... B-9
 Auxiliary Spindle Calibration..... B-15
 Setting Tool Length..... B-18
 Touch Screen B-18
 M-Codes B-18
 Setting Tool Diameter..... B-20
 Touch Screen B-20
 M-Codes B-20
 Setting Tool Wear..... B-21

Tool Wear M-Codes	B-21
Wear Value G-Code	B-22
Wear Value Variable Code	B-22
Setting Tool Length and Diameter	B-23
Touch Screen	B-23
Axes Position G-Codes	B-24
How to Access the Tool Setter Screen	B-25
Running a Program	B-26
Setup Pendant	B-27
Operator Controls	B-27
How to Enable the Pendant	B-28
How to Disable the Pendant	B-30
Tool Length and Breakage Detection	B-31
Dust Box Application	B-32
Work Table Application	B-33
Locating X and Y Cordinates with the Main Spindle	B-34
Locating X and Y Coordinates with the Auxiliary Spindle	B-36
Setting Tool Length	B-38
Touch Screen	B-38
M-Codes	B-38
Setting Tool Wear	B-39
Wear Value G-Code	B-39
Wear Value Variable Code	B-41
Setting X / Y Offsets	B-41
X / Y Offset G-Code	B-42
X / Y Offset Variable Code	B-42
How to Access the Tool Setter Screen	B-43
Running a Program	B-44