

**YCM**

**OPERATING MANUAL**  
WITH SYMBOLIC PANEL

**YCM-FV85A**

( FANUC 18M/18iM/21iM/MXP-100i)

**VERTICAL MACHINING CENTER**

**OPVMCP01E**

**R010**

## CONTENTS

1. Operational safety .....	1-1
1.1 Operational safety for CNC machine .....	1-1
1.2 Tips for high speed machining .....	1-2
2. Operation panel .....	2-1
2.1 Panel layout .....	2-1
2.1.1 9" CRT/MDI panel for 18M.....	2-1
2.1.2 Correspondence between English key and Symbolic key (Series 16,18,20,21) .....	2-2
2.1.3 YCM-VMC operator's panel(A Type).....	2-3
YCM-VMC operator's panel(B Type).....	2-3-1
2.1.4 MPG ( Manual Pulse Generator ) .....	2-4
2.1.5 Magazine panel (30T/40T/#50 24T) .....	2-4
2.2 Standard function.....	2-5
2.2.1 POWER ON .....	2-5
2.2.2 POWER OFF .....	2-5
2.2.3 TOOL UNCLAMP/CLAMP .....	2-5
2.2.4 DRY RUN .....	2-5
2.2.5 SINGLE BLOCK .....	2-6
2.2.6 BLOCK SKIP .....	2-6
2.2.7 OPTIONAL STOP .....	2-6
2.2.8 MACHINE LOCK .....	2-6
2.2.9 MODE SELECT SWITCH .....	2-7
2.2.10 FEEDRATE OVERRIDE .....	2-7
2.2.11 FLOOD COOLANT .....	2-8
2.2.12 BOTH HAND .....	2-8
2.2.13 MAG FORWARD (20T).....	2-8
2.2.14 MAG BACKWAED (20T).....	2-8
2.2.15 POT VERTICAL (24T/30T/40T).....	2-8
2.2.16 MANUAL ATC (24T/30T/40T).....	2-9
2.2.17 MAG INDEX(20T/24T) .....	2-9
2.2.18 CYCLE START .....	2-9
2.2.19 CYCLE STOP (FEED HOLD) .....	2-9
2.2.20 EMERGENCY .....	2-9
2.2.21 SPINDLE OVERRIDE .....	2-10
2.2.22 SPINDLE C.CW .....	2-10
2.2.23 SPINDLE C.W .....	2-10
2.2.24 SPINDLE ORIENTATION .....	2-10
2.2.25 SPINDLE STOP .....	2-10
2.2.26 RAPID OVERRIDE .....	2-11
2.2.27 O.T RELEASE .....	2-11
2.2.28 JOG FEEDRATE.....	2-11

2.2.29 JOG BUTTON.....	2-11
2.2.30 RAPID.....	2-12
2.2.31 MEMORY PROTECT KEY .....	2-12
2.2.32 WORK LIGHT .....	2-12
2.2.33 NEXT TOOL DISPLAY.....	2-12
2.2.34 SPINDLE TOOL DISPLAY.....	2-12
2.2.35 AXIS SELECTOR SWITCH.....	2-13
2.2.36 SELECTOR SWITCH OF FEEDRATE RATIO .....	2-13
2.2.37 MPG (MANUAL PULSE GENERATOR) .....	2-13
2.2.38 CONVEYOR FORWARD (65A/85A/V105A/ FV56T/FV56A OPTION).....	2-13
2.2.39 CONVEYOR REVERSE (65A/85A/V105A OPTION).....	2-13
2.2.40 AIR BLAST.....	2-14
2.2.41 MAG C.W(30T/40T/#50 24T).....	2-14
2.2.42 MAG C.C.W(30T/40T/#50 24T).....	2-14
2.2.43 SPINDLE LOAD METER.....	2-14
2.2.44 MANUAL ATC .....	2-14
2.2.45 CONVEYOR STOP/REVERSE .....	2-14
2.2.46 RUSH CHIPS .....	2-15
2.3 Software operator's panel .....	2-15
2.3.1 MAN.ABS (MANUAL ABSOLUTE).....	2-15
2.3.2 MST-LOCK(M.S.T LOCK).....	2-15
2.3.3 Z-NEG(Z AXIS NEGLECT) .....	2-15
2.3.4 F1-DIG(F1 DIGIT).....	2-15
2.3.5 TL-RTN(TOOL RETURN) .....	2-15
2.4 Optional function .....	2-16
2.4.1 PROGRAM RESTART .....	2-16
2.4.2 HANDLE INTERRUPT .....	2-16
2.4.3 PLAY BACK(TEACH IN HANDLE /TEACH IN JOG).....	2-16
2.4.4 MANUAL LINE/CIRCULAR INTERPOLATION .....	2-17
2.4.5 TOOL WITHDRAW .....	2-17
2.4.6 TOOL RETRACE .....	2-17
2.4.7 OIL HOLE.....	2-17
2.4.8 AUTO DOOR.....	2-17
2.4.9 POWER OFF.....	2-18
2.4.10 MACRO INTERRUPT .....	2-18
2.5 APC FUNCTION .....	2-18
2.5.1 FOR TCV51T APC .....	2-18
2.5.1.1 PALLET UNCL.....	2-18

2.5.1.2 APC STANDBY .....	2-18
2.5.2 FOR V56A AND V56T APC .....	2-19
2.5.2.1 APC DOOR .....	2-19
2.5.2.2 PALLET UNCL .....	2-19
2.5.2.3 APC STANDBY .....	2-19
2.5.3 FOR TCV41A APC .....	2-19
2.5.3.1 APC STANDBY .....	2-19
3. Procedure of starting and stopping the machine.....	3-1
3.1 Daily maintenance .....	3-1
3.2 Procedure of starting .....	3-3
3.3 Procedure of stopping .....	3-4
3.4 Replacing CNC battey for memory back-up.....	3-5
3.5 Replace battery for absolute pulse coder.....	3-6
4. Manual operation.....	4-1
4.1 Axis feed.....	4-1
4.1.1 Jog feed .....	4-1
4.1.2 Handle feed.....	4-2
4.2 Zero return.....	4-2
4.3 Spindle start and stop .....	4-3
4.3.1 Spindle start by MDI .....	4-3
4.3.2 Spindle start by JOG .....	4-3
4.3.3 Spindle stop .....	4-3
4.4 Magazine side tool remove and install .....	4-4
4.4.1 From spindle side .....	4-4
4.4.2 From magazine side (20T).....	4-4
4.4.3 From magazine side (24T/30T/40T) .....	4-5
4.4.4 Special tools (30T/40T) .....	4-5
5. Automatic operation .....	5-1
5.1 Operation mode .....	5-1
5.1.1 Memory operation (MEM).....	5-1
5.1.2 MDI operation .....	5-1
5.2 Stopping automatic operation .....	5-1
5.2.1 Stopping by command .....	5-1
5.2.2 Stopping by manual .....	5-1
6. Program example .....	6-1
6.1 Example 1 .....	6-1
6.2 Example 2 .....	6-2
7. M function list .....	7-1
8. Simple high-precision contour control .....	8-1
8.1 Qutline .....	8-1
8.2 Specification .....	8-1
8.2.1 Command format .....	8-1
8.2.2 Effective functions .....	8-1
8.2.3 Specifications list .....	8-2

8.2.4 Conditions to enter simple high-precision contour control mode.....	8-6
8.3 Alarm.....	8-7
A. Appendix .....	A.1-1
A.1 Safe-guards (Flow chart) .....	A.1-1
A.2 Automatic tool length measurement.....	A.2-1
A.2.1 Set up.....	A.2-1
A.2.2 Program format .....	A.2-2
A.2.3 MACRO variable.....	A.2-2
A.2.4 Related parameter .....	A.2-2
A.2.5 MACRO body .....	A.2-3
A.2.6 Program example.....	A.2-4
A.2.6.1 The positive tool length measure .....	A.2-4
A.2.6.2 The negative tool length measure .....	A.2-4
A.3 Automatic pallet exchange.....	A.3-1
A.3.1 Shuttle type.....	A.3-1
A.3.1.1 RACK TYPE .....	A.3-1
A.3.1.1.1 APC layout.....	A.3-1
A.3.1.1.2 The procedure to set the coordinate of the APC reference point... A.3-2	A.3-2
A.3.1.1.3 M code.....	A.3-3
A.3.1.1.4 APC MACRO program .....	A.3-3
A.3.1.1.5 Manual operation.....	A.3-5
A.3.1.1.6 Auto operation .....	A.3-6
A.3.1.2 ARM TYPE.....	A.3-7
A.3.1.2.1 APC layout.....	A.3-7
A.3.1.2.2 The procedure to set the coordinate of the APC reference point... A.3-8	A.3-8
A.3.1.2.3 M code.....	A.3-9
A.3.1.2.4 APC MACRO program .....	A.3-9
A.3.1.2.5 Auto operation .....	A.3-11
A.3.1.2.6 To excluded interrupt.....	A.3-11
A.3.2 Rotary type .....	A.3-12
A.3.2.1 APC layout.....	A.3-12
A.3.2.2 The procedure to set the coordinate of the APC reference point..... A.3-13	A.3-13
A.3.2.3 M code.....	A.3-13
A.3.2.4 Manual operation .....	A.3-13
A.3.2.5 Auto operation .....	A.3-13
A.3.3 PMM Axis Rotary type.....	A.3-14
A.3.3.1 APC layout.....	A.3-14

A.3.3.2 The procedure to set the coordinate of the APC reference point.....	A.3-14
A.3.3.3 M code.....	A.3-14
A.3.3.4 Manual operation .....	A.3-15
A.3.3.5 Auto operation.....	A.3-15
A.3.4 CAM-TYPE Rotary .....	A.3-16
A.3.4.1 APC layout.....	A.3-16
A.3.4.2 M code.....	A.3-16
A.3.4.3 Manual operation .....	A.3-16
A.3.4.4 Auto operation.....	A.3-17
A.4 CYTEC ADMONITION.....	A.4-1
A.4.1 CyCon2 OPERATION METHOD.....	A.4-1
A.4.2 CyCon2 SETTING METHOD .....	A.4-2
A.4.2.1 Clamp tool parameter setting .....	A.4-2
A.4.2.2 Release tool parameter setting ....	A.4-2
A.4.2.3 Other parameter setting .....	A.4-2
A.4.3 CyCon2 REVEAL SIGNAL.....	A.4-3
A.5 HOW TO USE INTELLIGENCE COOLANT NOZZLE FUNCTION.....	A.5-1
A.5.1 THE DESCRIPTION OF FUNCTION .....	A.5-1
A.5.2 APPLICATION .....	A.5-1
A.5.3 TROUBLE SHOOTING.....	A.5-2
A.5.4 OPERATION METHOD .....	A.5-2
A.6 SPINDLE WARM UP SETTING .....	A.6-1
A.7 OIL AIR LUBE SYSTEM UNIT SETTING.....	A.7-1