

MACHINE MANUAL

OBP-110

KOMATSU
コマツ産機株式会社

| | CONTENTS | 0201-1 |
|--------------------------|----------------------------------------------------|--------|
| A. SPECIFICATIONS | | |
| 1. | Specifications and accuracy | A101 |
| 2. | Limit on working capacity | A201 |
| 2.1. | Limit on capacity | |
| 2.2. | Allowable stroke capacity | |
| 2.3. | Allowable eccentric load capacity | |
| 2.4. | Slide speed per minute in an intermitten operation | |
| 2.5. | Allowable working torque | |
| 2.6. | Preacutions for working capaity | |
| 2.7. | Allowable working capacity curves | A202 |
| 3. | Specifications of accessories | |
| 3.1. | Standard accessories | A301 |
| 4. | Press dimensions | A401 |
| 5. | Arrangement of press equipment | A501 |
| B. ACCESSORIES | | |
| 1. | KGF-915 Gripper feeder (optional) | B192 |
| 2. | Oil cooler | B193 |
| 3. | Portable push button panel (optional) | B502 |
| 4. | Digital control device | B516 |
| 5. | HITACHI HC Control equipment | B508 |
| 6. | Angle Detector | B537 |
| 7. | Roulette panel | B538 |
| 8. | DC power supply | B539 |
| C. SAFETY | | |
| 1. | Safety precautions | C101 |
| 2. | Safety device | C201 |
| 2.1. | Overrun detector | |
| 2.2. | Motion detector | |
| 2.3. | Dual valve | |
| 2.4. | Pressure switch for clutch and balancer | |
| 2.5. | Safety control circuit | |
| 2.6. | Key lock | |

| | CONTENTS | 0201-2 |
|-----------------|-----------------------------------------------------------------|--------|
| 2.7. | Two-hand operated safety device | |
| 2.8. | Safety block (optional) | |
| 2.9. | Safety plug (optional) | |
| 2.10. | Detector of clutch valve fault | |
| 2.11. | Side guard (optional) | |
| 2.12. | Light guard safety device (optional) | C202 |
| 3. | Stopping time & safety distance | C301 |
| 3.1. | Stopping time (Ts) | |
| 3.2. | Max. stopping time (Tl + Ts) | |
| 3.3. | Safety distance (D) | |
| 3.3.1. | In operator's-panel for two-hand engagement | |
| 3.3.2. | In light guard safety device | |
| D. INSTALLATION | | |
| 1. | Installation of the press | D101 |
| 1.1. | Installation with anchor bolts | |
| 1.2. | Installation with girder type foundation | |
| | Cautionary remarks and check on installation. | |
| 1.3. | Installation of shock absorber (optional) | D102 |
| 1.3.1. | Rubber cushion | |
| 1.3.2. | Cushion mount | |
| 1.3.3. | Cushion MAV | |
| 2. | Preparations for press operation | D201 |
| 2.1. | Oil supply | |
| 2.1.1. | Clutch box oil bath | |
| 2.1.2. | Slide adj. | |
| 2.1.3. | Overload protector | |
| 2.2. | Connection of the shop air line | |
| 2.3. | Connection of electric power line | |
| 3. | Check at test operation (Before shipping out of the factory) | D301 |

| | CONTENTS | 0201-3 |
|-----------------------|-------------------------------------------------------------------------------------|--------|
| E. OPERATION | | |
| 1. | Arrangement of operating controls | E101 |
| Fig.E-1-1 | Arrangement of operating panel and push button | |
| Fig.E-1-2 | Arrangement of run push button panel | |
| Fig.E-1-3 | Arrangement of the monitor lamp on the roulette panel | E102 |
| Fig.E-2 | Arrangement of air operated | E103 |
| 2. | Press operation control | |
| 2.1 | Types of operation control | E201 |
| 2.2 | Preparations and checks prior to press operation | E202 |
| 2.3 | Emergency stop during operation | E203 |
| 3. | Adjustment control | E301 |
| 3.1. | Die height adjustment (Electrical adj.) | |
| 3.2. | Angle detector adjustment | |
| 3.3. | Air pressure adjustment | |
| 3.4. | Restoring the hydraulic overload protector to its original (not actuated) condition | E302 |
| F. MAINTENANCE | | |
| 1. | Daily servicing cares | F101 |
| 1.1 | Servicing cares before operation | |
| 1.2 | Periodic servicing | |
| 2. | Trouble shooting guide | F201 |
| 3. | Constructions and functions | F301 |
| 3.1 | Press driving unit | |
| 3.2 | Clutch and brake | |
| 3.3 | Slide and hydraulic overload protector | |
| 3.4 | Balancer | |
| 3.5 | Circuit stopping at top dead point | |
| 3.6 | Circuit motion detector | |

| | CONTENTS | 0201-4 |
|----------|---------------------------------------------------------------------------|--------|
| Fig. F-1 | Press drive reduction gearing | F390 |
| Fig. F-2 | Construction of clutch and brake | |
| Fig. F-3 | Construction of slide | |
| Fig. F-4 | Construction of balancer | |
| Fig. F-5 | Construction of Encoder for Motion Detector | |
| Fig. F-6 | Construction of Angle detector | |
| Fig. F-7 | Installed position of adj. volume and switch of digital control device | |
| 4. | Servicing | F401 |
| 4.1. | Change of lubricating oil in the gear box | |
| 4.2. | V-belt replacement | |
| 4.3. | Clutch and brake inspection | |
| 4.4. | Disassembly and reassembly of clutch-brake unit | |
| 4.5. | Disassembly and reassembly of the press driving unit | |
| 4.6. | Gib adjustment | |
| 5. | Piping diagram | F501 |
| | How to read electrical circuit diagram | |
| 6. | Electric circuit diagram | F601 |
| 8. | List of commercially available lubricants | F801 |
| 9. | Major purchased units and parts | F901 |
| 10. | List of major electric components | |
| 11. | List of fast-wearing and replacement parts | G101 |