 
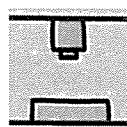 


Operator's Manual

Machine & Control Unit

* This folder contains all the information you need to operate your machine.

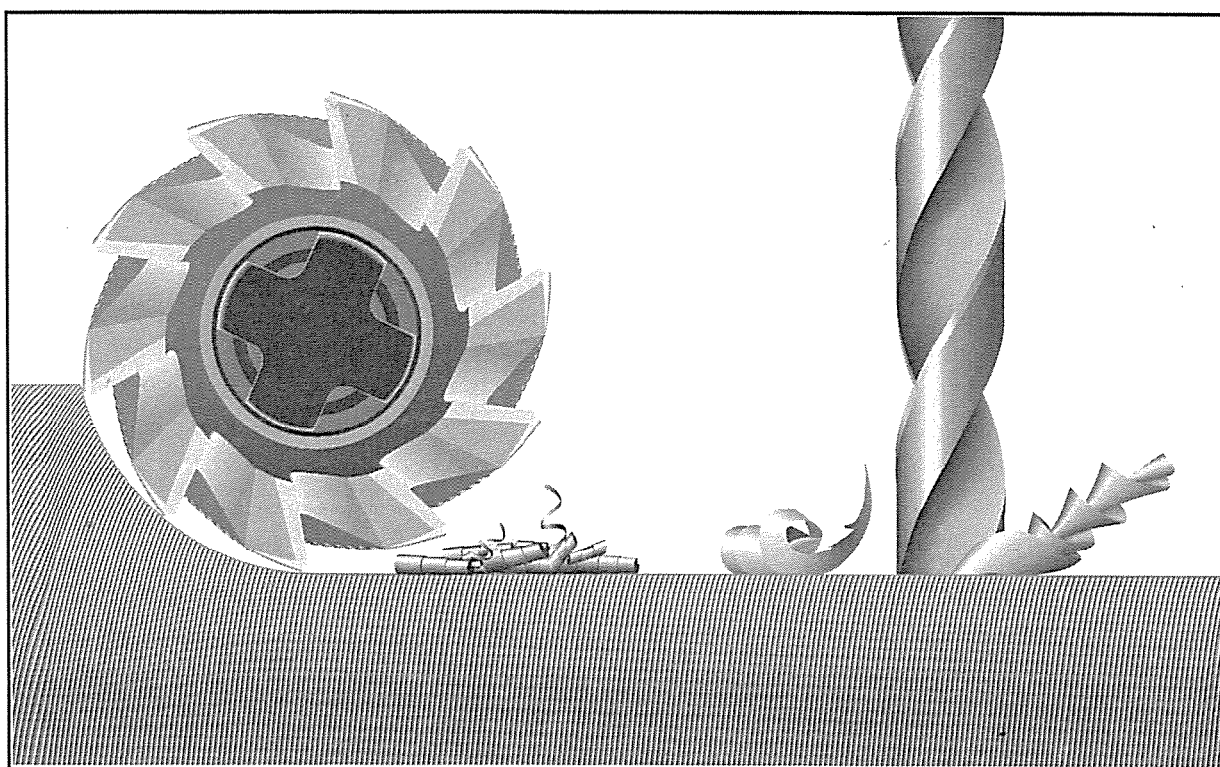


DMC 103 V



TNC 430

 
DECKEL MAHO

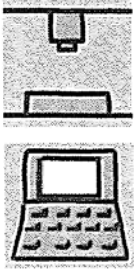

Machine Manual 1

Technical Fundamentals

 All about technical data, transport, installation, operation and maintenance.

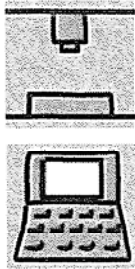

Machine Manual 2

Attachments & Accessories

 
All about our range of attachments and accessories you can use on your machine.



Control Unit Manual

Supplement

Supplementary information on the operation of the machine and control unit.

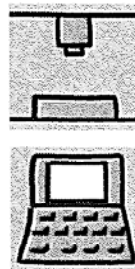

Parts Manual

 
Spare Parts Catalogue

This manual will help you to get speedy service when ordering spare and replacement parts.

Machine Manual 1

Technical Fundamentals

All about technical data, transport, installation, operation and maintenance.

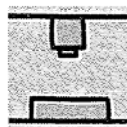

DMC 103 V



TNC 430

DECKEL MAHO

Overview of Operator's Manual

Technical Fundamentals Machine Manual 1

1. Machine specification
2. Technical data
3. Operation
4. Tool changer
5. Maintenance, lubrication
6. Transport
7. Installation
8. Connection, assembly

Contents

1. Machine specification	Main assemblies with table	1-2
	Machine axes	1-3
	Controls	1-4
	Control console	1-5
	Safety features	1-11
2. Technical data	Main drive 10,000 rpm	2-2
	Data sheet	2-3
	Installation diagram	2-9
	Working range	2-11
	Collision range	2-12
	Tool magazine collision diagram	2-13
3. Operation	To switch machine on	3-2
	To switch machine off	3-3
	Emergency stop	3-4
	To move to reference point	3-5
	Operating modes	3-6
	Door to working area	3-16
	To move machine slides manually	3-18
	Mechanical limit switch	3-20
	To change tools manually	3-21
	Spindle	3-23
	Lubricoolant	3-25
	Manual lubrication of slideways	3-26
	Stop for tool change	3-27
4. Tool changer	To load and unload tool magazine	4-2
	To reset tool changer automatically	4-6
	To reset tool changer manually	4-7
	To rotate tool magazine manually	4-10


Contents

5. Maintenance, lubrication	General information	5-2
	Lubricoolant	5-3
	Table of lubricants	5-5
	Maintenance and lubrication schedule	5-6
	Maintenance and lubrication – Overview	5-7
	Other maintenance and servicing work	5-8
	Centralized lubricating unit for slideways	5-10
	Lubricoolant unit	5-11
	Filter/regulator unit for pneumatic system	5-12
	Filter/regulator unit for scale ventilation system (option)	5-13
	Tool magazine	5-14
	Covers and slideways	5-15
	Tool clamping system	5-16
	Fan and heat exchanger in control cabinet	5-19
	Collision	5-21
	Inspection windows	5-22
 6. Transport	 General information	 6-2
	Required equipment	6-3
	Delivery	6-4
	To move machine in crate/on pallet	6-5
	To move unpacked machine	6-7
	Shipment	6-10
 7. Installation	 General information	 7-2
	Installation site	7-3
	To level and anchor machine	7-6
 8. Connection, assembly	 General information	 8-2
	Electrical connection	8-3
	To check connection	8-6
	Lubricoolant unit	8-7
	Compressed air	8-7
	Final inspection	8-8
	To prepare machine for transport	8-10
	Shipping fixtures	8-12
	Reduce shipping width	8-14

Machine Manual 2

Attachments & Accessories

 All about our range of attachments and accessories you can use on your machine.

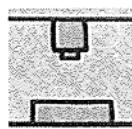

DMC 103 V



TNC 430

DECKEL MAHO

Overview of Operator's Manual

Attachments & Accessories Machine Manual 2

1. IKF400/VG 550 lubricoolant unit
2. IKF400/SUK 200 lubricoolant unit
3. KS swarf conveyor
4. SPB 3-600 lubricoolant cleaning unit
5. Lubricoolant supply through tool
6. Inspection window
7. Flush cleaning unit
8. Enclosure hood
9. Oil mist separator
10. Remote control
11. Cooling air
12. Torque bracket
13. NC table
14. Measuring probe – MP 10
15. Measuring probe – TS 632
16. Tool scanner – TT 130

Contents

1. IKF 400/ VG 550 lubricoolant unit	Data sheet Operation of swarf conveyor Maintenance Transport, assembly, connection	1-2 1-4 1-6 1-9
2. IKF 400/ SUK 200 lubricoolant unit	Data sheet Operation of swarf conveyor Maintenance Transport, assembly, connection	2-2 2-5 2-7 2-10
3. KS swarf conveyor	Data sheet Operation Maintenance Transport, assembly, connection	3-2 3-4 3-6 3-11
4. SPB 3-600 lubricoolant cleaning unit	Data sheet Operation Maintenance Transport, assembly, connection	4-2 4-5 4-6 4-10
5. Lubricoolant supply through tool	Data sheet Operation Maintenance Transport, assembly, connection	5-2 5-4 5-6 5-6
6. Inspection window	Visiport	6-2
7. Flush cleaning unit	Flush cleaning Flush gun	7-2 7-3
8. Enclosure hood	Data sheet	8-2
9. Oil mist separator	Data sheet Operation Maintenance	9-2 9-2 9-3

Contents

10. Remote control	Controls	10-2
	Operation	10-4
	Connection	10-8
11. Cooling air	Data sheet	11-2
	Operation	11-2
12. Torque bracket	Data sheet	12-2
13. NC table	Data sheet EA-410	13-2
	Data sheet RW/NC 160	13-3
	Activate/deactivate A axis	13-4
	Operation	13-6
	Maintenance EA-410	13-9
	Maintenance RW/NC 160	13-10
	Filter/regulator unit for EA-410 compensation system	13-11
	Transport, assembly, connection	13-12
14 Measuring probe – MP 10	Data sheet	14-2
	Operation	14-2
	Maintenance	14-4
15. Measuring probe – TS 632	Data sheet	15-2
	Operation	15-3
	Maintenance	15-5
16. Tool scanner – TT 130	Data sheet	16-2
	Collision range	16-3
	Operation	16-4

Control Unit Manual

Supplement

Supplementary information on the operation of the machine and control unit.

DECKEL MAHO



TNC 426
TNC 430
iTNC 530

Overview of Manual

User manuals The Heidenhain user manuals contain complete information on how to use and program the control system.

Supplement 1. Operating modes
 2. Parameters
 3. M functions
 4. Other functions

Contents


1. Operating modes	Mode structure	1-2
	Function keys	1-4
2. Parameters	Call, edit parameters	2-2
	List of user parameters	2-3
3. M functions	Description	3-2
	Description M80 – M88	3-9
4. Other functions	Auto test	4-2
	Inch measuring system	4-3
	PLC status in tool list	4-4

Parts Manual

Spare Parts Catalogue

This manual will help you to get speedy service when ordering spare and replacement parts.

 DECKEL MAHO

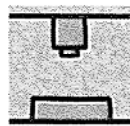

DMC 103 V

Contents

Machine	Side view	1
	Rear view	2
Covers	X-axis	2
	Y-axis	1
	Z-axis	1
Drives	X-axis	8
	Y-axis	3
	Z-axis	4
Slideways/ Measuring system	X-axis	11
	Y-axis	9
	Z-axis	5
Distributor strips	X-axis	12
	Y-axis	10
	Z-axis	6
Lubrication/ Pneumatic system	Centralized lubrication system	1
	Pneumatic system	2
	Valves	20
Cleaning	Bed rinsing and flush gun; Stripper plate X-axis	7
Vertical spindle	Lubricoolant supply	7
	Drive	13
	Spindle with collet (Workpiece mounting SK40)	14
	Lubricoolant supply through tool	15
Carrousel magazine	Side view	16
	Plan view	17
	Swivel axis, turntable bearing with toolholder	18
Coolant system	Coolant device with swarf pan	19
Workpiece mounting: BT40	Spindle with collet	21
	Carrousel magazine: Side view	22
	Carrousel magazine: Swivel axis, turntable bearing with toolholder	23
Workpiece mounting: ASME/ANSI	Spindle with collet	24
	Carrousel magazine: Side view	25
	Carrousel magazine: Swivel axis, turntable bearing with toolholder	26