


**INSTRUCTION MANUAL
SINKER EDM
MGH GENERATOR
PROGRAMMING**

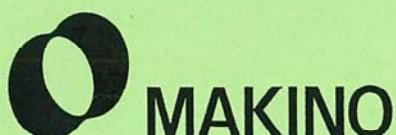

7GF1-NF02-0106(E)

CONTENTS

| | |
|--|--------------|
| 1. PREFACE | 1– 1 |
| 2. FUNDAMENTALS OF PROGRAMMING | 2– 1 |
| 2.1 PROGRAM STRUCTURE | 2– 1 |
| 2.1.1 ADDRESS WORD | 2– 3 |
| 2.1.1.1 Program No. word | 2– 3 |
| 2.1.1.2 Sequence No. word | 2– 4 |
| 2.1.1.3 Coordinate word | 2– 4 |
| 2.1.1.4 Preparatory function word | 2– 6 |
| 2.1.1.5 Feed function word | 2– 6 |
| 2.1.1.6 Spindle function word | 2– 6 |
| 2.1.1.7 Electrode function word | 2– 6 |
| 2.1.1.8 Auxiliary function word | 2– 6 |
| 2.1.1.9 Calling program number word/repeat count word | 2– 6 |
| 2.1.1.10 Offset number word | 2– 6 |
| 2.1.1.11 Machining condition word | 2– 7 |
| 2.1.2 BLOCKS | 2– 7 |
| 2.1.2.1 End of block | 2– 7 |
| 2.1.2.2 Optional block skip | 2– 8 |
| 2.1.2.3 Comment input | 2– 9 |
| 2.2 COORDINATE SYSTEM | 2– 9 |
| 2.2.1 MACHINE COORDINATE SYSTEM | 2– 10 |
| 2.2.2 WORKPIECE COORDINATE SYSTEM | 2– 11 |
| 2.2.3 LOCAL COORDINATE SYSTEM | 2– 12 |
| 2.2.4 ABSOLUTE AND INCREMENTAL COMMANDS | 2– 12 |
| 3. FUNCTION WORDS | 3– 1 |
| 3.1 G/M CODE LIST | 3– 1 |
| 3.1.1 G CODE LIST | 3– 1 |
| 3.1.2 M CODE LIST | 3– 4 |
| 3.2 COORDINATE SYSTEM COMMANDS | 3– 6 |
| 3.2.1 PLANE DESIGNATION (G17/18/19) | 3– 7 |
| 3.2.2 INHIBIT AREA SPECIFICATION (G22/23) | 3– 9 |
| 3.2.3 LOCAL COORDINATE SYSTEM SETTING (G52) | 3– 11 |
| 3.2.4 MACHINE COORDINATE SYSTEM COMMAND (G53) | 3– 13 |

| | |
|---|---------------|
| 3.2.5 WORKPIECE COORDINATE SYSTEM SELECTION (G54–61/G500–509) | 3– 15 |
| 3.2.6 WORKPIECE COORDINATE SYSTEM SETTING (G92) | 3– 18 |
| 3.3 SELECTION OF COMMAND VALUE INPUT UNIT SYSTEM | 3– 21 |
| 3.3.1 ABSOLUTE/INCREMENTAL (G90/91) | 3– 22 |
| 3.4 TRAVEL COMMANDS | 3– 24 |
| 3.4.1 LINEAR INTERPOLATION (G00/01) | 3– 25 |
| 3.4.2 CIRCULAR INTERPOLATION (G02/03) | 3– 28 |
| 3.4.3 DWELL (G04) | 3– 33 |
| 3.4.4 UNIDIRECTIONAL POSITIONING (G14) | 3– 34 |
| 3.4.5 REFERENCE POINT RETURN (G28/29) | 3– 36 |
| 3.4.6 2ND–4TH REFERENCE POINT RETURN (G30) | 3– 40 |
| 3.4.7 EXTERNAL SKIP FUNCTION (G31) | 3– 42 |
| 3.4.8 DIRECT FEED RATE INPUT (F) | 3– 44 |
| 3.5 DATA SETTING | 3– 45 |
| 3.5.1 DIRECT DATA WRITING (G10) | 3– 46 |
| 3.6 ELECTRODE COMPENSATION | 3– 55 |
| 3.6.1 SELECTION OF ELECTRODE COMPENSATION VALUE (D/H) | 3– 56 |
| 3.6.2 CHANGE OF ELECTRODE COMPENSATION VALUE (G10) | 3– 58 |
| 3.6.3 ELECTRODE DIAMETER COMPENSATION (G40/41/42) | 3– 59 |
| 3.6.4 ELECTRODE LENGTH COMPENSATION (G43/44/49) | 3– 71 |
| 3.7 SCALING (G47/48) | 3– 73 |
| 3.8 ROTATION (G68/69) | 3– 77 |
| 3.9 MIRROR IMAGE (G70/71) | 3– 79 |
| 3.10 CANNED CYCLE | 3– 81 |
| 3.10.1 PATTERN MACHINING (G74/75) | 3– 82 |
| 3.10.2 JUMP (G76/77) | 3– 86 |
| 3.10.3 MACHINING (G80/81/82/83) | 3– 96 |
| 3.10.4 POSITIONING (G84/85/86) | 3– 103 |
| 3.10.5 MACHINING START POINT/INTERRUPT POINT RETURN FUNCTION (G98/99) CONTINUOUS BLOCK (CONTOUR) MACHINING OFF/ON (G958/959) | 3– 107 |
| 3.10.6 ROTATION COPY (G26) | 3– 108 |
| 3.11 AUXILIARY (M)/SPINDLE (S)/ELECTRODE (T) FUNCTIONS | 3– 114 |

| | | |
|---------|---|--------|
| 3.11.1 | AUTOMATIC OPERATION STOP/TERMINATION (M00/01/02/03) | 3– 116 |
| 3.11.2 | TOUCH STOP DISREGARD FUNCTION (M19) | 3– 117 |
| 3.11.3 | POLARITY REVERSE FUNCTION (M24/25)..... | 3– 118 |
| 3.11.4 | DIELECTRIC FLUID SUPPLY FUNCTION (M28/29) | 3– 118 |
| 3.11.5 | MACHINING FUNCTION (M26/27) | 3– 119 |
| 3.11.6 | SUBPROGRAM FUNCTION (M98/99)..... | 3– 120 |
| 3.11.7 | ELECTRODE CHANGE FUNCTION (M06/07/08/T) | 3– 121 |
| 3.11.8 | MA/MR HEAD FUNCTION (M57/56/03/05)..... | 3– 127 |
| 3.11.9 | DH HEAD FUNCTION (M18)..... | 3– 132 |
| 3.11.10 | BLOWING FUNCTION (M09/40–49/50/72/73)..... | 3– 133 |
| 3.11.11 | TANK ELEVATING FUNCTION (M58/59) | 3– 136 |
| 3.11.12 | PALLET CHANGE FUNCTION (M60) | 3– 136 |
| 3.11.13 | SL FUNCTION (M70/71) | 3– 138 |
| 3.11.14 | ROTARY AXIS BRAKE FUNCTION (M78/79)..... | 3– 139 |
| 3.12 | MACHINING CONDITIONS (E/G10) | 3– 140 |
|) | | |
| 4. | CUSTOM MACRO | 4– 1 |
| 4.1 | General Description | 4– 1 |
| 4.1.1 | Features of custom macro | 4– 1 |
| 4.1.2 | Custom macro and run mode | 4– 2 |
| 4.2 | Subprogram | 4– 3 |
| 4.2.1 | Types of subprogram calls | 4– 3 |
| 4.2.2 | Simple call (M98/G27) | 4– 3 |
| 4.2.3 | Parameter call (G65) | 4– 5 |
| 4.2.4 | Pseudo command code call (Parameter No. 140 - 171)..... | 4– 6 |
| 4.2.5 | Nesting of subprograms | 4– 9 |
| 4.3 | Parameter and Variable Function | 4– 10 |
| 4.3.1 | Purpose of variables | 4– 10 |
| 4.3.2 | Variable accuracy and constasnt value (VARMAP) | 4– 14 |
| 4.3.3 | Characteristics of empty variables (#0) | 4– 15 |
| 4.3.4 | Parameters and local variables (#1 - #33)..... | 4– 16 |
| 4.3.5 | NC command code substitution | 4– 18 |
| 4.4 | Operation Function | 4– 19 |
| 4.5 | Judgement and Branch Functions (IF, ELSE, GOTO) | 4– 22 |
| 4.6 | Repetition Function (DOWHILE) | 4– 25 |
| 4.7 | Suppress Command of External Control Function | 4– 25 |
| 4.8 | Registration of Custom Macro | 4– 26 |
| 4.8.1 | Preparation of program tape..... | 4– 26 |
|) | | |

| | | |
|--------------|---|--------------|
| 4.8.2 | Registration of program | 4– 26 |
| 4.8.3 | Edit of program | 4– 26 |
| 4.8.4 | Custom Macro Run | 4– 27 |
| 4.9 | System Variable | 4– 28 |
| 4.9.1 | Offset (#2000-) | 4– 28 |
| 4.9.2 | Workpiece offset (#2501-) | 4– 29 |
| 4.9.3 | Electrode offset (#5501-) | 4– 30 |
| 4.9.4 | Electrode base offset (#5891-) | 4– 31 |

)

)