

YCM
VERTICAL MACHINE CENTERL
WITH FANUC 0M
ELECTRIC MANUAL
FOR SHANK 30/40 MACHINE ONLY
PLC:MLA5 R04

OPVMCE18
R004

INDEX

PAGE

1. CAUTION AND WARNING

2. PREFACE

2.1 PREFACE	1
2.2 THE CODE IDENTIFICATION OF ATC TYPE.....	2

3. ELECTRIC — SYMBOL DETAIL

4. CONNECTION BLOCK DIAGRAM

4.1 EARTHING ARRANGEMENTS	1
4.1.1 FOR V96A/V116A MACHINE.....	1
4.1.2 FOR V65A/V85A/V105A MACHINE	1.1
4.1.3 FOR V56T/FV56A MACHINE.....	1.2
4.2 CNC CONNECTION BLOCK DIAGRAM.....	2
4.3 CONNECTION DIAGRAM OF PSM,SPM AND SVM.....	3
4.4 MACHINE I/O CONNECTION BLOCK DIAGRAM.....	4

5. ELECTRIC LAYOUT

5.1 WIRING LAYOUT	1
5.1.1 THE ELECTRIC CABINET BLOCK DIAGRAM.....	1
5.1.1.1 FOR V96A/V116A MACHINE	1
5.1.1.2 FOR V65A/V85A/V105A MACHINE	1.1
5.1.1.3 THE ELECTRIC CABINET BLOCK DIAGRAM(FOR V56T/V56A MACHINE).....	1.2
5.1.1.4 THE OPERATOR CABINET BLOCK DIAGRAM.....	2
5.1.1.5 OPERATOR CABINET BLOCK DIAGRAM(FOR V56T/V56A MACHINE).....	2.1
5.2 EXTERNAL I/O PCB LAYOUT	3
5.2.1 I/O DISTRIBUTION BOARD (-262AM).....	3
5.2.2 EXTERNAL I/O PCB1(-A201)	3.1
5.2.3 EXTERNAL I/O PCB2 (-A208)	3.2
5.2.4 EXTERNAL I/O PCB3 (-A209)	3.3
5.2.5 AXIS LUBE PCB (-A212) LAYOUT.....	3.4
5.2.6 GEAR LUBE PCB (-A213) LAYOUT	3.4
5.3 MAIN OPERATOR'S PANEL	4
5.3.1 PANEL LAYOUT.....	4
5.3.1.1 16 TOOLS MACHINE	4

5.3.1.2 20 TOOLS MACHINE	4.1
5.3.1.3 24 TOOLS MACHINE	4.2
5.3.1.4 30 TOOLS MACHINE	4.3
5.3.1.5 V56T/FV56A TOOL MACHINE.....	4.4
5.4 OPERATOR CABINET LAYOUT.....	5
5.4.1.1 OPERATOR CABINET CONFIGURATION.....	5
5.4.1.2 OPERATOR CABINET CONFIGURATION	5
5.4.2 RS232C I/O CONNECTION	5.1
5.4.3 SIGNAL TOWER CONNECTION	5.1
6. WIRING	
6.1 POWER SUPPLY.....	1
6.2 CONTROL VOLTAGE 220/110 VAC	2
6.3 EMERGENCY STOP	3
6.3.1 STROKE LIMIT.....	3
6.3.2 EMERGENCY STOP BUTTON	3
6.3.3 SAFETY COMPONENT	4
6.3.3.1 EMERGENCY STOP RELAY(-A205) (NON CE MARK MACHINE)	4
6.3.3.2 SAFETY COMPONENT (OPTION) (CE MARK MACHINE).....	4
6.3.4 EMERGENCY BUTTON	4
6.4 CNC POWER ON/OFF	5
6.5 FUNCTION	6
6.6 MODE	8
6.7 FEEDRATE OVERRIDE.....	8
6.8 COOLANT	9
6.8.1 PB	9
6.8.2 COIL.....	9
6.8.3 SOLENOID AND MCC.....	10
6.8.4 MOTOR.....	10
6.9 CUTTING AIR BLAST.....	12
6.9.1 PB.....	12
6.9.2 COIL	12
6.9.3 SOLENOID.....	12

6.10 CONVEYOR	13
6.10.1 PB.....	13
6.10.2 COIL	13
6.10.3 MCC.....	14
6.10.4 MOTOR.....	14
6.11 SAFETY DOOR	15
6.11.1 PB.....	15
6.11.2 COIL	15
6.11.3 SOLENOID.....	15
6.12 MAGAZINE	16
6.12.1 PB.....	16
6.12.2 DETECTION	17
6.12.3 COIL	19
6.12.4 SOLENOID AND MCC	20
6.12.5 POT ROTATION MOTOR	21
6.12.6 MAGAZINE AND ARM MOTOR	22
6.13 EDIT LOCK.....	23
6.14 LIGHT	23
6.15 CYCLE.....	23
6.16 POWER OFF FUNCTION(OPTION).....	23
6.16.1 PB.....	23
6.16.2 CONTACT.....	23.1
6.16.3 TIMER.....	23.1
6.16.4 RELAY.....	23.1
6.17 SPINDLE	24
6.17.1 PB.....	24
6.17.2 DETECTION	25
6.17.3 COIL	26
6.17.4 SOLENOID.....	27
6.18 JOG AND AXIS STROKE LIMIT SWITCH UNIT.....	28
6.18.1 PB.....	28
6.18.2 DETECTION	30
6.18.3 COIL	30

6.18.4 SOLENOID.....	30.1
6.19 INDICATE.....	31
6.20 MPG OPERATOR'S PANEL.....	34
6.20.1 1'-MPG.....	34
6.20.2 2'-MPG(OPTION)	35
6.20.3 3'-MPG(OPTION)	36
6.21 AUTO DOOR	37
6.21.1 PB.....	37
6.21.2 DETECTION	37
6.21.3 COIL.....	37
6.21.4 SOLENOID.....	37
6.22 SIGNAL TOWER.....	38
6.22.1 COIL	38
6.22.2 LAMP	38
6.23 AXES LUBE.....	39
6.23.1 DETECTION	39
6.23.1.1 FOR V96A/V116A/116B LUBE DETECTION.....	39
6.23.1.2 FOR V65A/V85A/V105A/56T/56A LUBE DETECTION.....	39
6.23.2 COIL	39
6.23.2.1 LUBE COIL.....	39
6.23.3 MCC.....	39
6.23.3.1 LUBE RELAY(-A212)	39
6.23.4 MOTOR	39.1
6.23.4.1 FOR V96A/V116A LUBE MOTOR.....	39.1
6.23.4.2 FOR V65A/V85A LUBE MOTOR.....	39.1
6.24 SPARE M-CODE.....	40
6.24.1 DETECTION	40
6.24.2 COIL	40
6.24.3 CONTACT.....	40
6.25 OIL MATIC	41
6.25.1 DETECTION.....	41
6.25.2 MCC.....	41
6.25.3 MOTOR	41

6.26	HYDRAULIC UNIT.....	42
6.26.1	MCC.....	42
6.26.2	MOTOR.....	42
6.27	MOTOR OVERLOAD & AIR PRESSURE.....	43
6.28	MEASUREMENT.....	44
6.28.1	AUTO TOOL LENGTH MEASUREMENT.....	44
6.28.1.1	DETECTION.....	44
6.28.1.2	COIL.....	44
6.28.1.3	SOLENOID.....	44
6.28.2	WORKPIECE MEASUREMENT.....	45
6.28.3	AWPM AND ALTM INSTALLED.....	46
6.28.3.1	DETECTION.....	46
6.28.3.2	COIL.....	46
6.28.3.3	SOLENOID.....	47
6.29	JIG.....	48
6.29.1	JIG PB.....	48
6.29.1	DETECTION.....	48
6.29.3	COIL.....	49
6.29.4	SOLENOID.....	50
7.	CONNECTION PIN ASSIGNMENT	
7.1	SIGNAL I/O.....	1
7.1.1	MAIN OPERATOR'S PANEL PIN ASSIGNMENT.....	1
7.1.1.1	16-TOOLS MACHINE.....	1
7.1.1.2	20-TOOLS MACHINE.....	2
7.1.1.3	24-TOOLS MACHINE.....	3
7.1.1.4	30-TOOLS MACHINE.....	3.1
7.1.1.5	56T/56A MACHINE.....	3.2
7.1.1.6	MAGAZINE PANEL LAYOUT.....	3.3
7.1.2	CNC I/O <—>I/O DISTRIBUTION BOARD(M01).....	4
7.1.3	CNC I/O <—>I/O DISTRIBUTION BOARD(M02).....	5
7.1.4	CNC I/O <—>MAIN OPERATORS PANEL(M18).....	6
7.1.5	CNC I/O <—>I/O DISTRIBUTION BOARD(M19).....	7
7.1.6	CNC I/O <—>I/O DISTRIBUTION BOARD(M20).....	8
7.1.7	MAIN OPERATOR'S PANEL <—>CNC I/O PCB (P11).....	9

7.1.8	MAIN OPERATOR'S PANEL <—>CNC I/O PCB (P12)	10
7.1.9	I/O DISTRIBUTION BOARD <—>AXIS LIMIT SWITCH	11
7.1.9.1	P13X	11
7.1.9.2	P13Y	11
7.1.9.3	P13Z	11
7.1.10	I/O DISTRIBUTION BOARD <—>TOOL NUMBER DISPLAY(P14)	12
7.1.11	I/O DISTRIBUTION BOARD <—>EXTERNAL I/O PCB 1(P15)	13
7.1.12	I/O DISTRIBUTION BOARD <—>EXTERNAL I/O PCB 2(P16)	14
7.1.13	I/O DISTRIBUTION BOARD <—>MPG(P17)	15
7.1.14	I/O DISTRIBUTION BOARD <—>EXTERNAL I/O PCB3(P18)	16
7.1.15	I/O DISTRIBUTION BOARD <—>EXTERNAL SIGNAL(P20)	17
7.1.16	I/O DISTRIBUTION BOARD <—>EXTERNAL SIGNAL(P19)	18
7.2	MANUAL PULSE GENERATOR (MPG)	19
7.2.1	1'-MPG <-->MPG TERMINAL(M12)	19
7.2.2	2'-MPG 3'-MPG(OPTION)<-->MPG TERMINAL(M21)	20
7.3	AXIS SERVO MOTOR	21
7.3.1	FEEDBACK CONTROL (M185,M188,M195<—>MOTOR)	21
7.3.2	VELOCITY CONTROL (M184,M187,M194<—>AMP)	22
7.4	SPINDLE	23
7.4.1	SPEED CONTROL (JY2)	23
7.4.2	EXTERNAL POSITION CODER(JY4)	23
7.4.3	MAGNETIC SENSOR(JY3)	23
7.5	OPTICAL I/O LINK ADAPTOR <—>SPM (JA7A)	24
7.6	DATA INPUT / OUTPUT	25
7.6.1	RS232C (M05)	25
7.7	TERMINAL I/O PCB CONNECTOR PIN ASSIGNMENT	26
7.7.1	CONNECTOR (X2) <—>M.S PLATE TERMINAL BLOCKS	26
7.7.2	CONNECTOR (X3) <—>HEAD TERMINAL BLOCKS	26
7.7.3	CONNECTOR (X4) <—>MAGAZINE TERMINAL BLOCKS	26
7.7.4	CONNECTOR (X5) <—>MAGAZINE TERMINAL BLOCKS	27
7.7.5	CONNECTOR (X6) <—>HEAD TERMINAL BLOCKS	27
7.7.6	CONNECTOR (X7) <—>M.S PLATE TERMINAL BLOCKS	27
7.7.7	CONNECTOR (X11) <—>M.S PLATE TERMINAL BLOCKS	28

7.7.8 CONNECTOR (X12) <—>MAGAZINE TERMINAL BLOCKS	28
8. PLC	
8.1 TITLE.....	1
8.2 CROSS REFERENCE	1
8.3 LADDER.....	1
9. OPERATION ASSIGNMENT	
9.1 PLC DATA	1
9.1.1 TIMER SETTING	1
9.1.2 KEEP RELAY SETTING	2
9.1.3 TOOL SETTING	8
9.1.4 ATC TYPE SETTING	8
9.2 MISCELLANEOUS FUNCTION (M FUNCTION)	9
10. TROUBLE SHOOTING	
10.1 ENGLISH CONTENT.....	1
10.1.1 NOT READY.....	1
10.1.2 NC ALARM.....	2
10.1.3 EXTERNAL ALARM MESSAGE.....	3
ALM1001 DOOR NEED CLOSE.....	3
ALM1002 ZERO RETURN MISSED	3
ALM1003 SPINDLE MOTOR ALARM	4
ALM1004 SP GEAR SHIFT ALARM.....	5
ALM1005 ATC NOT READY	6
ALM1007 TF = 0 COMMAND ERROR	7
ALM1008 TF OVER COMMAND ERROR	7
ALM1011 MAG(D430)ERROR.....	8
ALM1012 POT (D432) ERROR.....	8
ALM1014 SP.ORI ALARM.....	9
ALM1015 MOTOR OVERLOAD	10
ALM1016 SP TOOL (D440) ERROR	11
ALM1019 M6 AXIS MISSED.....	12
ALM1020 OIL MATIC FAILED.....	13
ALM1021 TOOL MEASURE ALARM	13
ALM1022 TOOL LIFE EXHAUST.....	14
ALM1023 MAG NOT INPOSITION	14
ALM1024 ATC CYCLE FAILED	14.1
ALM1026 JIG NEED CLAMP	14.2

ALM1027	AIR PRESSURE FAILED.....	15
ALM1028	ATC TYPE ERROR.....	15.1
ALM1029	SP TOOL CLAMPING FAILED	16
ALM1031	TOOL SEACH FAILED.....	16.1
ALM1032	AUTO DOOR FAILED.....	17
10.1.4	EXTERNAL OPERATOR MESSAGE.....	18
2000	AXIS INTERLOCK.....	18
2002	GEAR MISSED	19
2003	LUBE ERROR.....	19
2005	T-INTERRUPT.....	19.1
10.1.5	MACRO PROGRAM.....	20
10.1.5.1	MACRO PROGRAM.....	20
10.1.5.1.1	ATC MACRO PROGRAM OF 20-TOOLS MACHINE.....	20
10.1.5.1.2	THE MACRO PROGRAM OF AUTOMATICAL TOOL LENGTH MEASUREMENT	20.1
10.1.5.2	MACRO PARAMETER SETTING.....	21
10.1.5.3	MACRO ALARM MESSAGE.....	22
10.1.5.3.1	ALARM : "505 ATLM TOOL DIAMETER ERROR"	22
10.1.5.3.2	ALARM : "506 ATLM TOOL OFFSET NO ERROR".....	23
10.1.5.3.3	ALARM : "507 ATLM OFFSET LEVEL ERROR"	24
10.1.5.3.4	ALARM : "520 ATC POSITION 2 ERROR".....	24.1
10.1.5.3.5	ALARM : "521 ATC POSITION 1 ERROR".....	24.2
10.1.5.3.6	ALARM : "522 T/M6 ERROR"	24.3
10.2	中文解說(FOR CHINESE)	25
10.2.1	NOT READY 準備不足.....	25
10.2.2	NC ALARM NC 報警	26
10.2.3	EXTERNAL ALARM MESSAGE 外部報警訊息.....	27
ALM1001	DOOR NEED CLOSE 門未關妥.....	27
ALM1002	ZERO RETURN MISSED 各軸原點復歸未完成.....	27
ALM1003	SPINDLE MOTOR ALARM 主軸馬達報警.....	28
ALM1004	SP GEAR SHIFT ALARM 主軸換檔報警.....	29
ALM1005	ATC NOT READY ATC 沒備妥.....	30
ALM1007	TF = 0 COMMAND ERROR TF 小於等於 0 指令錯誤	31
ALM1008	TF OVER COMMAND ERROR TF 指令太大錯誤	31
ALM1011	MAG(D430)ERROR 總刀號設定錯誤.....	32
ALM1012	POT (D432) ERROR 刀杯刀號錯誤.....	32
ALM1014	SP.ORI ALARM 主軸定角度報警.....	33
ALM1015	MOTOR OVERLOAD 馬達過載報警	34

ALM1016	SP TOOL (D440) ERROR 主軸刀號錯誤.....	35
ALM1019	M6 MISSED M6 換刀軸向未達定位.....	36
ALM1020	OIL MATIC FAILED 油溫冷卻器故障.....	37
ALM1021	TOOL MEASURE ALARM 刀長量測報警.....	37
ALM1022	TOOL LIFE EXHAUST 刀具壽命終了.....	38
ALM1023	MAG NOT INPOSITION 刀庫未定位.....	38
ALM1024	ATC CYCLE FAILED 換刀流程失敗.....	39
ALM1026	JIG NEED CLAMP 治具需夾緊.....	39.1
ALM1027	AIR PRESSURE FAILED 空壓不足.....	40
ALM1028	ATC TYPE ERROR 換刀機構設定錯誤.....	41
ALM1029	SP TOOL CLAMPING FAILED 主軸夾刀失敗.....	42
ALM1031	TOOL SEACH FAILED 找刀失敗.....	43
ALM1032	AUTO DOOR FAILED 自動門動作失誤.....	44
10.2.4	EXTERNAL OPERATOR MESSAGE 外部操作訊息.....	45
2000	AXIS INTERLOCK 軸向互鎖.....	45
2002	GEAR MISSED 檔位迷失.....	46
2003	LUBE ERROR 潤滑單元異常.....	46
2005	T-INTERRUPT 找刀中斷.....	47
10.2.5	MACRO PROGRAM 巨集程式.....	48
10.2.5.1	MACRO PROGRAM 巨集程式.....	48
10.2.5.1.1	ATC MACRO PROGRAM OF 20-TOOLS MACHINE 20T 自動換刀程式.....	48
10.2.5.1.2	THE MACRO PROGRAM OF AUTOMATICAL TOOL LENGTH MEASUREMENT 自動刀長量測程式.....	48.1
10.2.5.2	MACRO PARAMETER SETTING 巨集程式設定.....	49
10.2.5.3	MACRO ALARM MESSAGE 巨集程式報警訊息.....	50
10.2.5.3.1	ALARM : "505 ATLM TOOL DIAMETER ERROR" 自動刀長測刀徑錯誤.....	50
10.2.5.3.2	ALARM : "506 ATLM TOOL OFFSET NO ERROR" 自動刀長測刀具補正號錯誤.....	51
10.2.5.3.3	ALARM : "507 ATLM OFFSET LEVEL ERROR" 自動刀長測偏位值錯誤.....	52
10.2.5.3.4	ALARM : "520 ATC POSITION 2 ERROR" 自動換刀位置 2 錯誤.....	53
10.2.5.3.5	ALARM : "521 ATC POSITION 1 ERROR" 自動換刀位置 1 錯誤.....	54
10.2.5.3.6	ALARM : "522 T/M6 ERROR" T/M6 錯誤.....	55

A. APPENDIX

A.1 THE FLOW CHART OF SAFETY DOOR FUNCTIONA-1

A.2 THE SERVICE M-CODE OF ATC STEP BY STEPA-4