

Programming Manual

**TruPunch 5000, TruPunch 3000,
TruPunch 1000**

TRUMPF



Programming manual

**TruPunch 5000, TruPunch 3000,
TruPunch 1000**

Edition **2006-10**

Table Of Contents

Chapter 1 Master File / NC Programming

1.	Program structure (master file)	1-3
2.	Characteristic file	1-4
2.1	Table block.....	1-4
	Number of characteristic description blocks.....	1-4
	Characteristic description blocks:.....	1-4
	Number of characteristic data blocks	1-6
	Characteristic data block	1-6
	Characteristic file syntax.....	1-7
3.	NC code	1-30
3.1	Language elements of the programming language	1-31
3.2	Block number (N address).....	1-33
3.3	Selective block suppression	1-34
3.4	Programming messages.....	1-34
3.5	Comments.....	1-35
4.	Subroutine technique	1-36
4.1	Subroutine structure	1-36
4.2	Calling up subroutines	1-37
4.3	Repeating a subroutine.....	1-39
4.4	Nesting a subroutine	1-40

Chapter 2 Overview of all NC Functions

1.	G-functions	2-2
2.	M functions	2-3
3.	Cycles for punching	2-4
4.	Tool cycles	2-5
5.	Sheet handling cycles	2-6

Chapter 3 Path Information / Feed

1.	Path information	3-2
1.1	X word	3-2
1.2	Y word	3-2
1.3	C word	3-3
2.	Feed	3-5
2.1	F word	3-5



Chapter 4 G Functions / Path Conditions

1.	Linear interpolation	4-3
1.1	G00	4-3
1.2	G01	4-4
2.	Circular interpolation	4-6
2.1	G02	4-6
2.2	G03	4-6
2.3	I and J, interpolation parameters	4-7
2.4	CR, radius programming.....	4-7
3.	Programmable dwell time, G04	4-12
4.	Acceleration programming, TC_POS_ACCEL	4-13
4.1	Acceleration tables for TruPunch 5000	4-14
	Acceleration table (Y=1300) with RTC cartridges	4-14
	Acceleration table (Y=1300) with metal cartridges	4-15
	Acceleration table (Y=1600) with RTC cartridges	4-16
	Acceleration table (Y=1600) with metal cartridges	4-16
4.2	Acceleration table for TruPunch 3000	4-17
4.3	Acceleration table for TruPunch 1000	4-18
5.	Programmable zero point offset	4-19
5.1	TRANS.....	4-19
5.2	ATRANS	4-20

6.	Units of measurement	4-23
6.1	G70	4-23
6.2	G71	4-24
7.	Absolute/relative dimensions	4-26
7.1	G90	4-26
7.2	G91	4-26
7.3	AC data	4-27
7.4	IC data	4-28
8.	Dimensions for rotational axes	4-30
8.1	DC data	4-30
8.2	ACP data.....	4-32
8.3	ACN data	4-33

Chapter 5 M Functions

1.	Programmed stop	5-2
1.1	M00	5-2
1.2	M01	5-3
2.	Program end	5-4
2.1	M02	5-4
2.2	M30	5-4
2.3	M17	5-5



Chapter 6 Punching Cycles

1.	Synchronizing C axes	6-3
1.1	TRAILON	6-3
1.2	TRAILOF	6-4
2.	Punching.....	6-5
2.1	PUNCH_ON	6-5
2.2	PUNCH_OFF	6-8
3.	Nibbling.....	6-9
3.1	NIBBLE_ON	6-9
3.2	NIBBLE_OFF	6-9
4.	Path subdivision	6-10
4.1	SPP	6-10
4.2	SPN	6-10
5.	Punching with delay	6-14
5.1	PDELAY_ON	6-14
5.2	PDELAY_OFF	6-14
6.	Presser foot punching.....	6-16
6.1	PRESSERFOOT_ON	6-16
6.2	PRESSERFOOT_OFF	6-16
7.	Softpunch (optional).....	6-18
7.1	TC_SOFTPUNCH_ON	6-18
7.2	TC_SOFTPUNCH_OFF	6-19
8.	Chip vacuum system.....	6-20
8.1	TC_SUCTION_ON	6-20
8.2	TC_SUCTION_OFF	6-20

9.	Tapping (option)	6-22
9.1	TC_TAP_ON.....	6-22
9.2	TC_TAP_OFF.....	6-24
10.	Marking (optional)	6-26
10.1	TC_MARK_ON	6-26
10.2	TC_MARK_OFF	6-27
11.	Slotting (optional)	6-29
11.1	TC_DEEP_PUNCH	6-29
12.	Quick beading (optional)	6-31
12.1	TC_BEAD_ON.....	6-31
12.2	TC_BEAD_OFF	6-32
13.	TRUMPF Multibend (optional)	6-34
13.1	TC_BEND_ON.....	6-34
13.2	TC_BEND_OFF	6-36
14.	TRUMPF Multishear (optional)	6-37
14.1	TC_MULTISHEAR_ON	6-37
14.2	TC_MULTISHEAR_OFF.....	6-39
15.	TRUMPF roller tools (optional)	6-41
15.1	TC_WHEEL_ON.....	6-41
15.2	TC_WHEEL_OFF	6-43
16.	TRUMPF calibration tool (optional)	6-45
16.1	TC_SHEET_CALIB.....	6-45

Chapter 7 Tool Cycles

1.	Tool lubrication	7-2
1.1	TC_TOOL_LUBE_ON	7-2
1.2	TC_TOOL_LUBE_OFF	7-3
2.	Die spray lubrication (optional)	7-4
2.1	TC_SHEET_LUBE_ON	7-4
2.2	TC_SHEET_LUBE_OFF	7-5
3.	Tangential application	7-6
3.1	TC_TANGTOOL_ON.....	7-6
3.2	TC_TANGOOL_OFF	7-7
4.	Tool technology	7-8
4.1	TC_CLAMP_CYC	7-8
4.2	TC_TOOL_TECH	7-8
4.3	TC_TOOL_POSITION	7-12
5.	Tool change	7-15
5.1	TC_TOOL_NO	7-15
5.2	TC_TOOL_CHANGE	7-15

Chapter 8 Sheet Handling Cycles

	Definition.....	8-3
1.	Sheet technology.....	8-4
1.1	TC_SHEET_TECH	8-4
2.	Loading a sheet	8-6
2.1	TC_SHEET_LOAD	8-6
2.2	TC_PREPARE_SHEET_LOAD (TruPunch 5000, TruPunch 3000).....	8-10
3.	Unloading a sheet.....	8-12
3.1	TC_SHEET_UNLOAD	8-12
3.2	TC_PREPARE_SHEET_UNLOAD (TruPunch 5000, TruPunch 3000).....	8-20
4.	Workpiece removal.....	8-21
4.1	TC_PART_UNLOAD (TruPunch 5000, TruPunch 3000).....	8-21
4.2	TC_PART_UNLOAD (TruPunch 1000).....	8-27
4.3	TC_PREPARE_PART_UNLOAD (TruPunch 5000, TruPunch 3000).....	8-31
5.	Repositioning.....	8-33
5.1	TC_SHEET_REPOSIT	8-33

Chapter 9 Jump Programming

	Definition.....	9-2
1.	LABEL (jump destination).....	9-3
2.	GOTOF (jump instruction)	9-4
3.	GOTOB jump instruction	9-5